



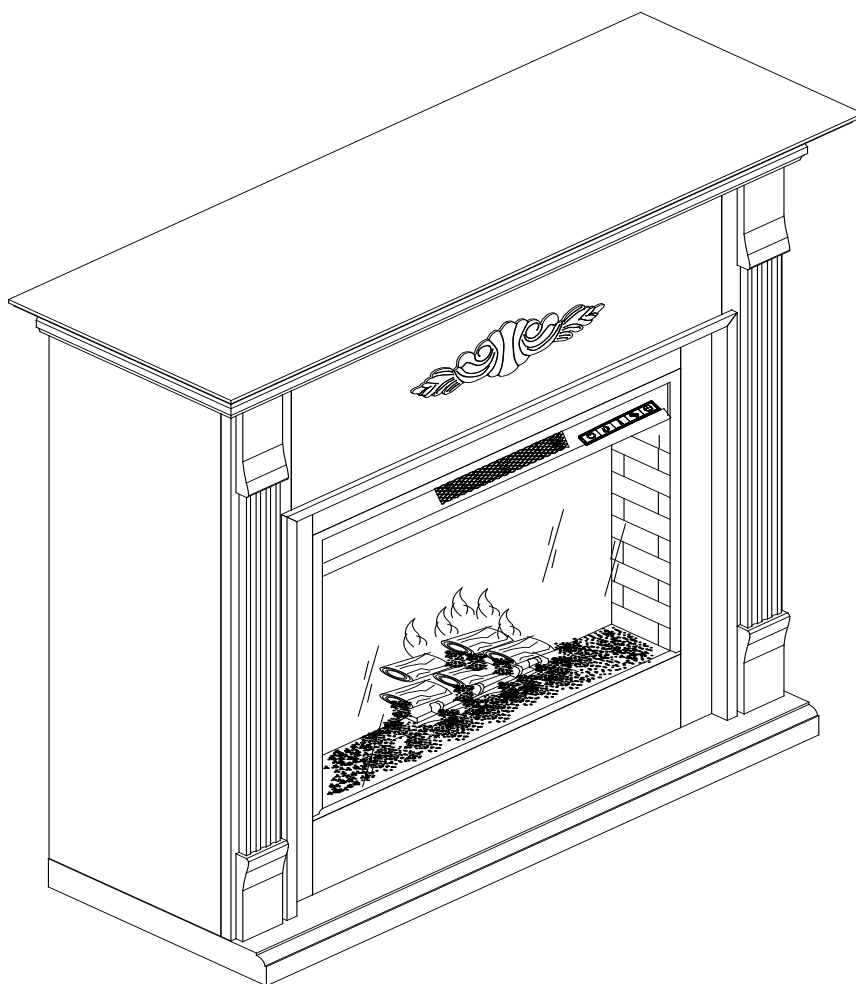 
**WARNING: To avoid serious personal injury:**

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

**FA8543A0TX- Glazed Pine**  
**FA8544A0TX- Ivory**  
**FA8546A0TX- Plantation Oak**  
**FA8547A0TX- Classic Mahogany**

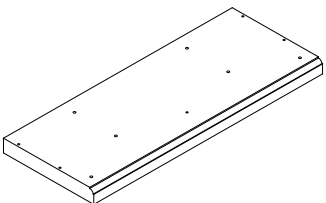 
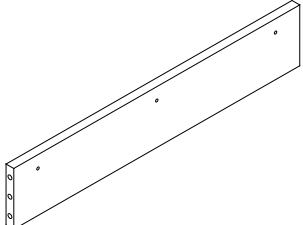 
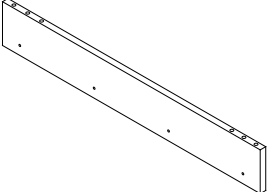 
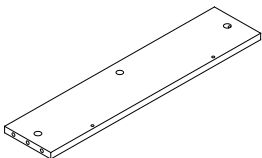 
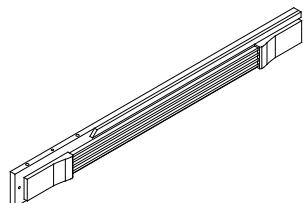 
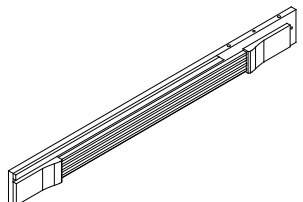 
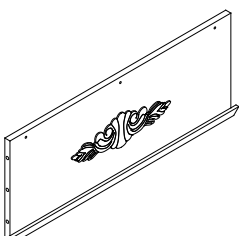 
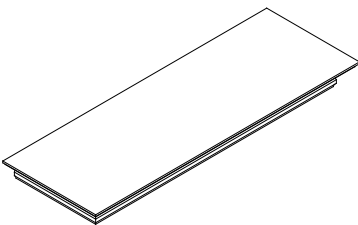 
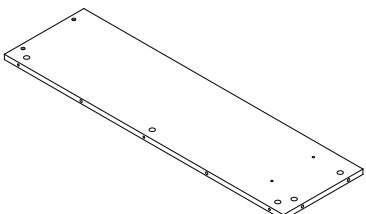 
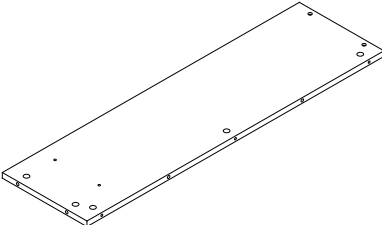 
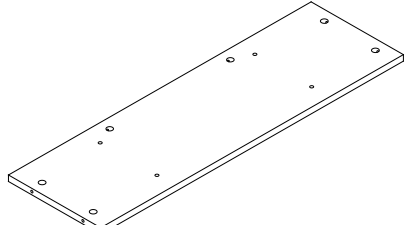 
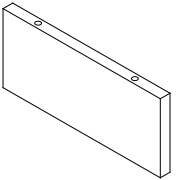 
**"Tennyson" Fireplace  
Assembly Instructions**

 
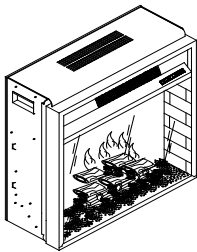 
 

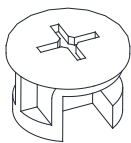 
 

 
 
 


PO#:



# "Tennyson" Fireplace Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

<p>(1) Quantity Of 1</p>  <p>Base</p>	<p>(2) Quantity Of 1</p>  <p>Upper Front Panel</p>	<p>(3) Quantity Of 2</p>  <p>Vertical Panel</p>
<p>(4) Quantity Of 1</p>  <p>Cross Panel</p>	<p>(5) Quantity Of 1</p>  <p>Left Front Panel</p>	<p>(6) Quantity Of 1</p>  <p>Right Front Panel</p>
<p>(7) Quantity Of 1</p>  <p>Middle Front Panel</p>	<p>(8) Quantity Of 1</p>  <p>Top Panel</p>	<p>(9) Quantity Of 1</p>  <p>Left Side Panel</p>
<p>(10) Quantity Of 1</p>  <p>Right Side Panel</p>	<p>(11) Quantity Of 1</p>  <p>Fixed Shelf</p>	<p>(12) Quantity Of 2</p>  <p>Middle Panel</p>

 
<p>(13) Quantity Of 2</p>  <p>Wood Block</p>	<p>(14) Quantity Of 1</p>  <p>Firebox (in separate carton)</p>	
<p>A Quantity Of 26</p>  <p>Wood Dowel Dia 5/16" x 1-1/4"L</p>	<p>B Quantity Of 23</p>  <p>Cam Bolt</p>	<p>C Quantity Of 23</p>  <p>Cam Lock</p>
<p>D Quantity Of 24</p>  <p>Screw Dia1/ 8" x 1"L</p>	<p>E Quantity Of 4</p>  <p>Screw Dia1/8"x5/8"L</p>	<p>F Quantity Of 4</p>  <p>Bracket</p>
<p>G Quantity Of 4</p>  <p>Anchor</p>	<p>H Quantity Of 4</p>  <p>Screw Dia1/8"x1-1/2"L</p>	<p>I Quantity Of 2</p>  <p>Plastic Strap</p>
<p>J Quantity Of 4</p>  <p>Small Wood Dowel Dia 5/16"x 3/4"L</p>		

### Care and Cleaning Instructions:

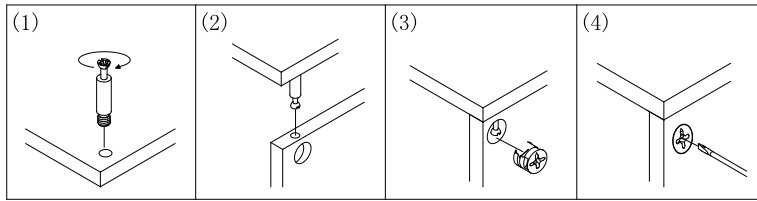 
Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

For replacement parts or questions, please call Customer Service at 1-800-633-5096.

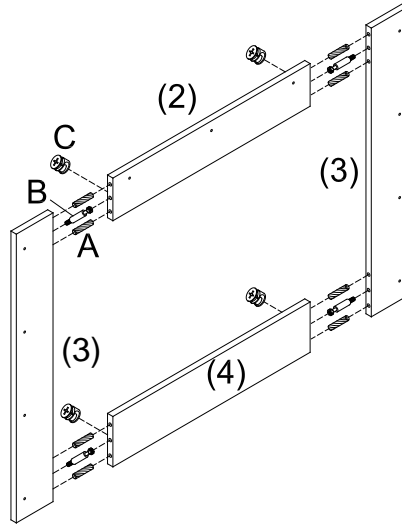 
**Assembly Tool Required**  
**No.2 Phillips Screwdriver**  
**(Not Included)**



# "Tennyson" Fireplace Assembly Instructions



"Please do not over tighten cambolts. Please stop when you feel tight"



Start tightening Cam Bolts with fingers to help align.

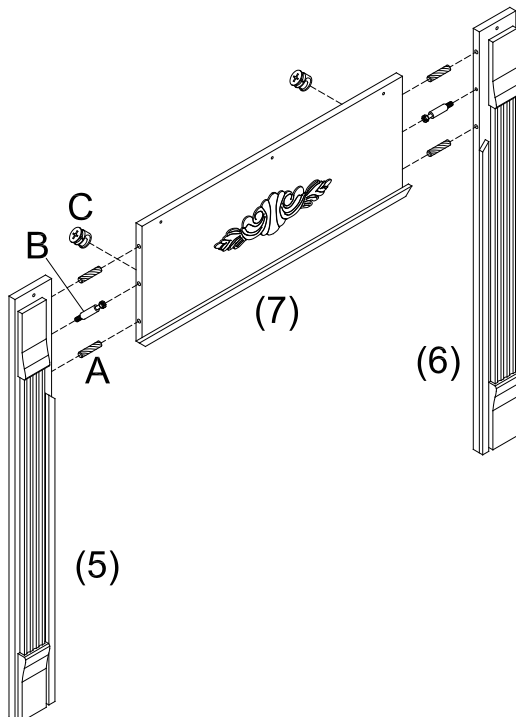 
Insert Cam Locks (C) into holes on Cross Panel (4) and Upper Front Panel (2).

Screw Cam Bolts (B) and insert Wood Dowels (A) into holes on Vertical Panels (3).

Attach Vertical Panels (3) to Cross Panel (4) and Upper Front Panel (2) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Vertical Panel (3), Cross Panel (4) and Upper Front Panel (2) meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Figure 1



Start tightening Cam Bolts with fingers to help align.

Insert Cam Locks (C) into holes on Middle Front Panel (7).

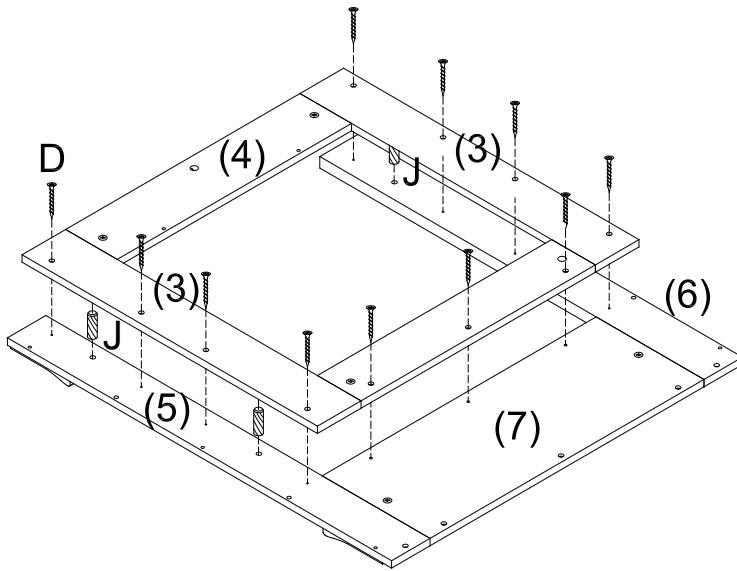 
Screw Cam Bolts (B) and insert Wood Dowels (A) into holes on Left Front Panel (5) and Right Front Panel (6).

Attach Left Front Panel (5) and Right Front Panel (6) to Middle Front Panel (7) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Left Front Panel (5), Right Front Panel (6) and Middle Front Panel (7) meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

# "Tennyson" Fireplace

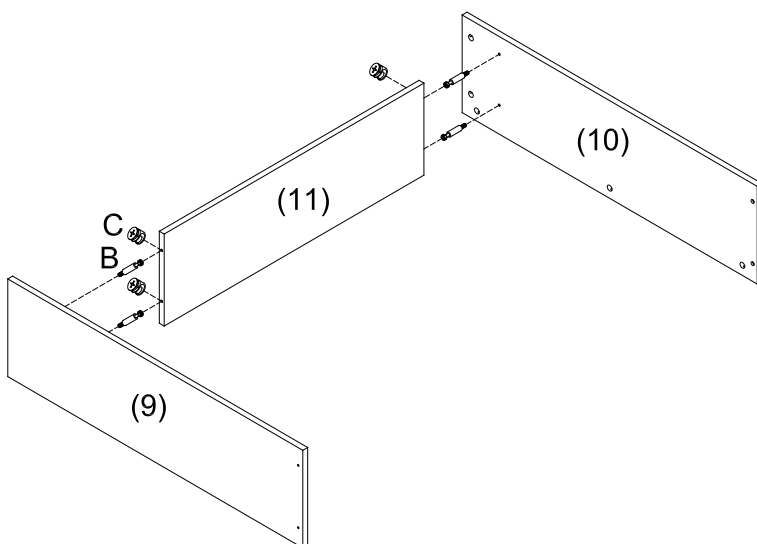 
## Assembly Instructions



Connect assembled unit on figure 1 to assembled unit on figure 2 with Screws (4) and Small Wood Dowels (J)

Tighten Screws (D) with Phillips screwdriver.

Figure 3



Start tightening Cam Bolts with fingers to help align.

Insert Cam Locks (C) into holes on Fixed Shelf (11).

Screw Cam Bolts (B) into holes on Left Side Panel (9) and Right Side Panel (10).

Attach Left Side Panel (9) and Right Side Panel (10) to Fixed Shelf (11) by inserting Cam Bolts (B) into corresponding holes until Left Side Panel (9), Right Side Panel (10) and Fixed Shelf (11) meet.

Tighten by rotating Cam Locks (C) clockwise with Phillip screwdriver.

Figure 4

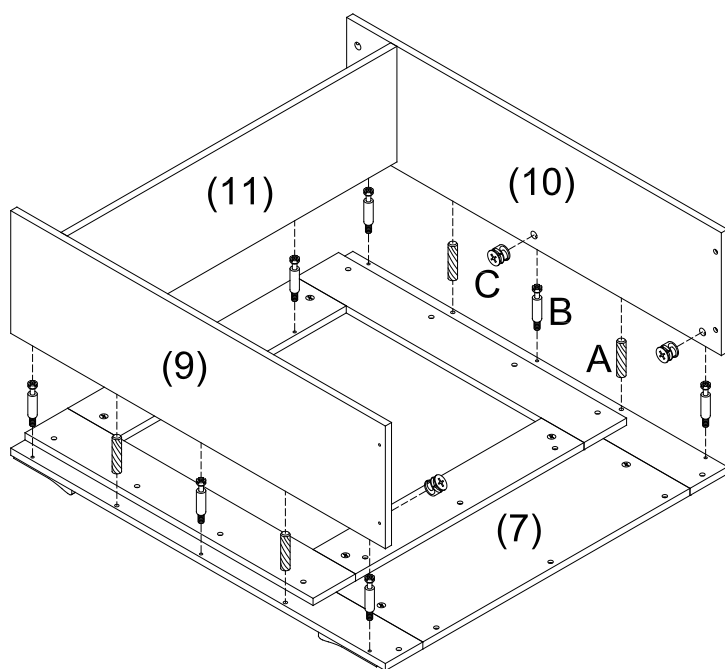 


Figure 5

Start tightening Cam Bolts with fingers to help align.

Insert Cam Locks (C) into holes on Left Side Panel (9), Right Side Panel (10), and Fixed Shelf (11).

Screw Cam Bolts (B) and insert Wood Dowels (A) into holes on assembled unit on figure 3.

Attach Left Side Panel (9), Right Side Panel (10), and Fixed Shelf (11) to assembled unit on figure 3 by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Left Side Panel (9), Right Side Panel (10), Fixed Shelf (11), and assembled unit on figure 3 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

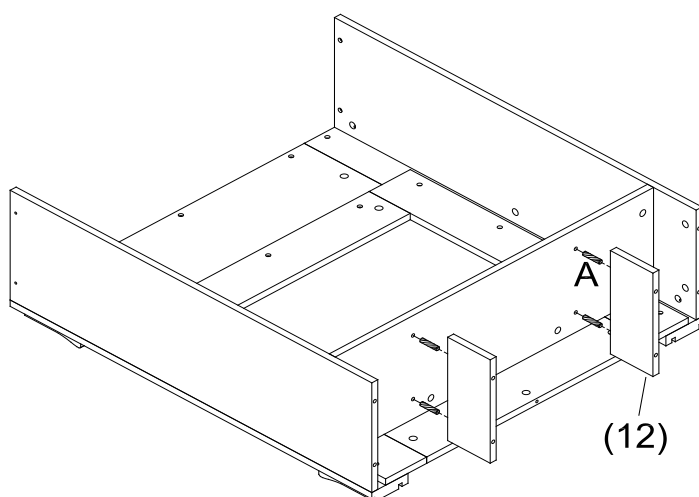 


Figure 6

Attach Middle Panel (12) to assembled unit on figure 5 by Inserting Wood Dowels (A) into corresponding holes until Middle Panel (12) and assembled unit meet.

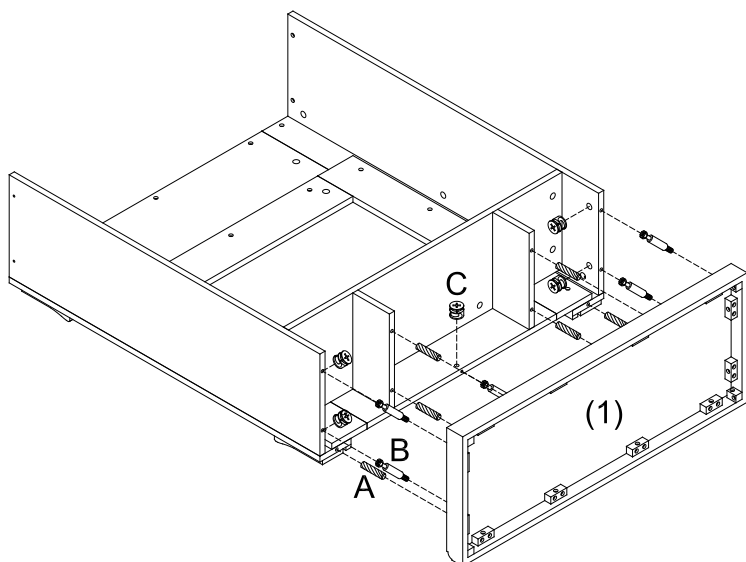 


Figure 7

Start tightening Cam Bolts with fingers to help align.

Insert Cam Locks (C) into holes on assembled unit on figure 6.

Screw Cam Bolts (B) into holes on Base (1).

Attach assembled unit on figure 6 to Base (1) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Base (1) and assembled unit on figure 6 meet.

Tighten by rotating cam locks (C) clockwise with Phillips screwdriver.

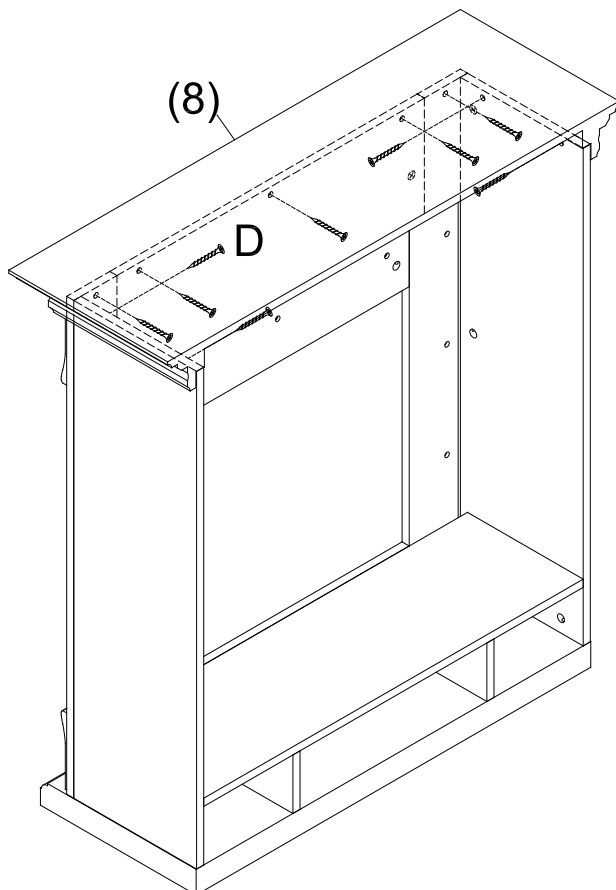 


Figure 8

Start tightening Screws (D) with fingers to help align.

Connect Top Panel (8) to assembled unit on figure 7 with Screws (D)

Tighten Screws (D) with Phillips screwdriver.



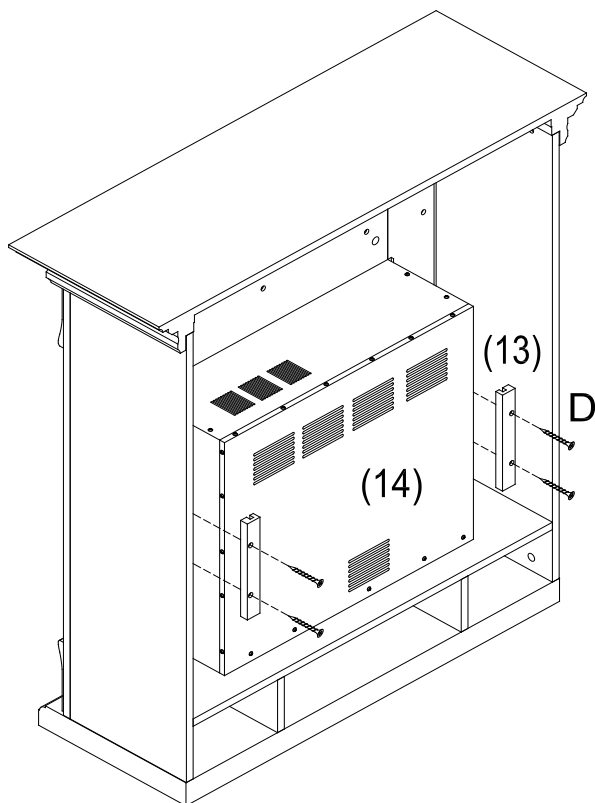 


Figure 9

Start tightening Screws with fingers to help align.

Insert Firebox (14) into the back of the unit.

Use Screws (D) to connect Wood Block (13) to assembled unit on figure 8.

Tighten Screws (D) with Phillips screwdriver.

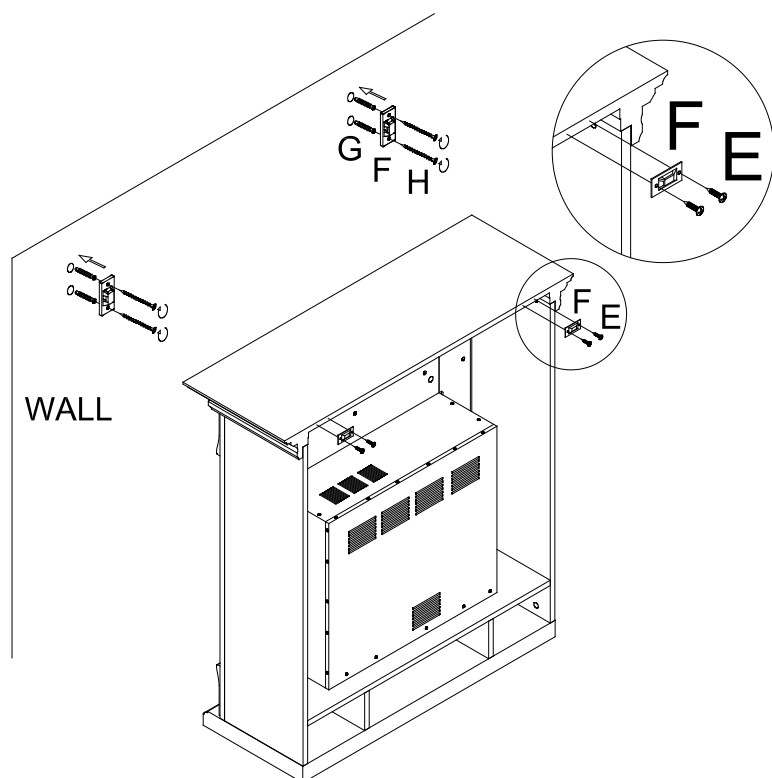 


Figure 10

Start tightening Screws (D) with fingers to help align.

Attach Brackets (F) to the back of the Top Panel (8) with Screws (E).

Tighten Screws (E) using Phillips screwdriver.

Mark two desired locations on the wall and drill two 3/16" holes.

Insert Anchors (G) into the two holes on wall as shown. Use a hammer to insert the Plastic Anchors until they are flush with the wall.

Then, attach the Brackets (F) onto the wall using Screws (H).

Tighten Screws (H) using Phillips screwdriver.

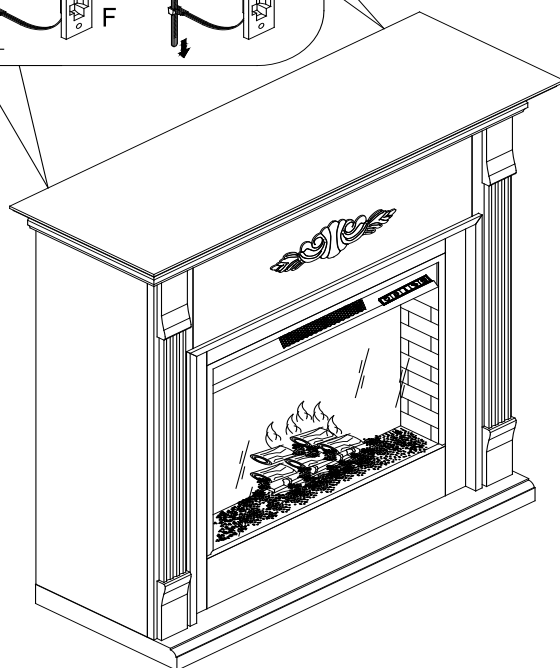 
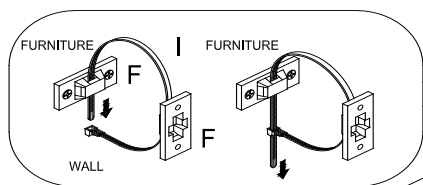 


Figure 11

Move this item close to the Wall Brackets (F) and tie in all Brackets (F) together with Plastic Strap (I) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

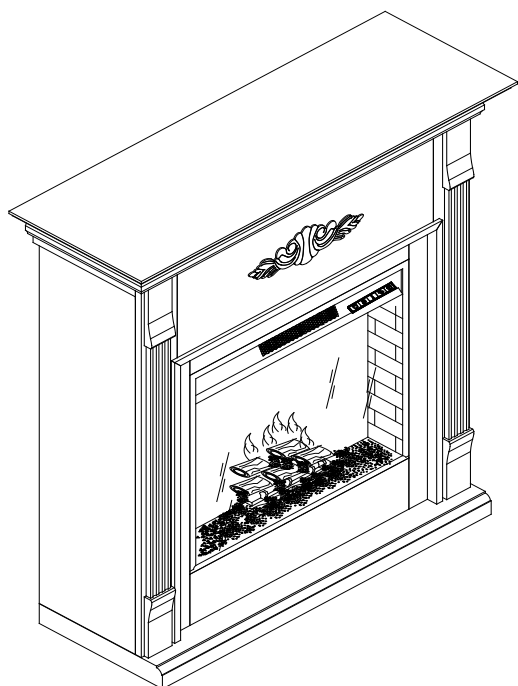 


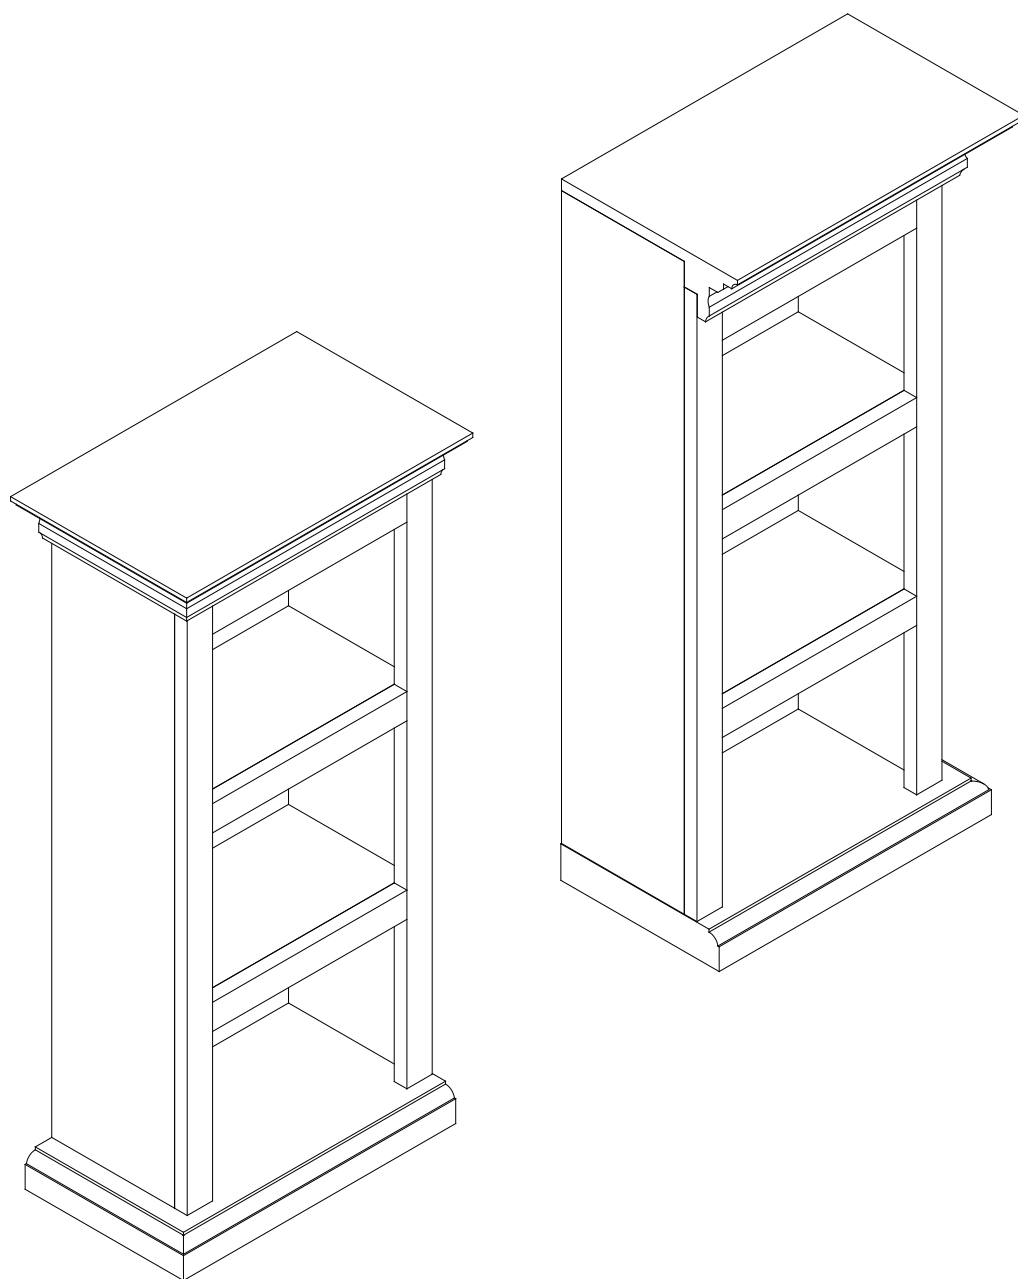 
Figure 12

Now your new Tennyson bookcase fireplace is ready to use.

**FA8543B0TX- Glazed Pine**  
**FA8544B0TX- Ivory**  
**FA8546B0TX- Plantation Oak**  
**FA8547B0TX- Classic Mahogany**

**"Tennyson" Pair of Bookcases**  
**Assembly Instructions**

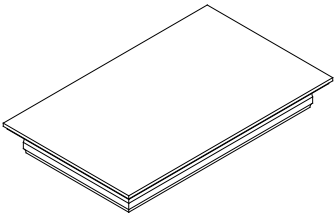 
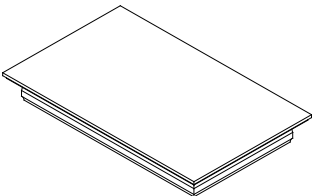 
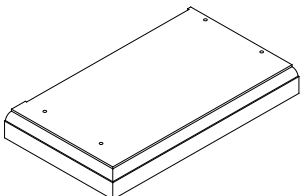 
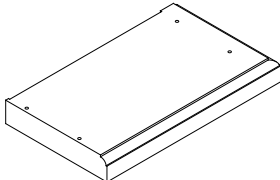 
 
 


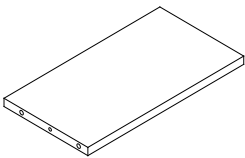 
 
 
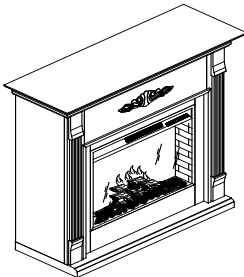 
PO#:

 

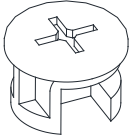 
 

 
 
 
 


 


# "Tennyson" Pair of Bookcases

## Parts List

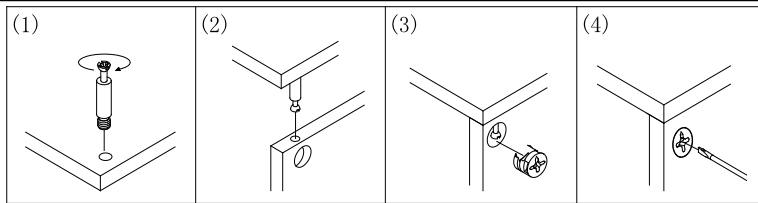 
Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures.

<p>(1) Quantity Of 1</p>  <p>Left Bookcase Top</p>	<p>(2) Quantity Of 1</p>  <p>Right Bookcase Top</p>	<p>(3) Quantity Of 1</p>  <p>Left Bookcase Base</p>
<p>(4) Quantity Of 1</p>  <p>Right Bookcase Base</p>	<p>(5) Quantity Of 1</p>  <p>Left Side Of Left Bookcase</p>	<p>(6) Quantity Of 1</p>  <p>Right Side Of Left Bookcase</p>
<p>(7) Quantity Of 1</p>  <p>Left Side Of Right Bookcase</p>	<p>(8) Quantity Of 1</p>  <p>Right Side Of Right Bookcase</p>	<p>(9) Quantity Of 4</p>  <p>Fixed Shelf</p>
<p>(10) Quantity Of 2</p>  <p>Back Panel</p>	<p>(11) Quantity Of 2</p>  <p>Front Frame</p>	<p>Quantity Of 1</p>  <p>FA8543A0TX</p>

<p>A</p> <p>Quantity Of 24</p>  <p>Wood Dowel      Dia 8 x 30mm</p>	<p>B</p> <p>Quantity Of 32</p>  <p>Cam Bolt</p>	<p>C</p> <p>Quantity Of 32</p>  <p>Cam Lock</p>
<p>D</p> <p>Quantity Of 20</p>  <p>Plastic Cover</p>	<p>E</p> <p>Quantity Of 32</p>  <p>Screw      Dia 1/8" x 1/2"L</p>	<p>F</p> <p>Quantity Of 8</p>  <p>Screw      Dia 1/8" x 1"L</p>
<p>G</p> <p>Quantity Of 4</p>  <p>Bracket</p>	<p>H</p> <p>Quantity Of 4</p>  <p>Anchor</p>	<p>I</p> <p>Quantity Of 4</p>  <p>Screw      Dia 1/8"x1-1/2"L</p>
<p>J</p> <p>Quantity Of 4</p>  <p>Screw      Dia 1/8"x5/8"L</p>	<p>K</p> <p>Quantity Of 2</p>  <p>Plastic Strap</p>	
<p><b>Care and Cleaning Instructions:</b> Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>		<p>For replacement parts or questions, please call Customer Service at 1-800-633-5096.</p>
<p><b>Assembly Tool Required</b> <b>No.2 Phillips Screwdriver</b> <b>(Not Included)</b></p>		

# "Tennyson" Pair of Bookcases

## Assembly Instructions



"Please do not over tighten cambolts. Please stop when you feel tight"

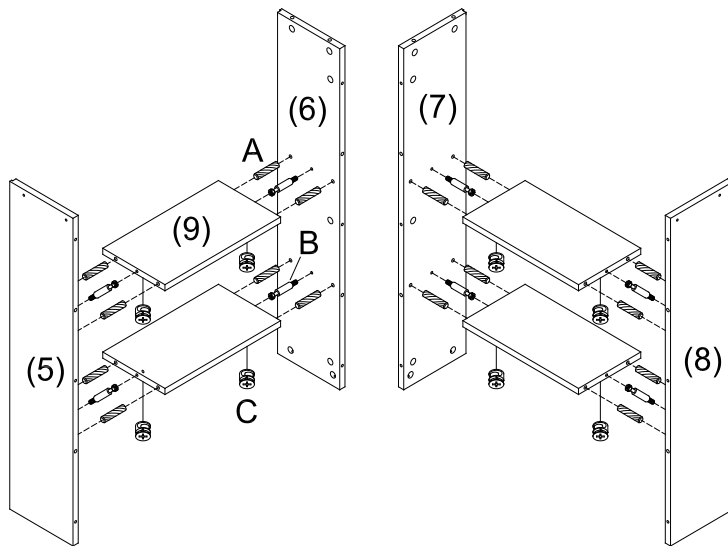 


Figure 1

Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on Fixed Shelves (9).

Screw Cam Bolts (B) and insert Wood Dowels (A) into holes on Side Panels (5), (6), (7) and (8).

Attach Fixed Shelves (9) to Side Panels (5), (6), (7) and (8) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Side Panels (5), (6), (7), (8) and Fixed Shelves (9) meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

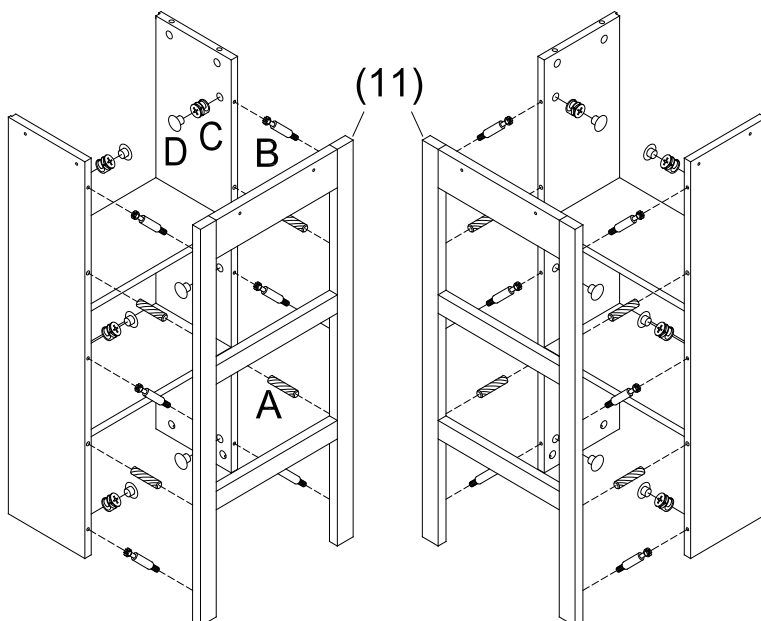 


Figure 2

Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on assembled unit.

Screw Cam Bolts (B) into holes on Front Frames (11).

Attach assembled unit on figure 1 to Front Frame (11) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Front Frame (11) and assembled unit on figure 1 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Plug Plastic Cover (D) into Cam Locks (C)

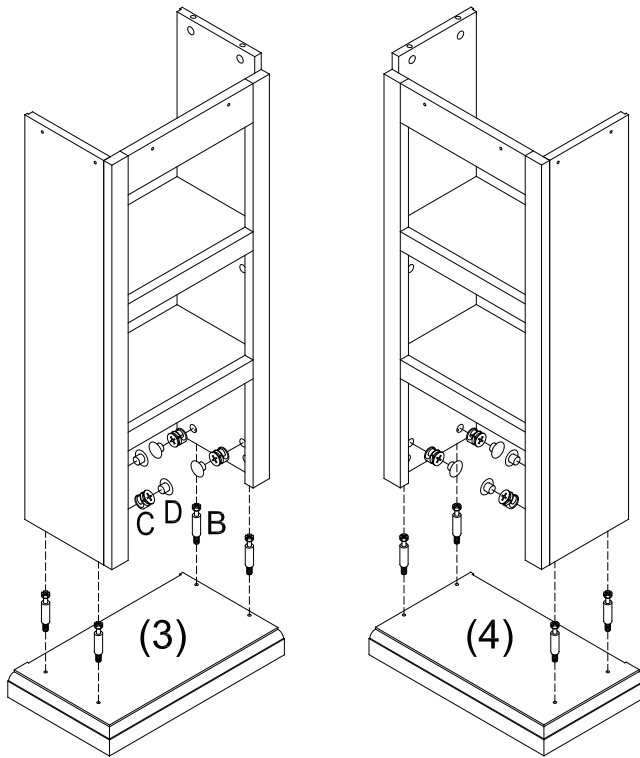 


Figure 3

Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on assembled unit on figure 2.

Screw Cam Bolts (B) into holes on Left Bookcase Base (3) and Right Bookcase Base (4).

Attach assembled unit on figure 2 to Left Bookcase Base (3) and Right Bookcase Base (4) by inserting Cam Bolts (B) into corresponding holes until Left Bookcase Base (3), Right Bookcase Base (4), and assembled unit on figure 2 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Plug Plastic Cover (D) onto Cam Locks (C).

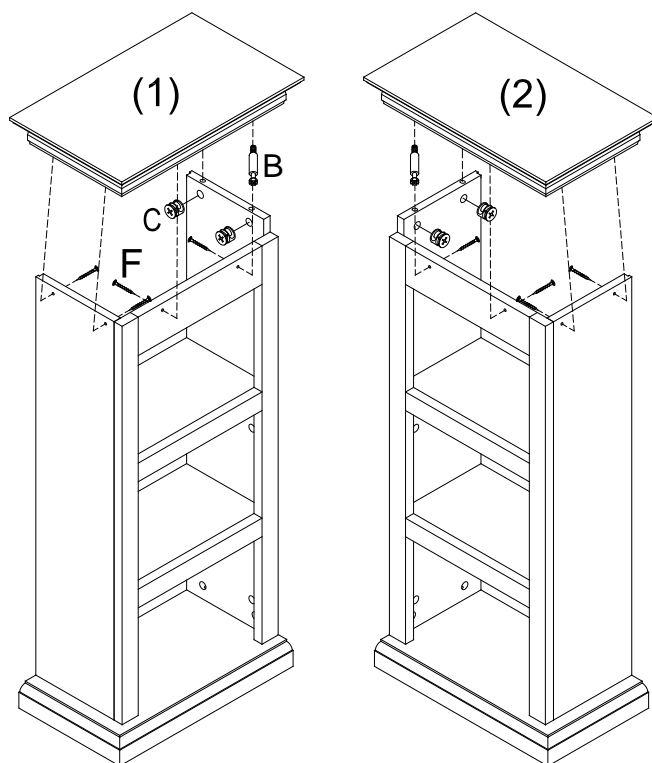 


Figure 4

Start tightening Cam Bolts with fingers to help with alignment.

Screw Cam Bolts (B) into holes on Bookcase Top (1) and (2).

Insert Cam Locks (C) into holes on assembled unit on figure 4.

Attach assembled unit on figure 3 to Bookcase Top (1) and (2) by inserting Cam Bolts (B) into corresponding holes until Bookcase Top (1) and (2) and assembled unit on figure 3 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Connect Bookcase Top (1) and (2) to assembled unit on figure 3 with Screws (F).

Tighten Screws (F) with Phillips screwdriver.

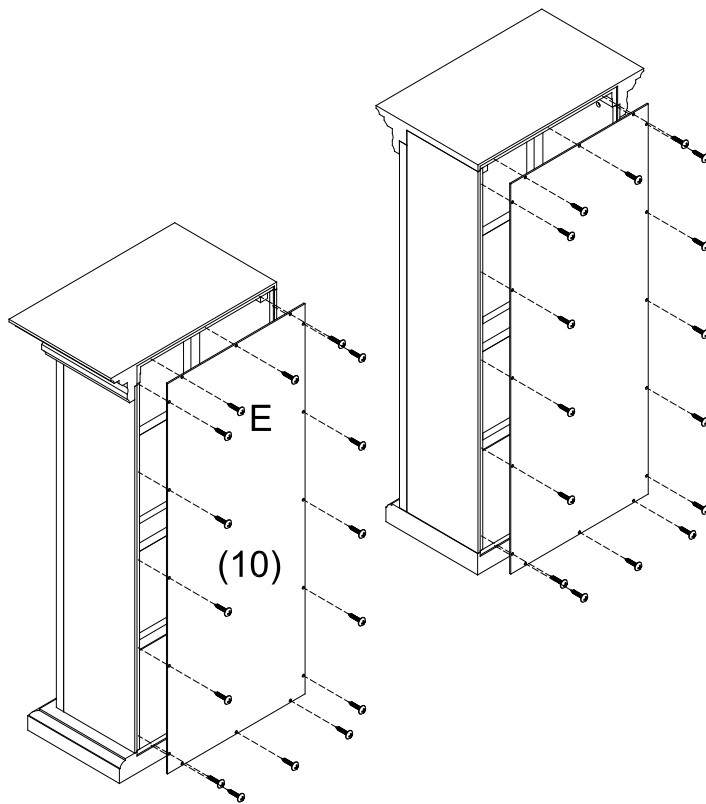 


Figure 5

Connect Back Panels (10) to assembled unit on figure 4 with Screws (E).

Tighten Screws (E) with Phillips screwdriver.

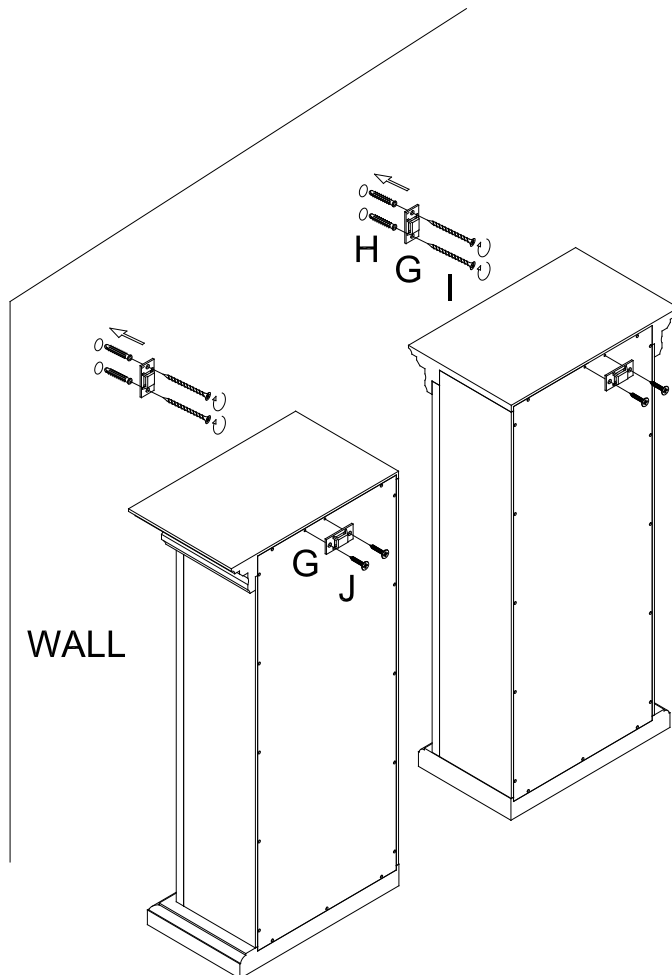 


Figure 6

Attach Brackets (G) to the Left Bookcase Top (1) and Right Bookcase Top (2) with Screws (J).

Tighten Screws (J) using Philips screwdriver.

Mark two desired locations on the wall and drill two 3/16" holes.

Insert Anchors (H) into the two holes on wall as shown. Use a hammer to insert the Plastic Anchors until they are flush with the wall.

Then attach the Brackets (G) onto the wall using Screws (I).

Tighten Screws (I) using Philips screwdriver.



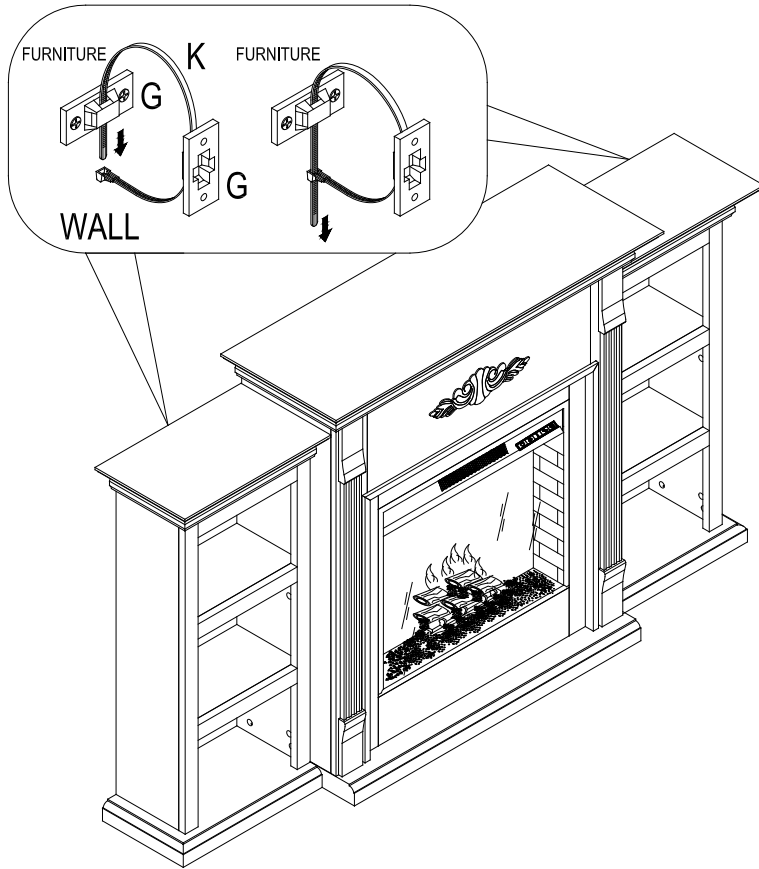 


Figure 7

Place the bookcase beside the FA8543A0TX and move this item close to the Wall Brackets (G) and tie in all Brackets (G) together with Plastic Straps (K) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

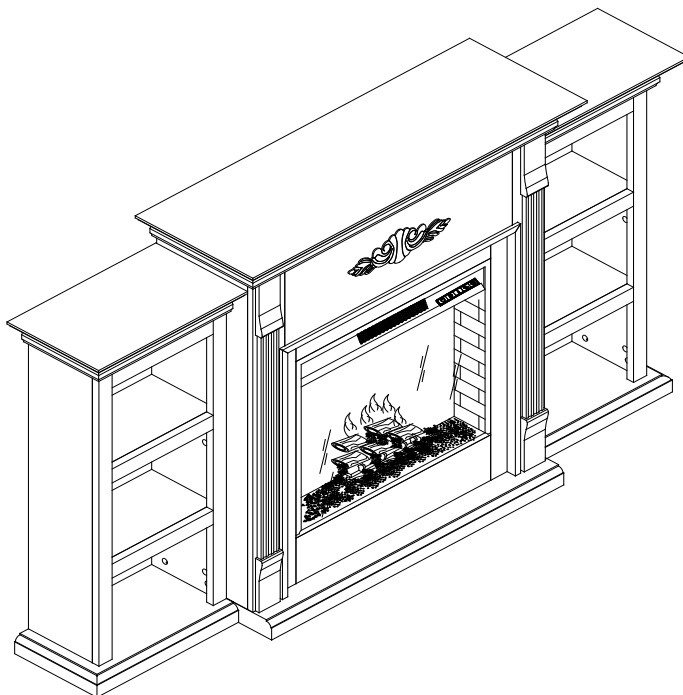 


Figure 8

Now your new Tennyson bookcase fireplace is ready to use.