






















ASSEMBLY INSTRUCTIONS

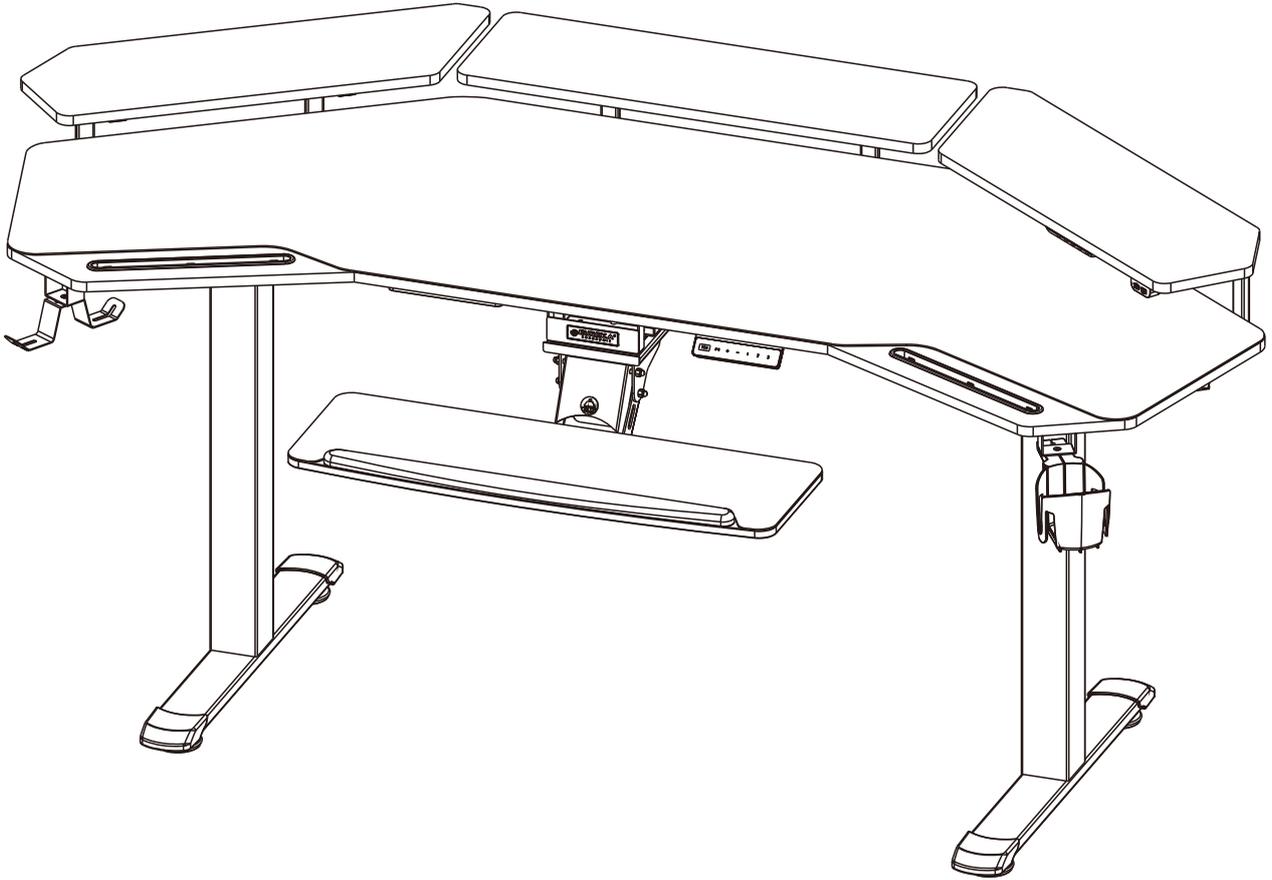
















! WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

PARTS

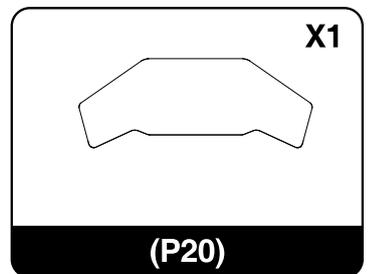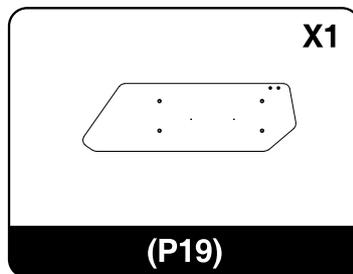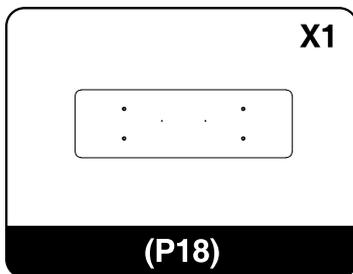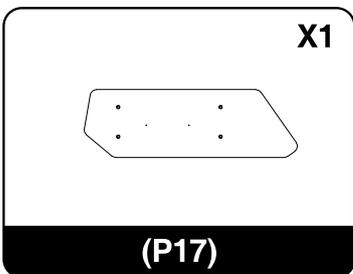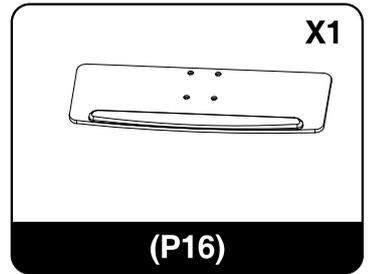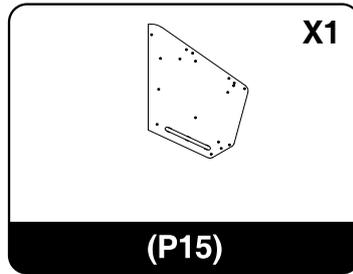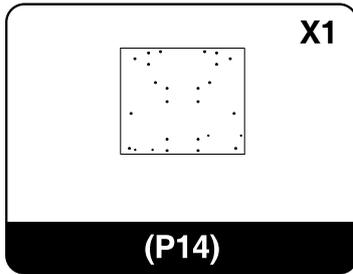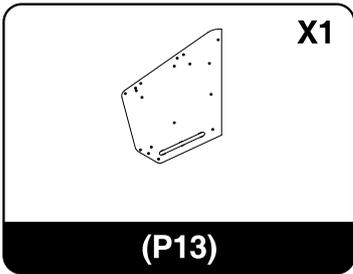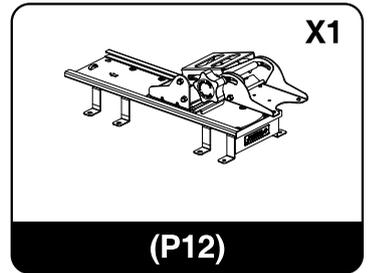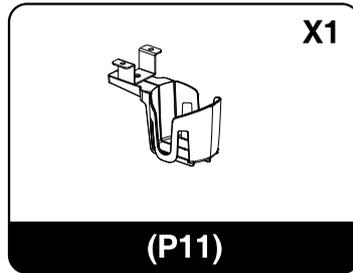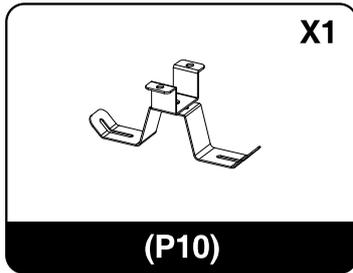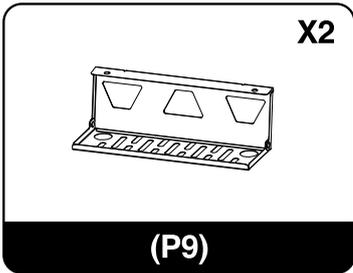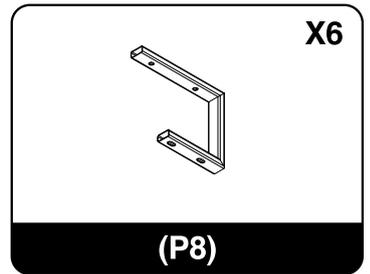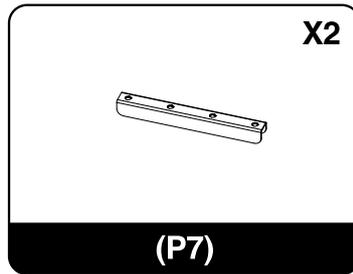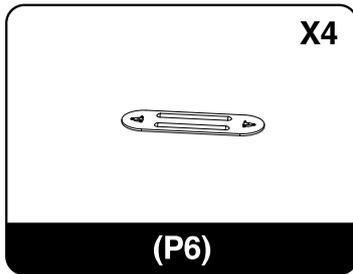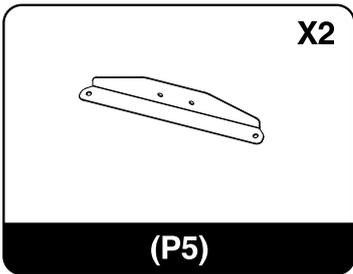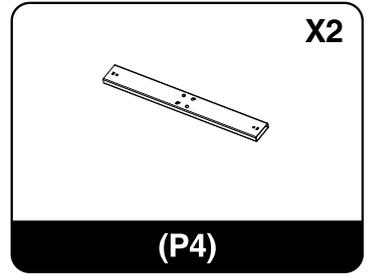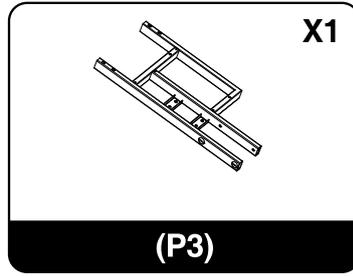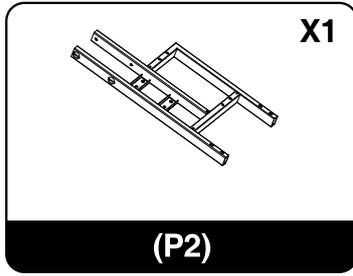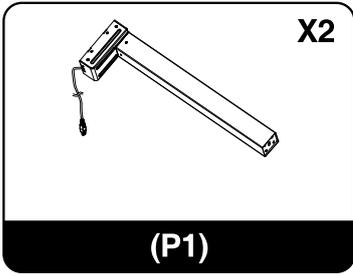

PARTS

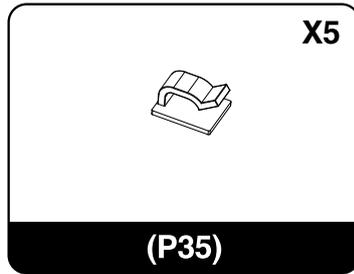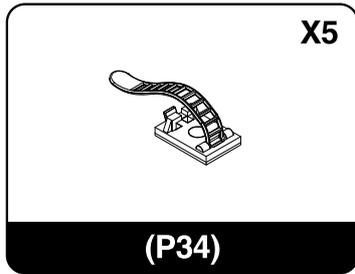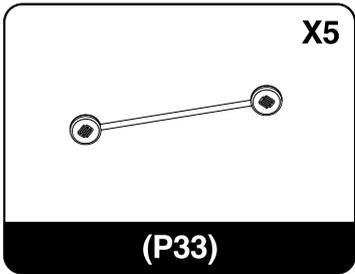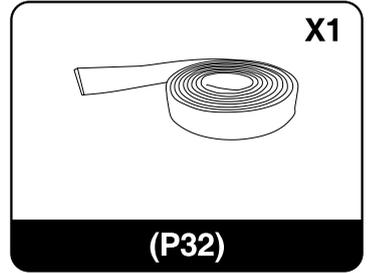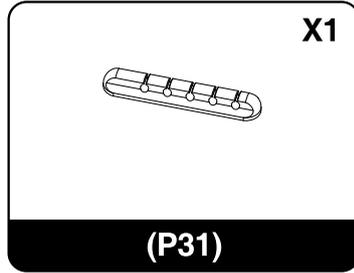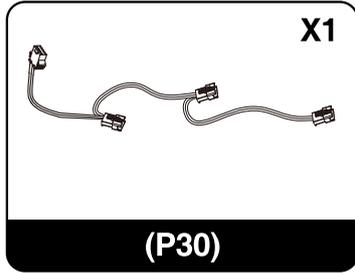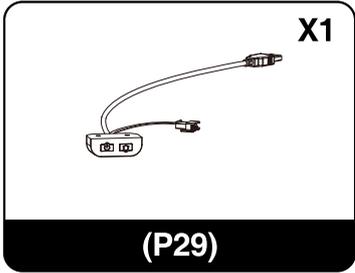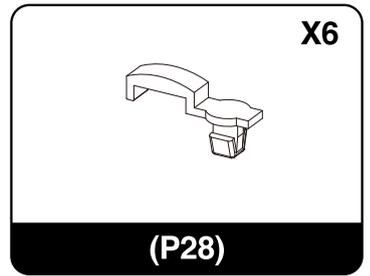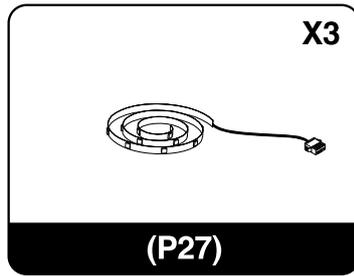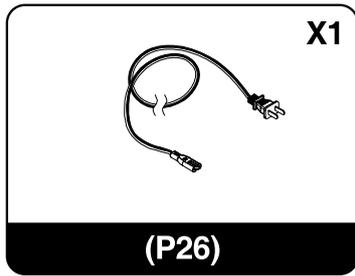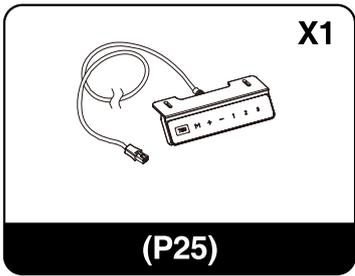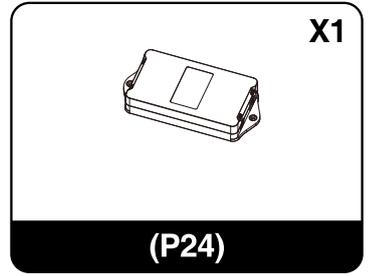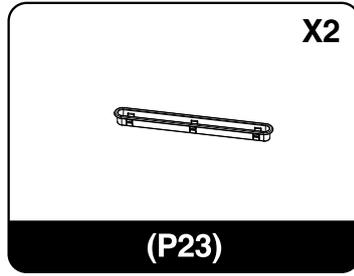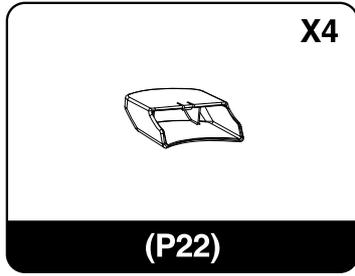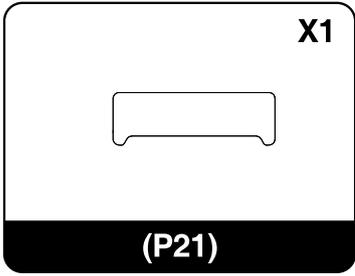


HARDWARE

1/4*51mm X4



(A)

 M8*35mm X8




(B)

1/4*24mm X24




(C)

 M8*15mm X12



(D)

 1/4*12mm X44



(E)

M4*20mm X2



(F)

M4*12mm X4



 
(G)

X4



(H)

K5 X1



(I)

K4 X1



(J)

X1







(K)




Do not tighten the screws until all of them are screwed into the holes.

ASSEMBLY INSTRUCTIONS





STEP 1

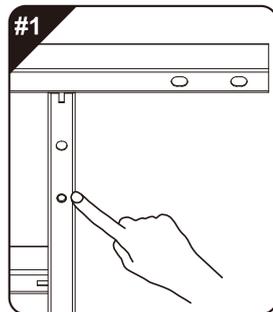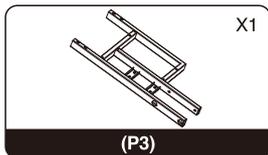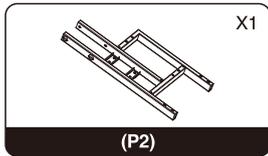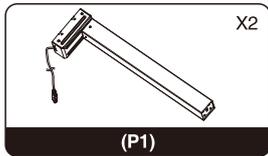





Note: P2 is installed on the left and the 4 small holes are in the same direction as the legs P1.

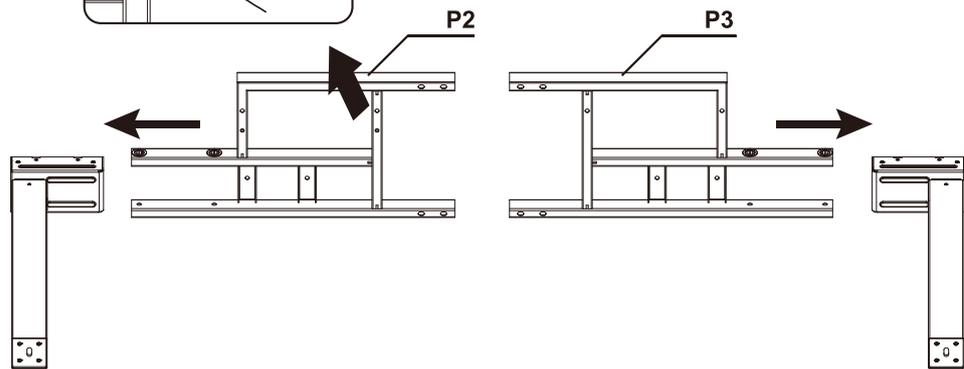


STEP 2

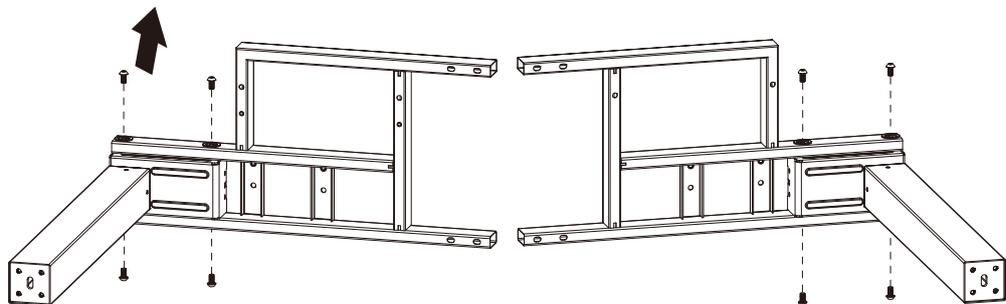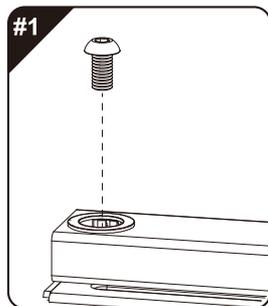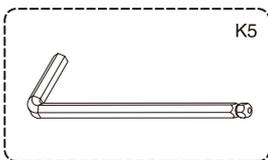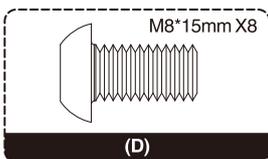





STEP 3

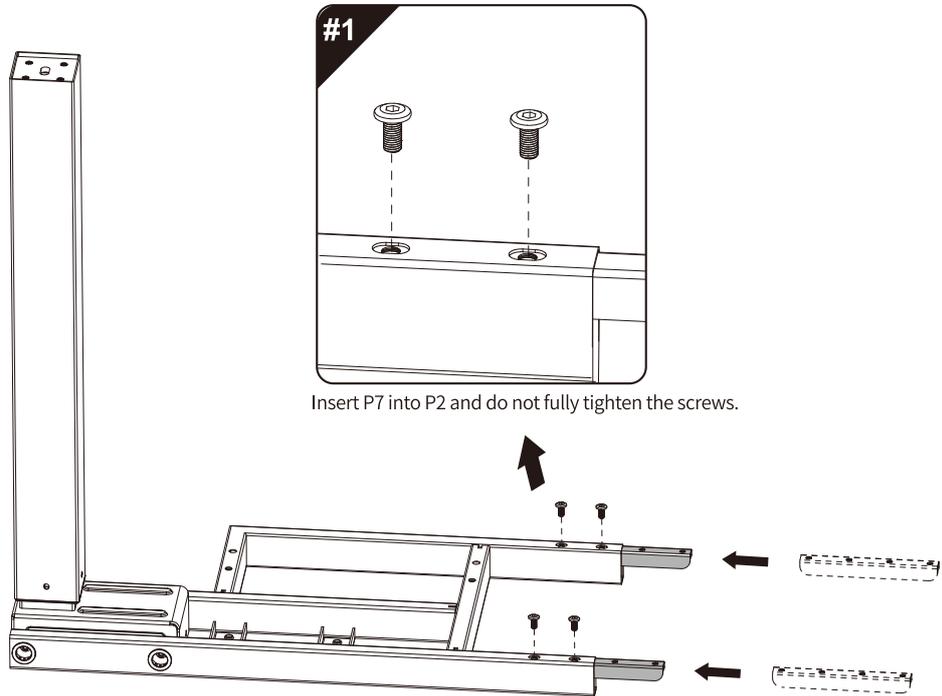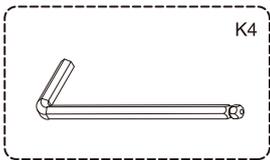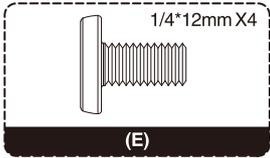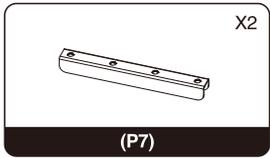





STEP 4

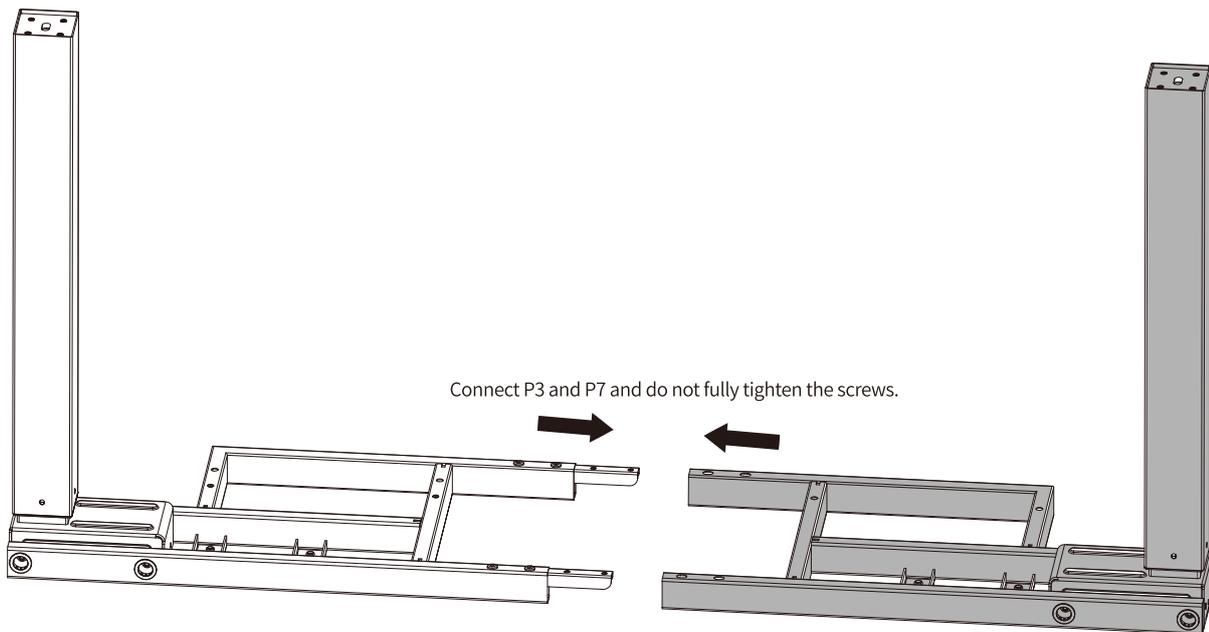



STEP 5

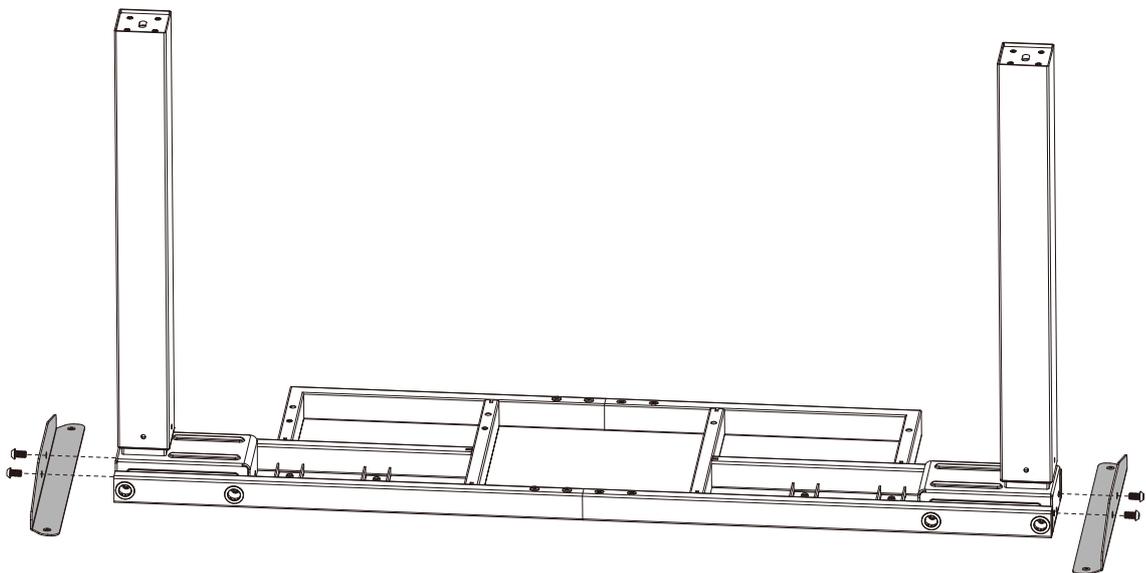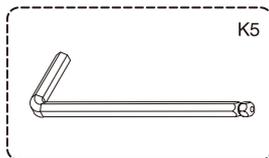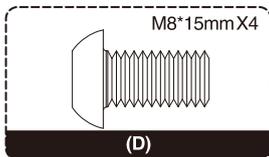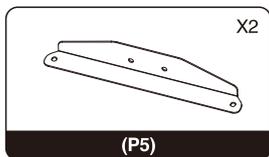



STEP 6

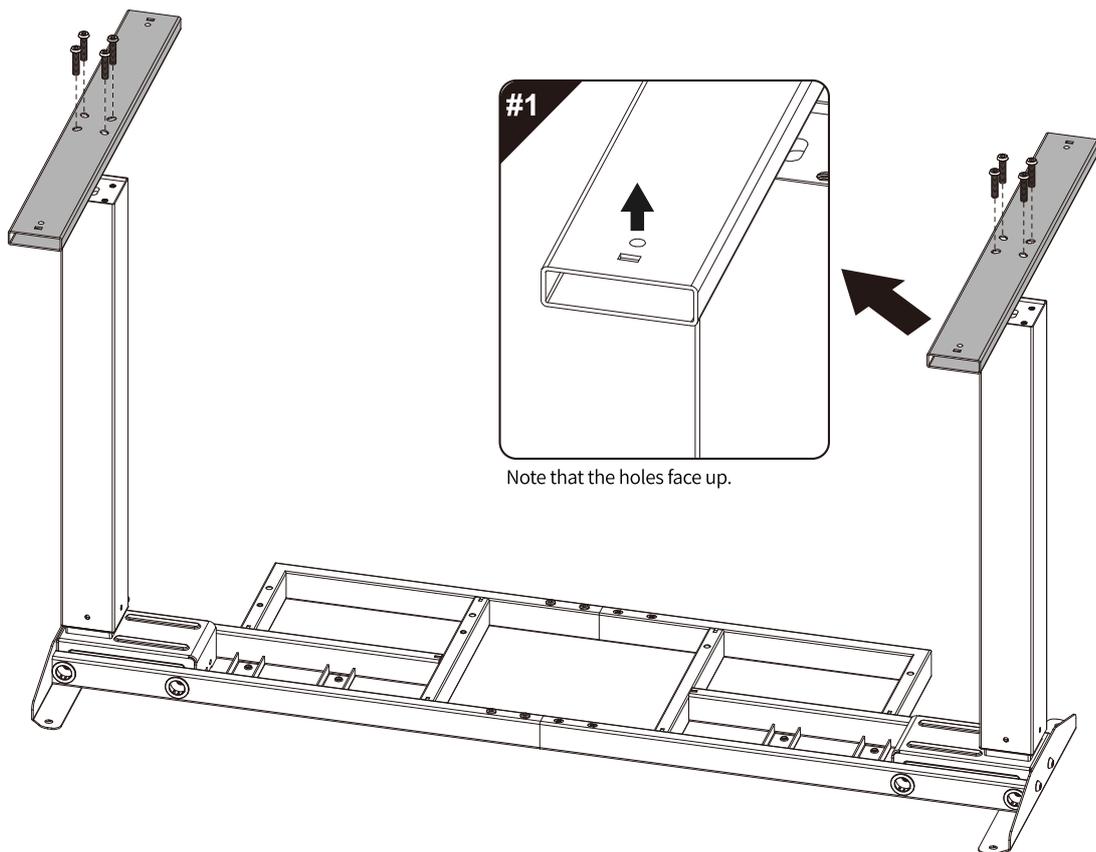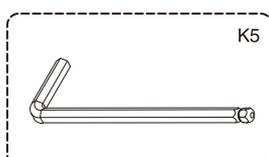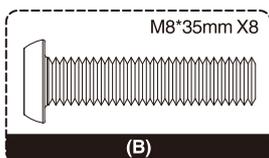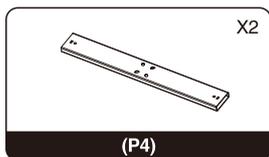










STEP 7

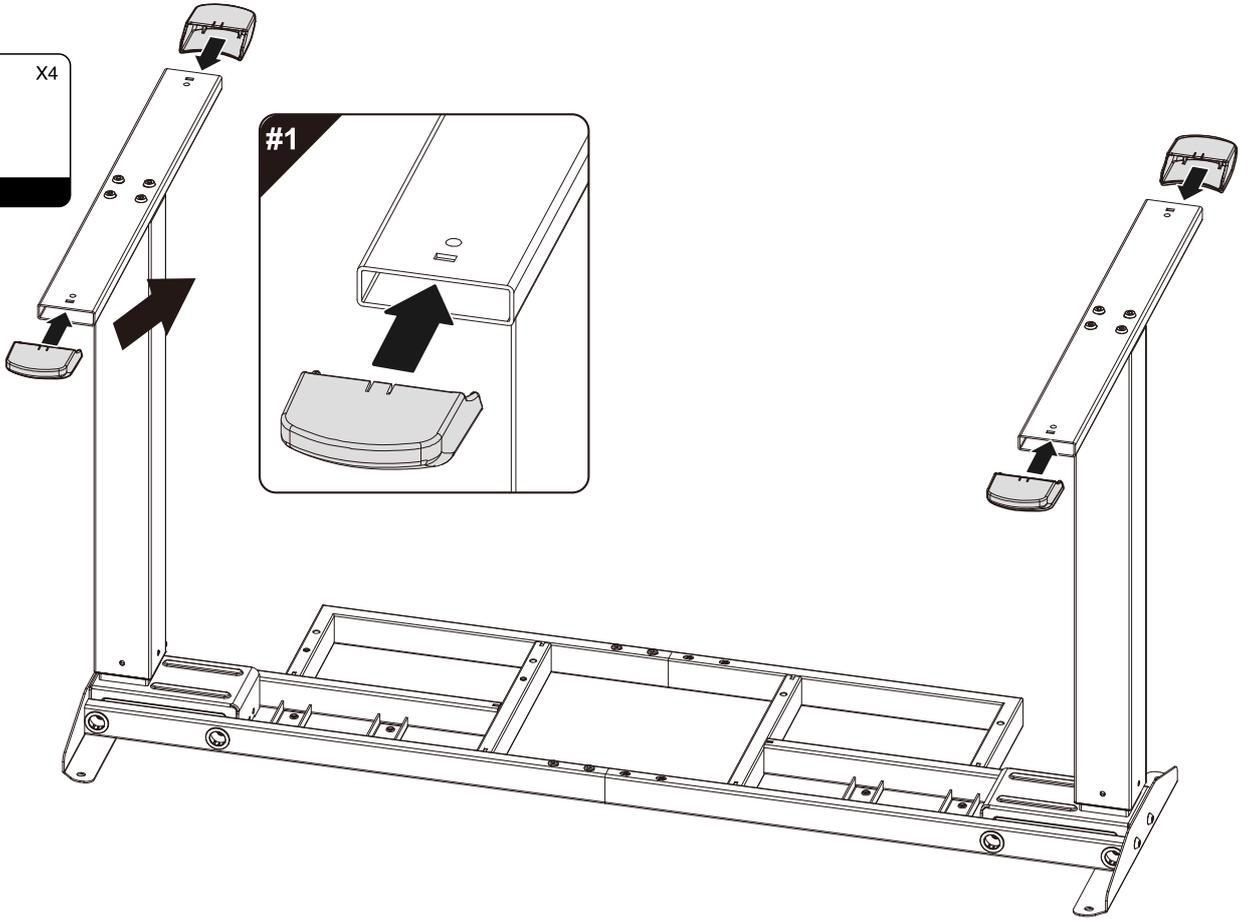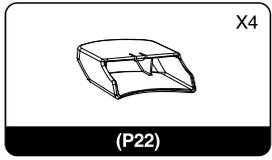




STEP 8

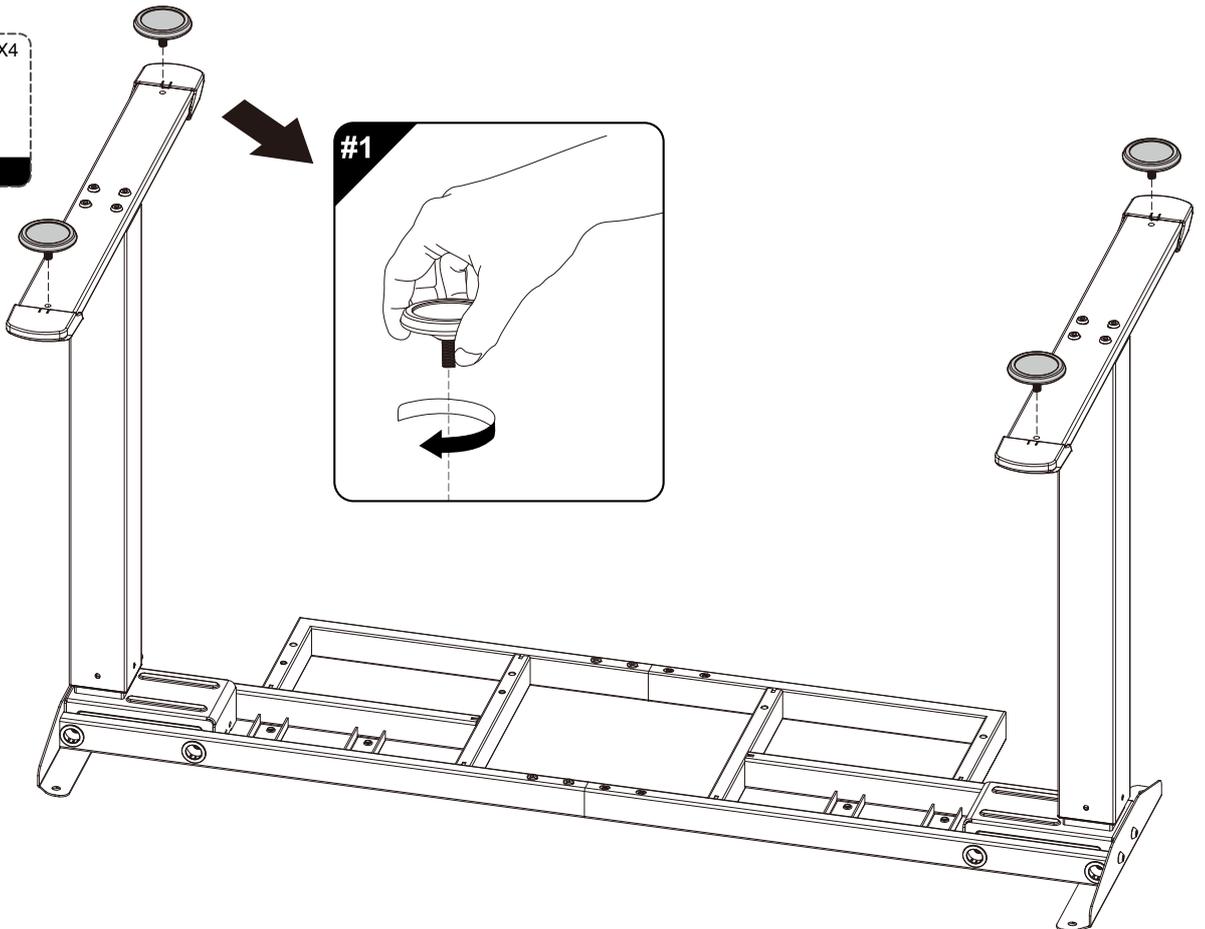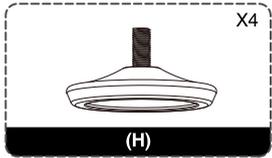




STEP 9

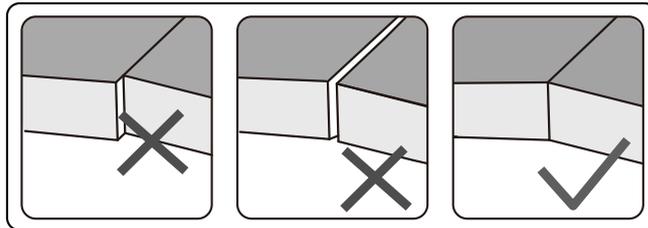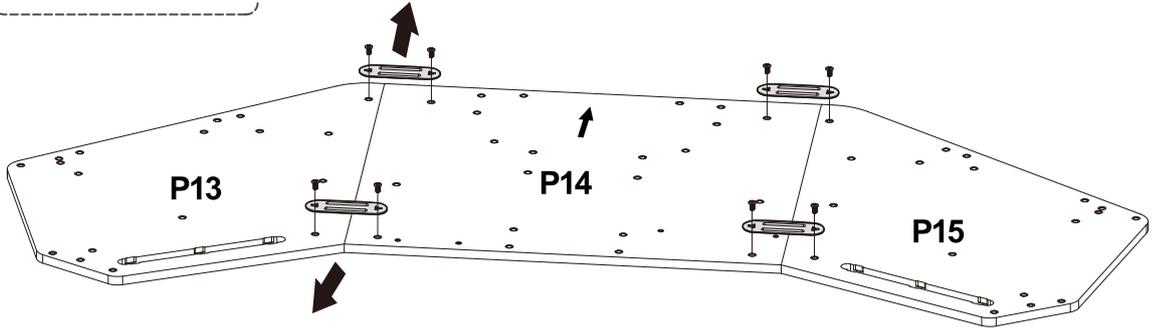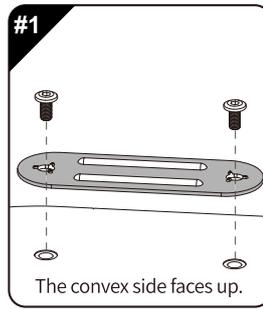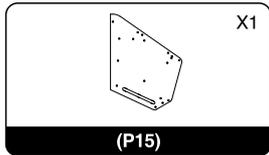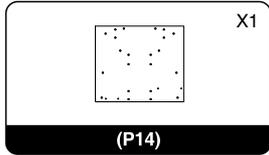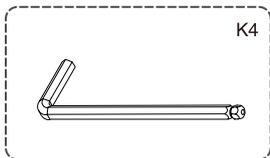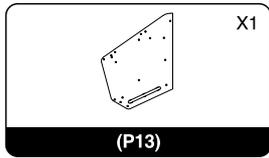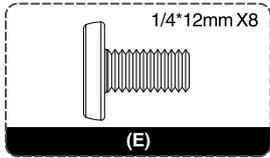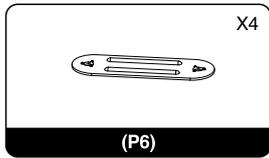




STEP 10

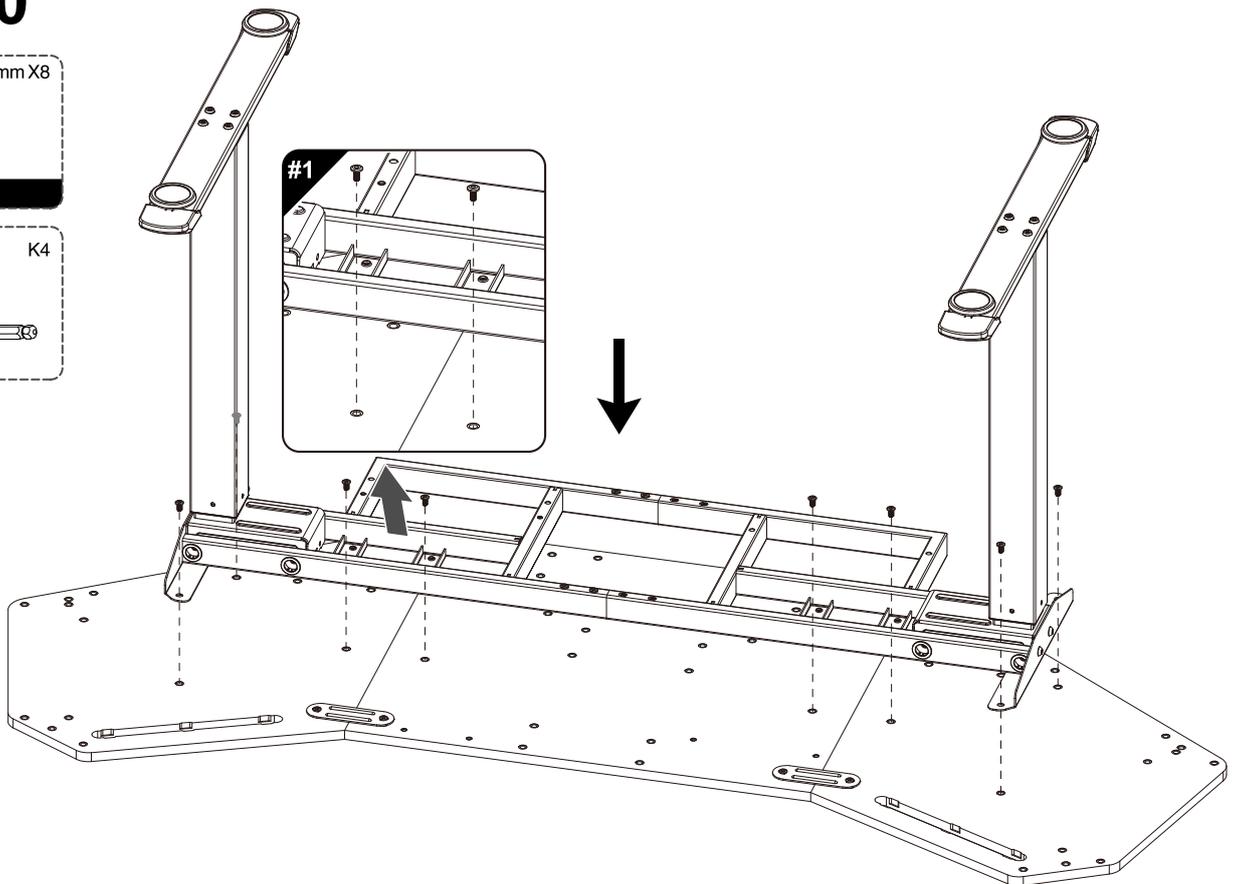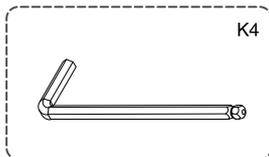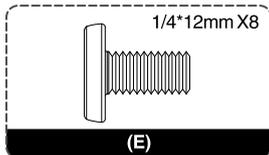





STEP 11

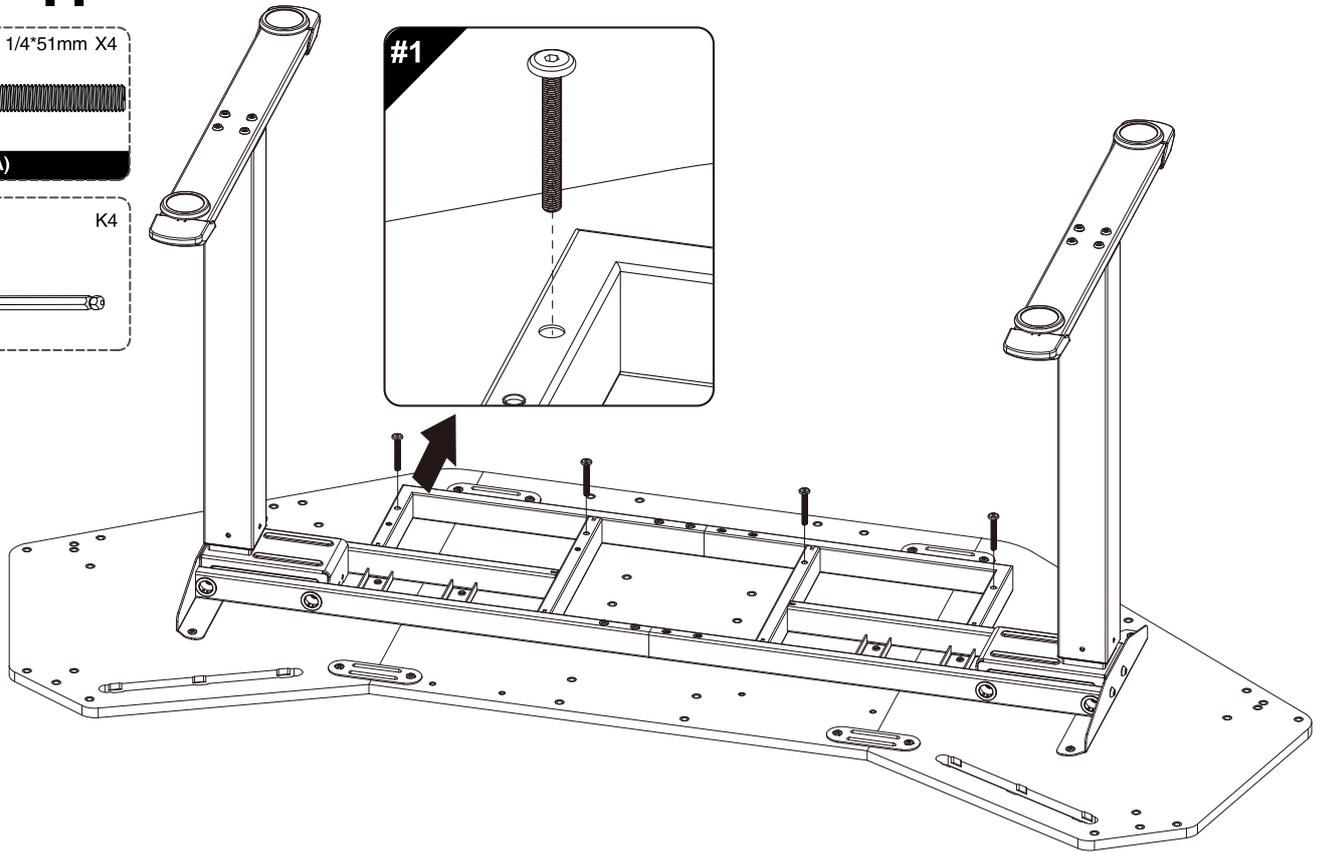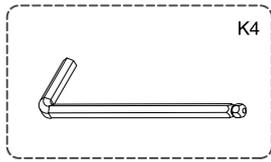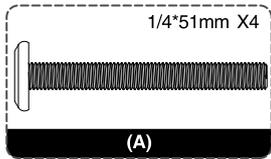






STEP 12

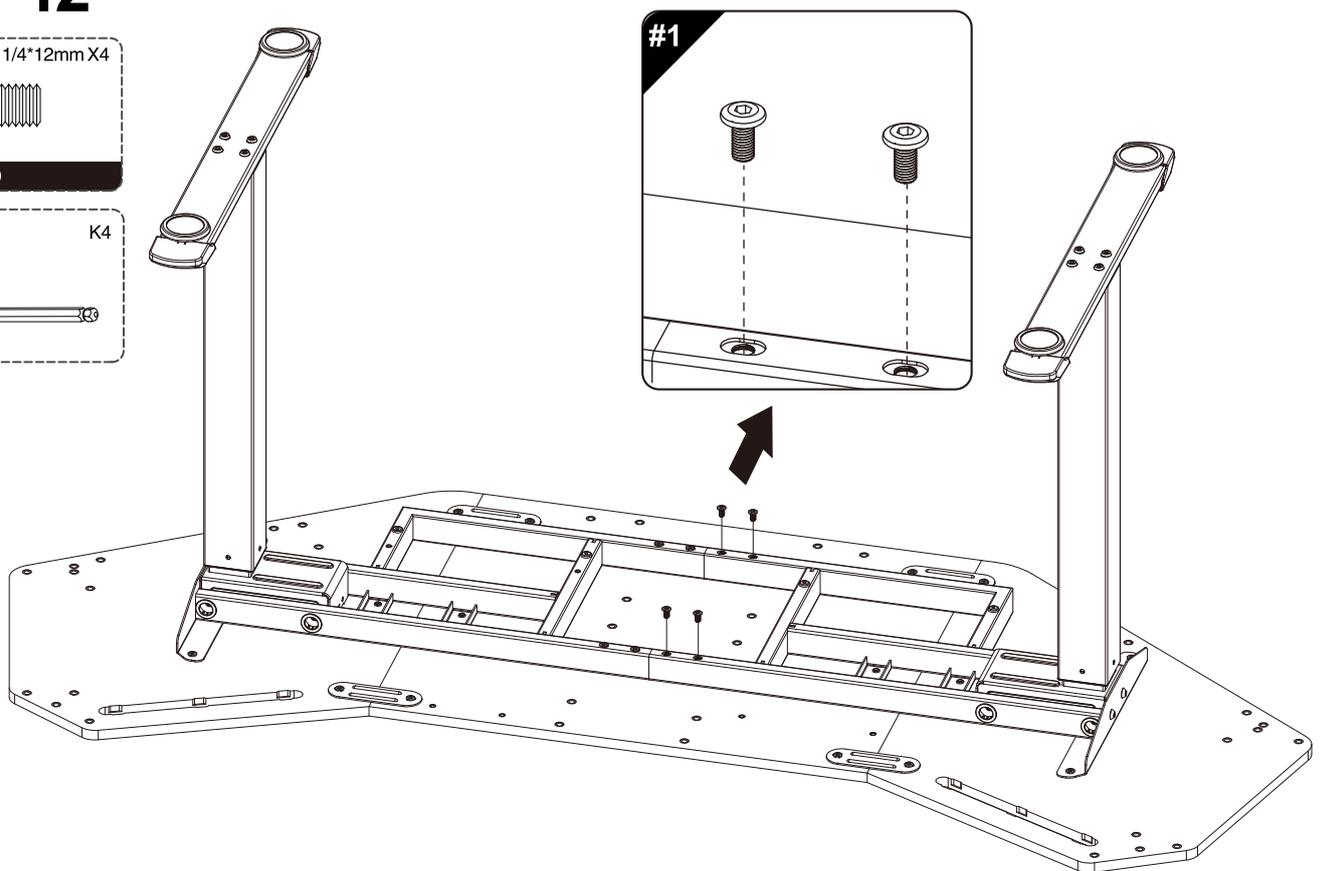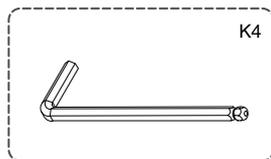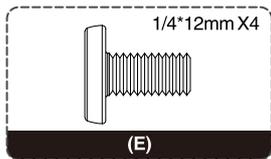





STEP 13

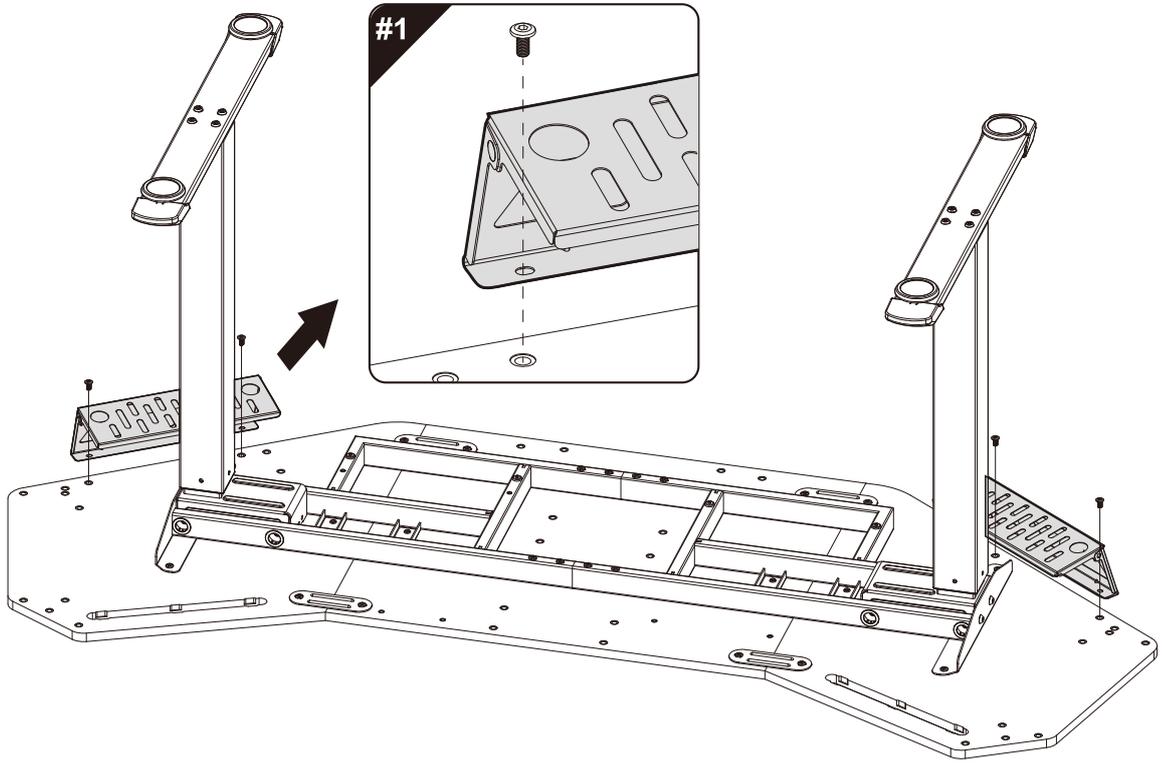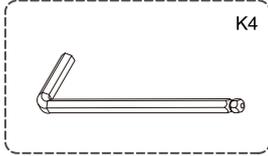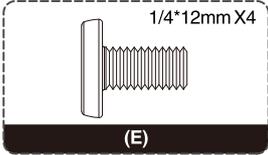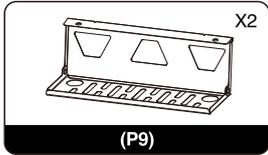






STEP 14

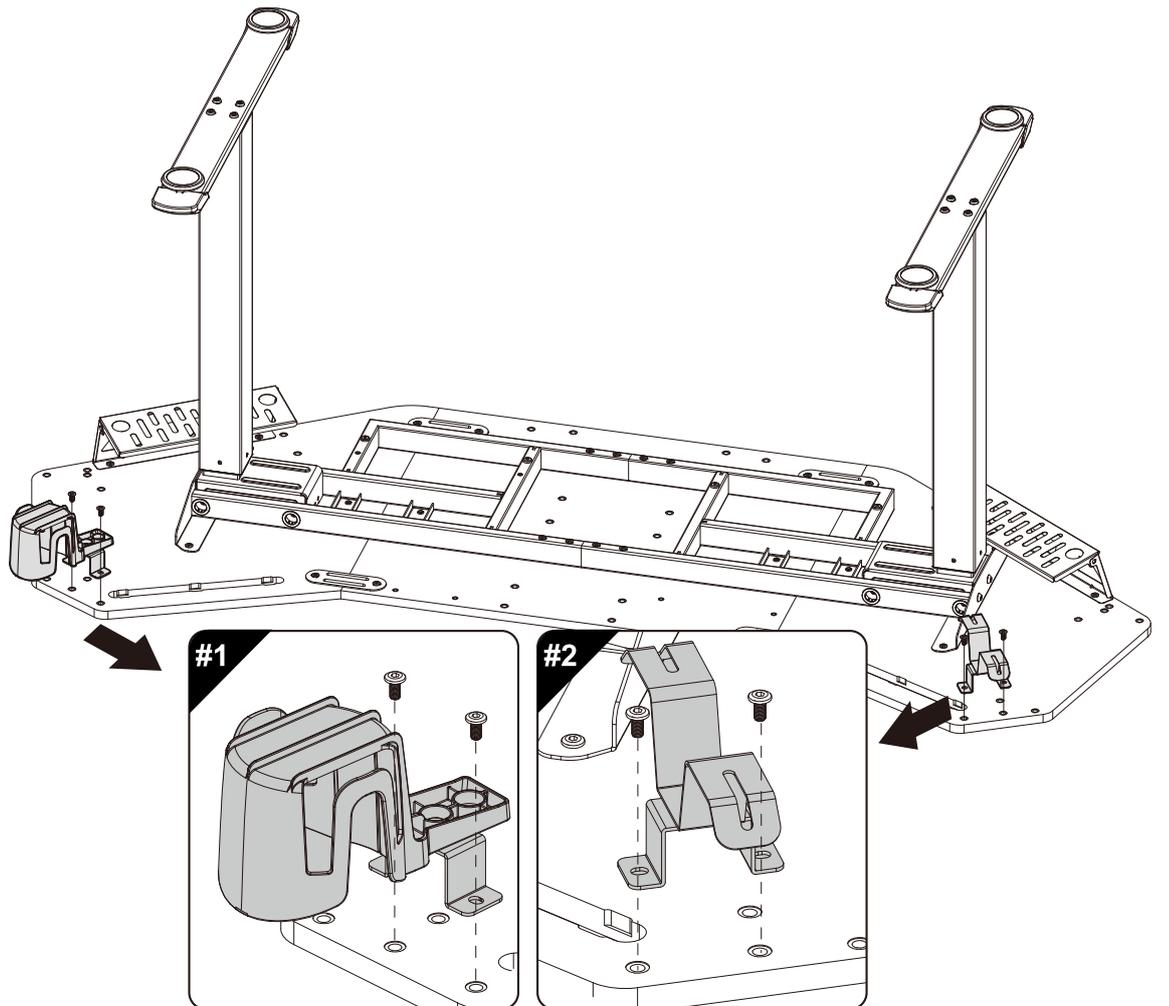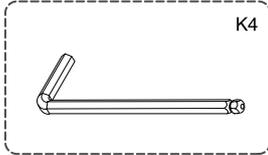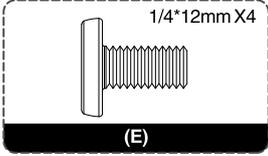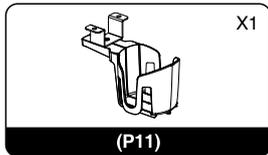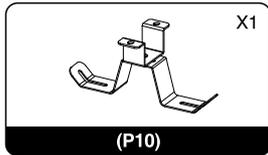




STEP 15

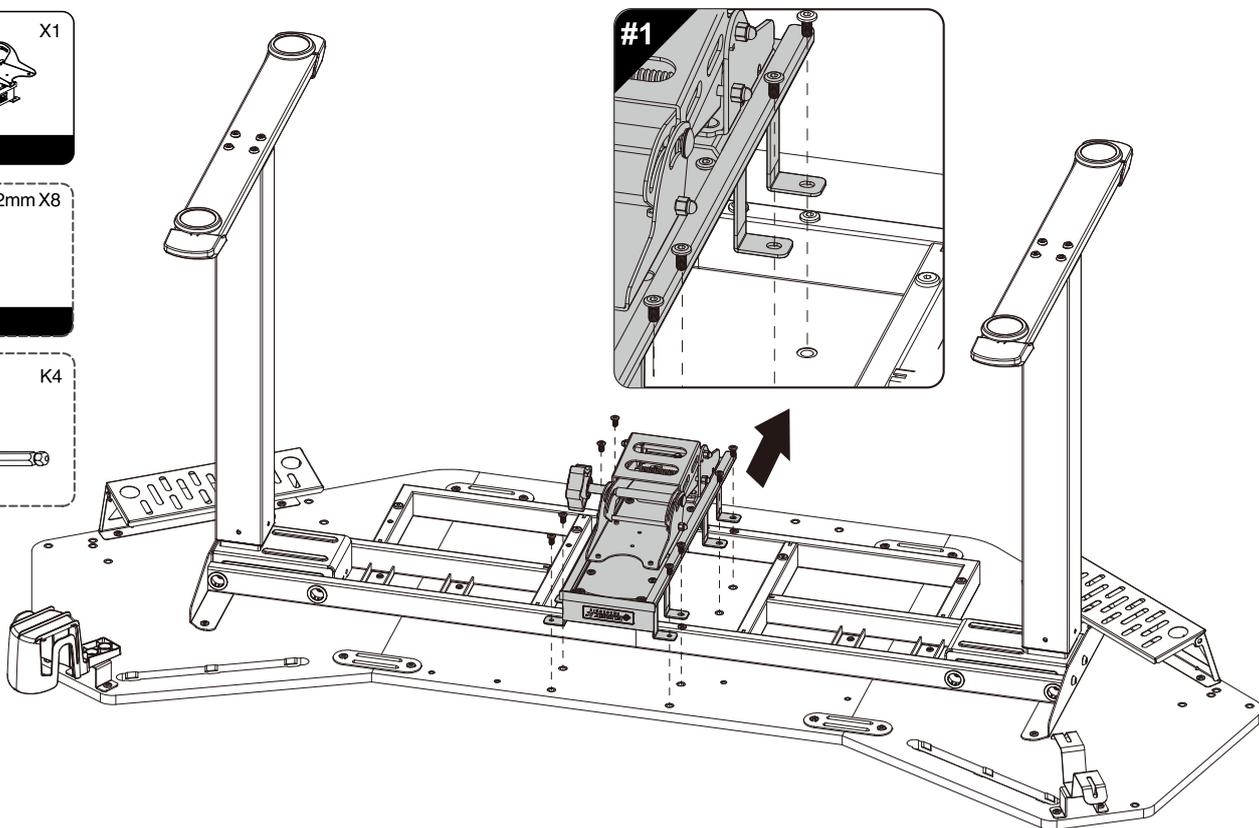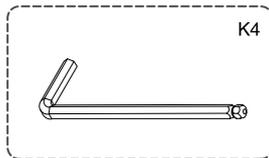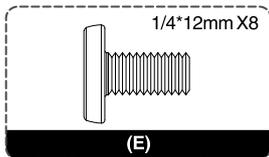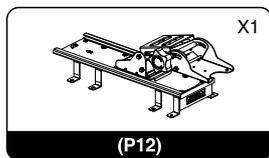






STEP 16

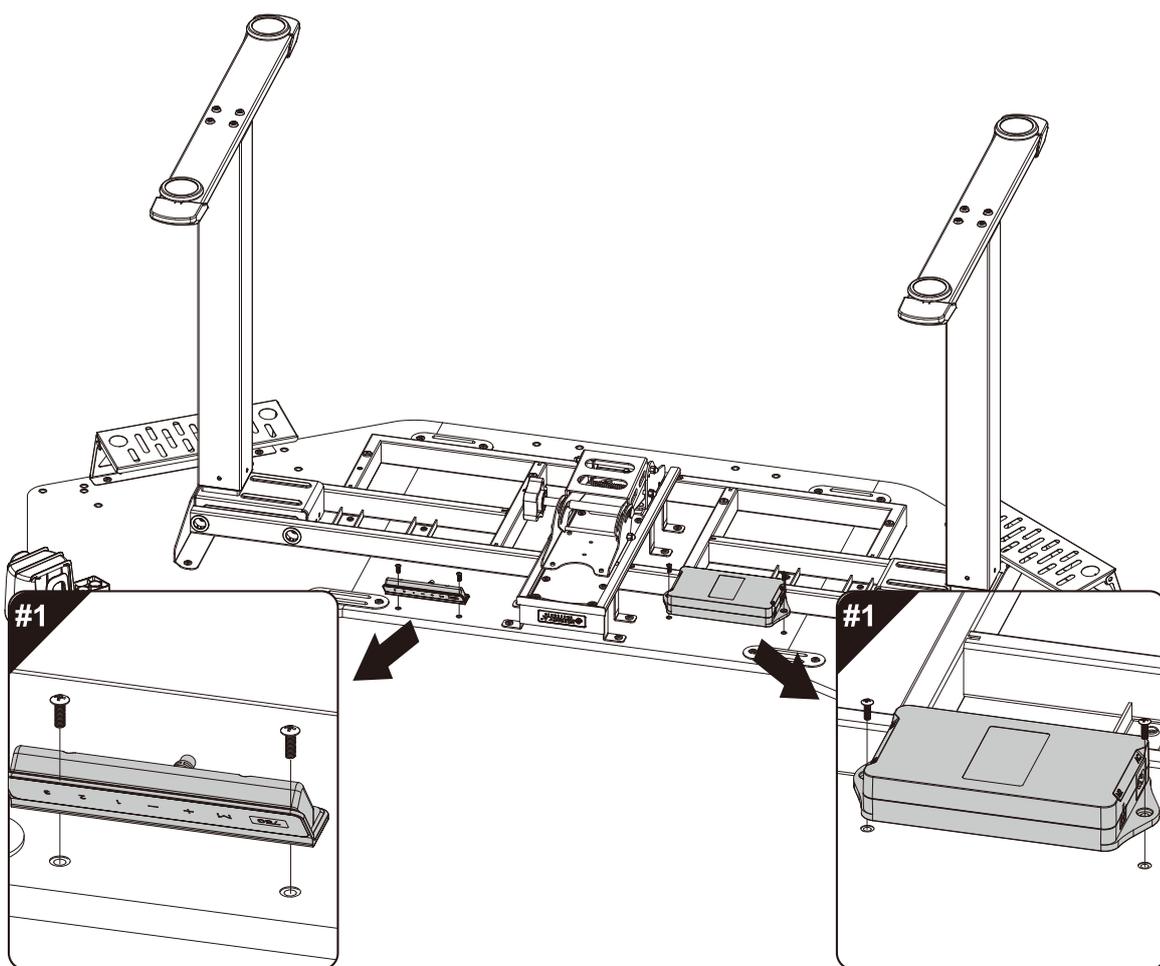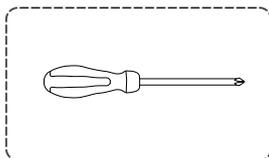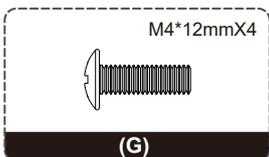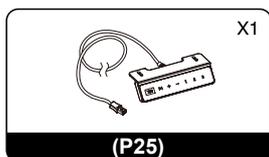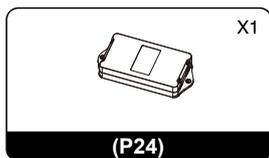






STEP 17

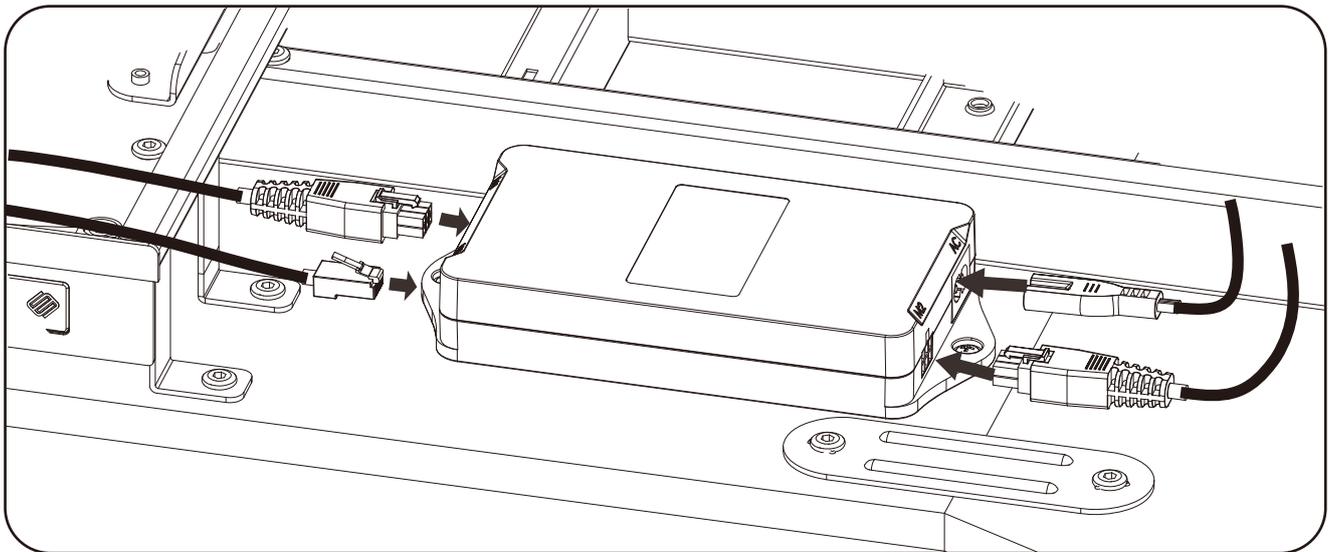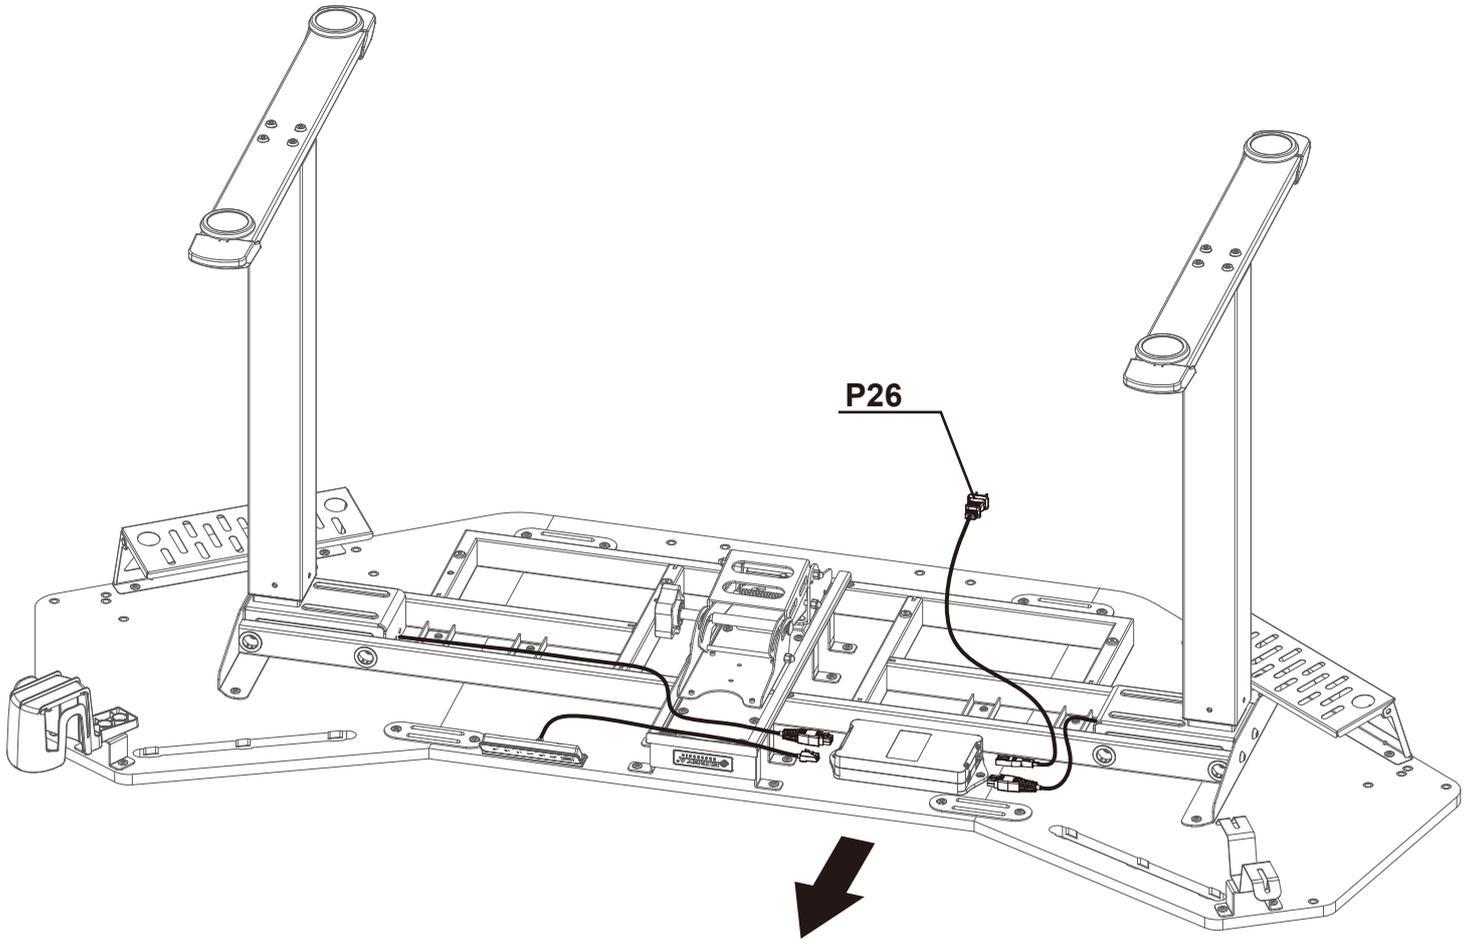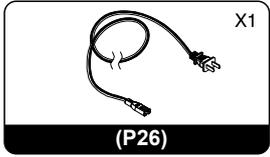





STEP 18

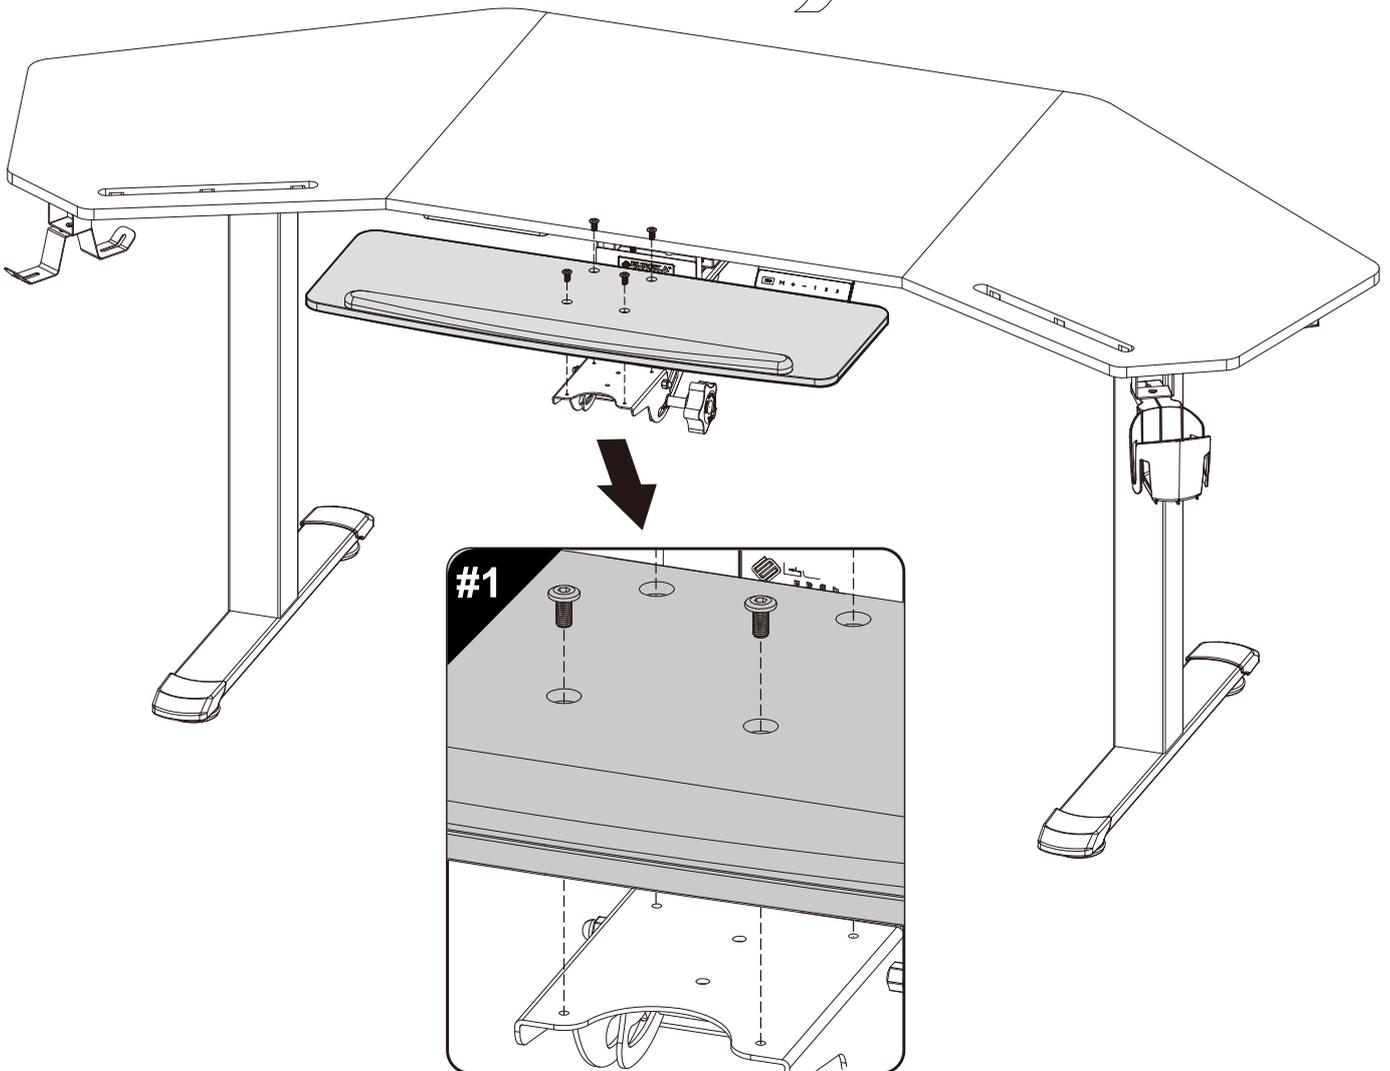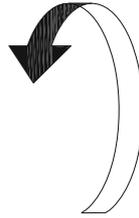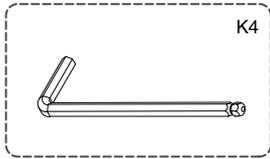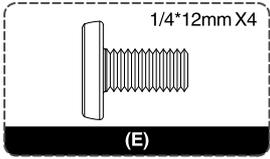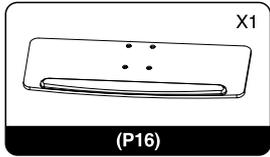







STEP 19

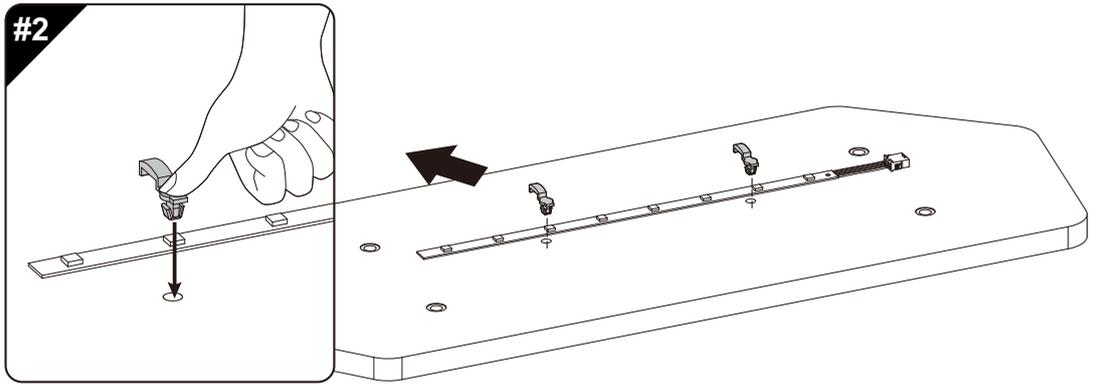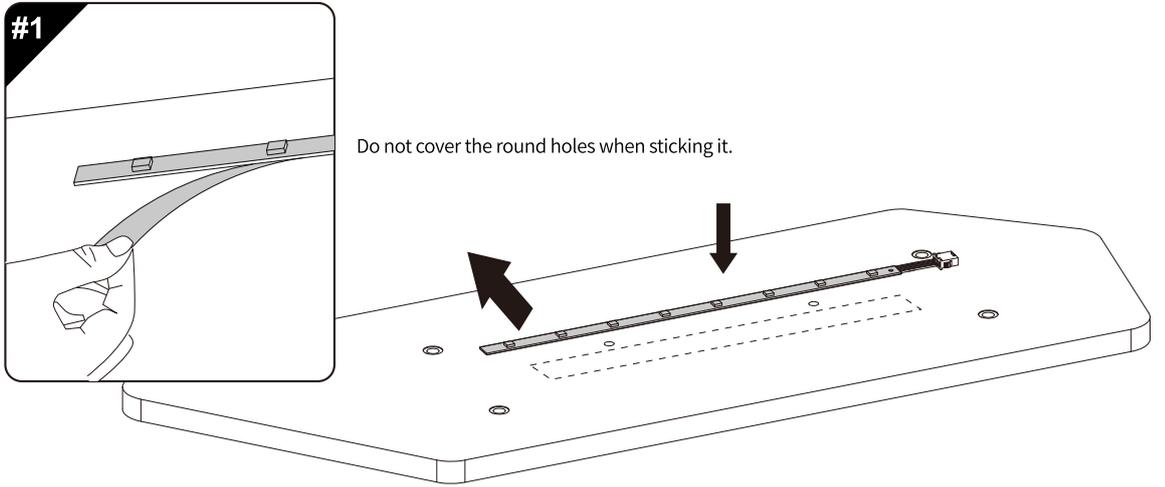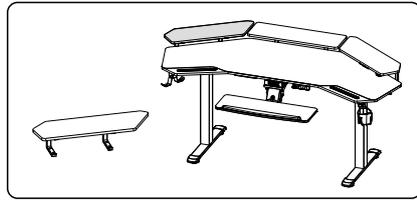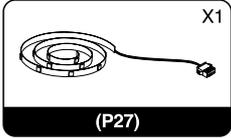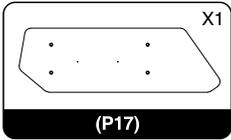



STEP 20

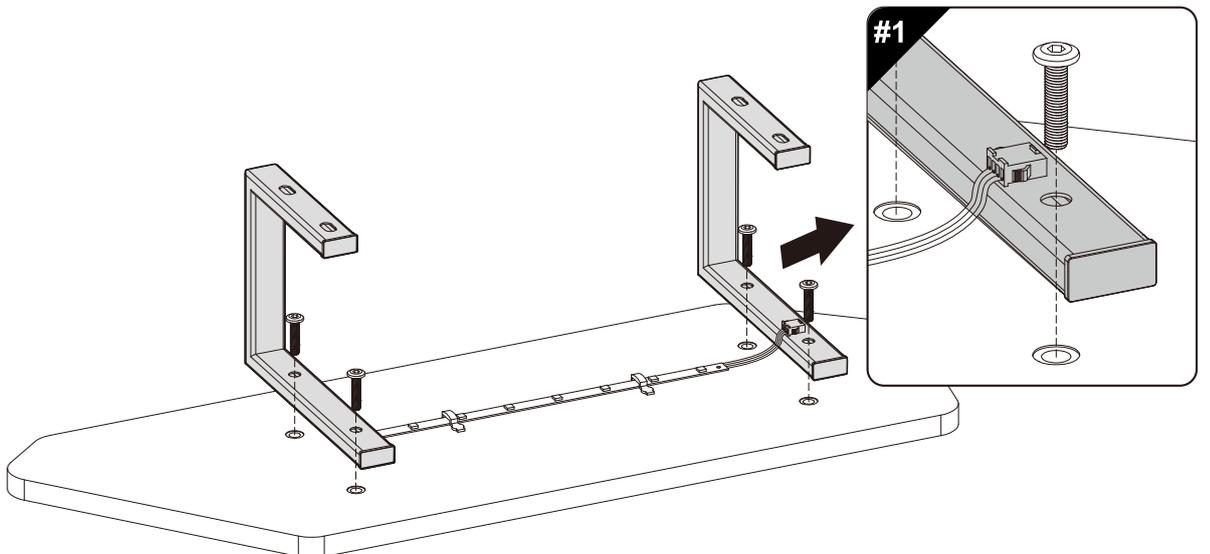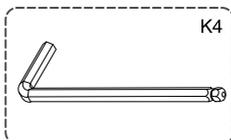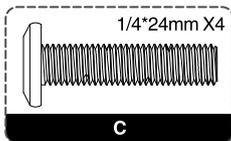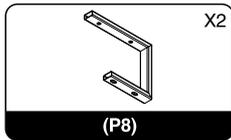











STEP 21

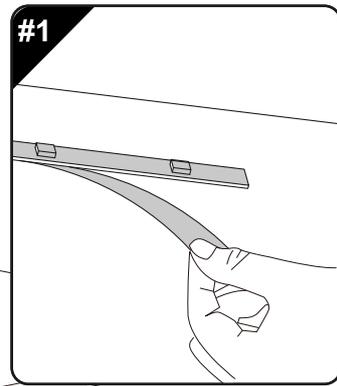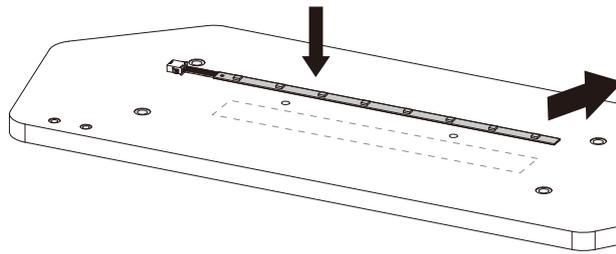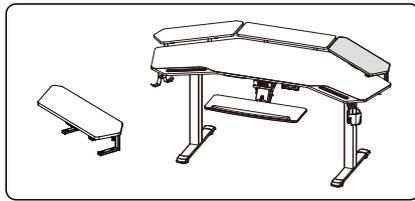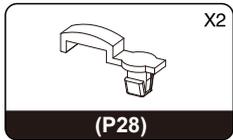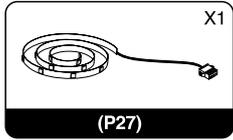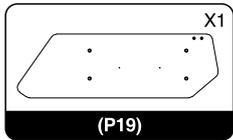

Do not cover the round holes when sticking it.


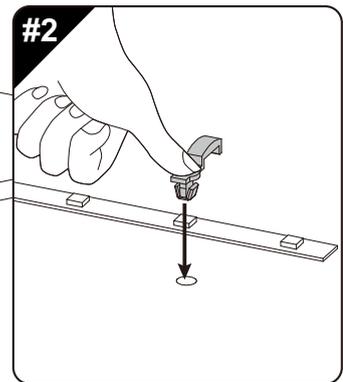
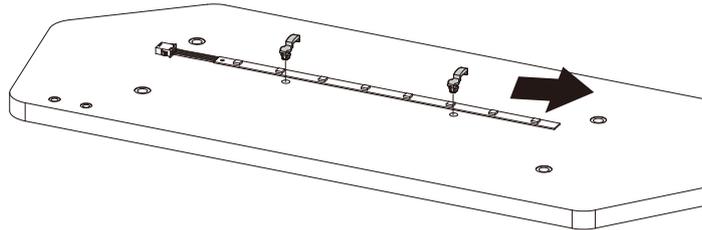


STEP 22

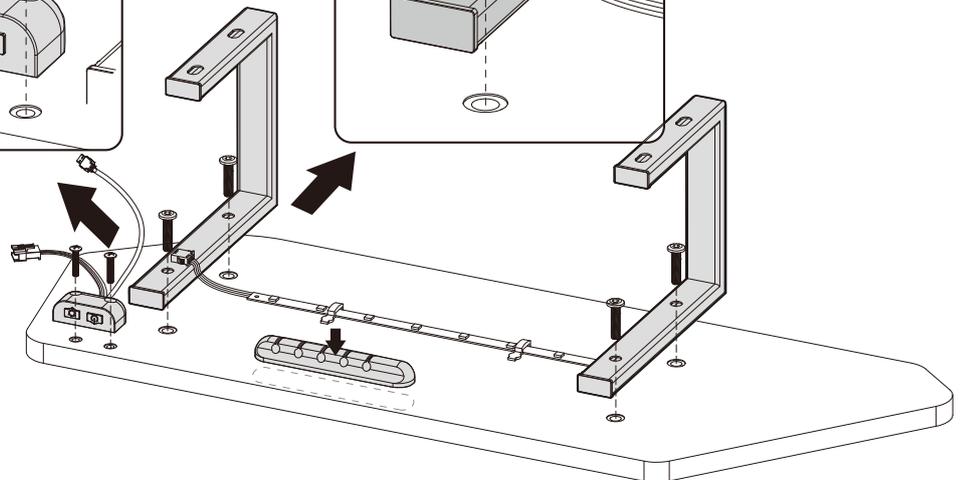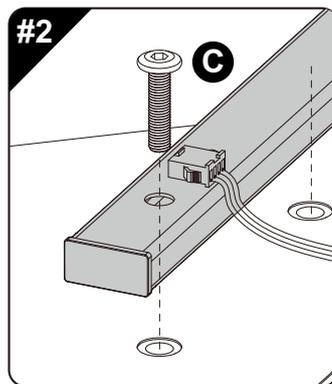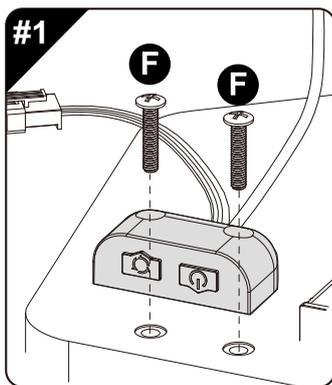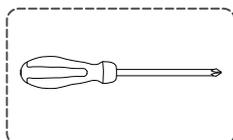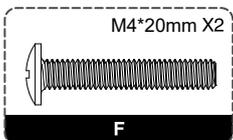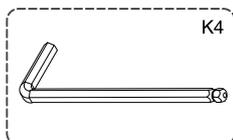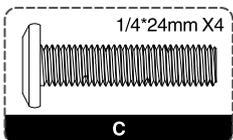
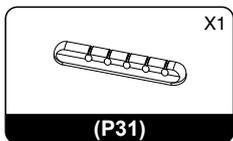
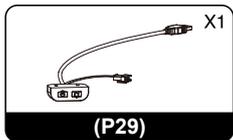
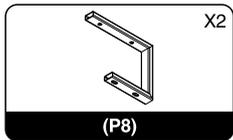


Select the sticking location according to the actual usage habits.






STEP 23

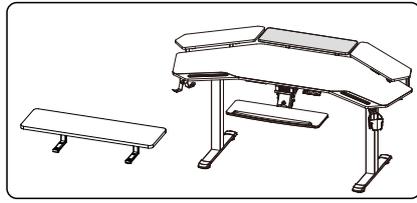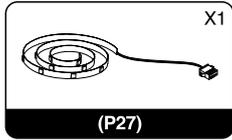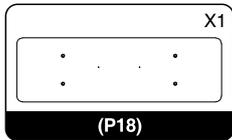





Do not cover the round holes when sticking it.

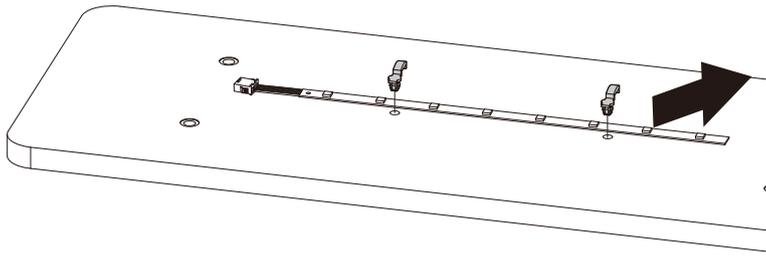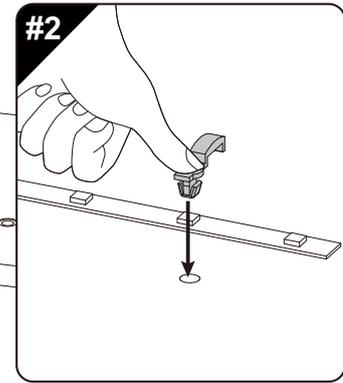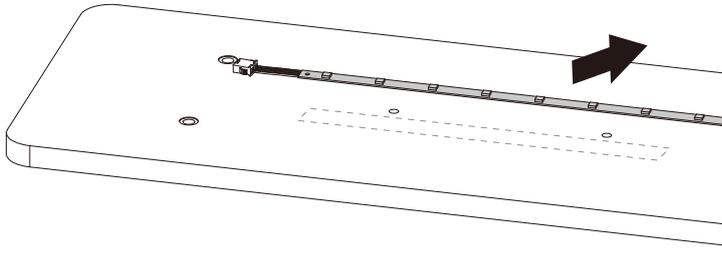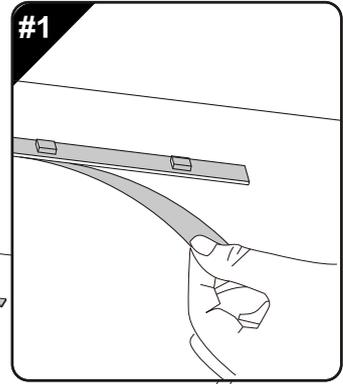

STEP 24

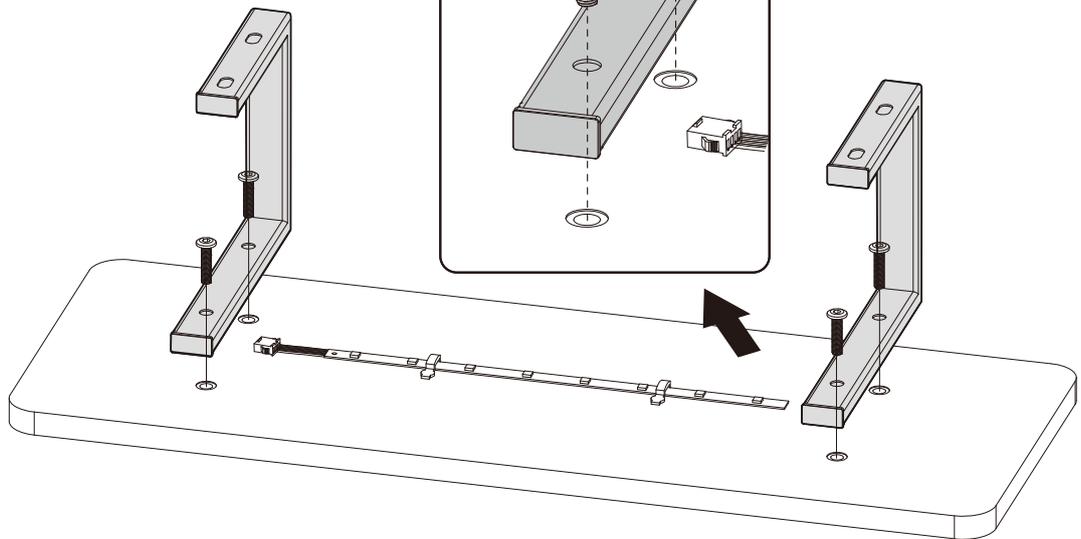
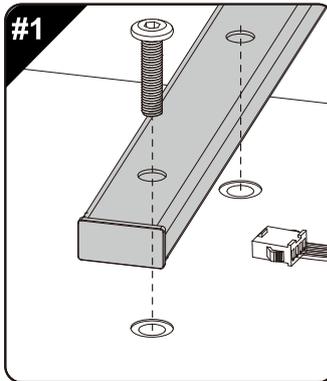
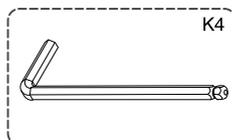
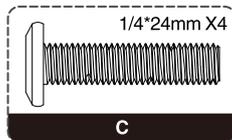
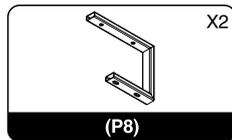


STEP 25


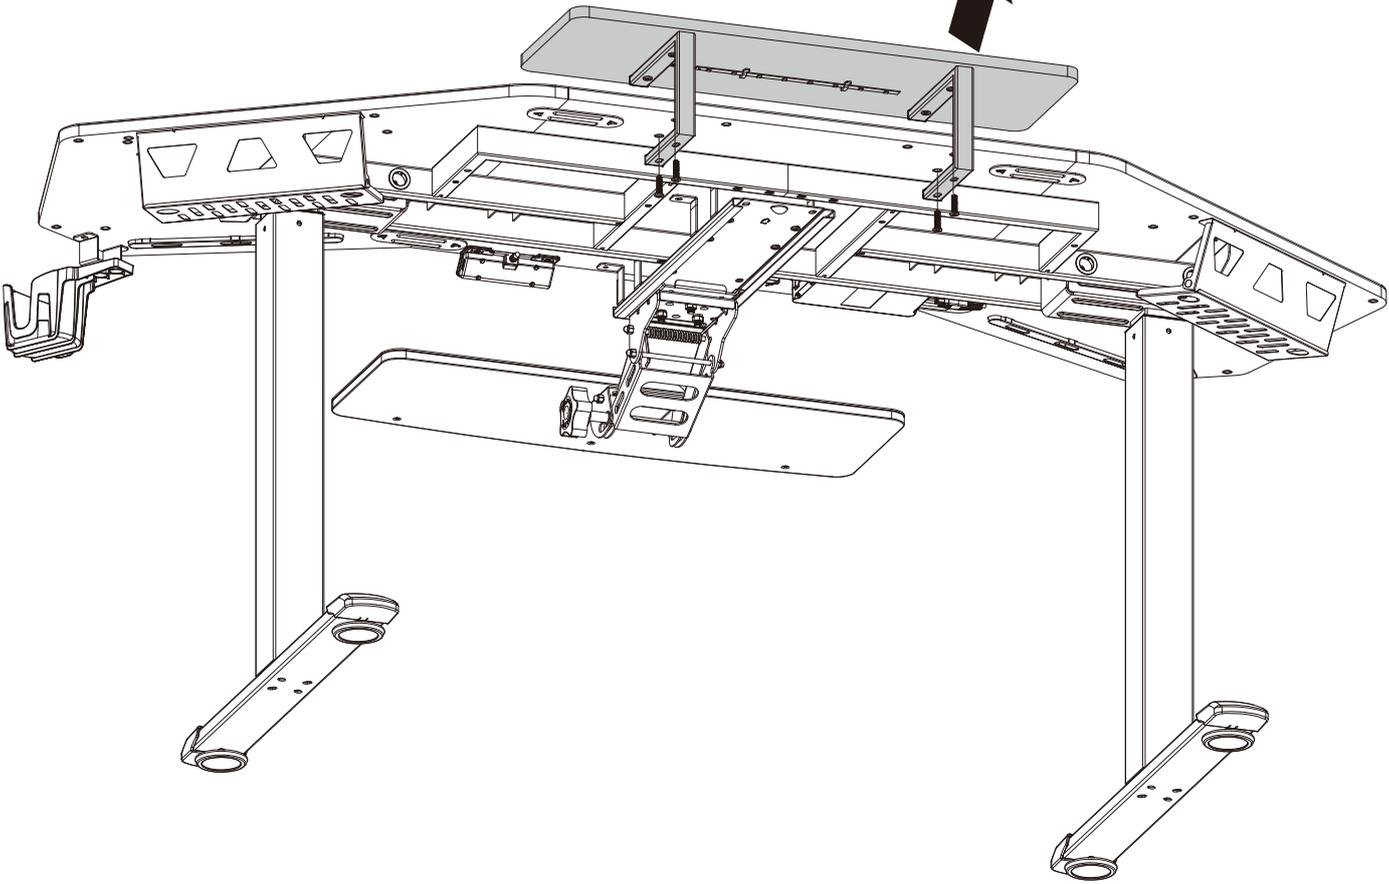
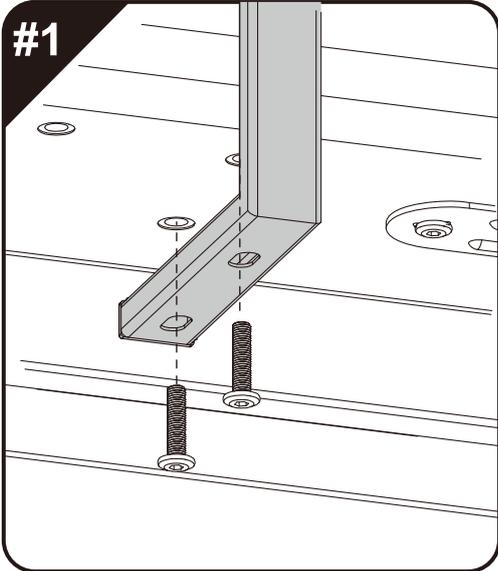
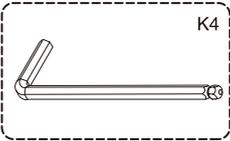
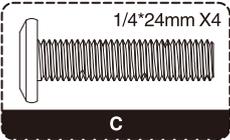


STEP 26




LEFT/RIGHT SHELF INSTALLATION PLAN I

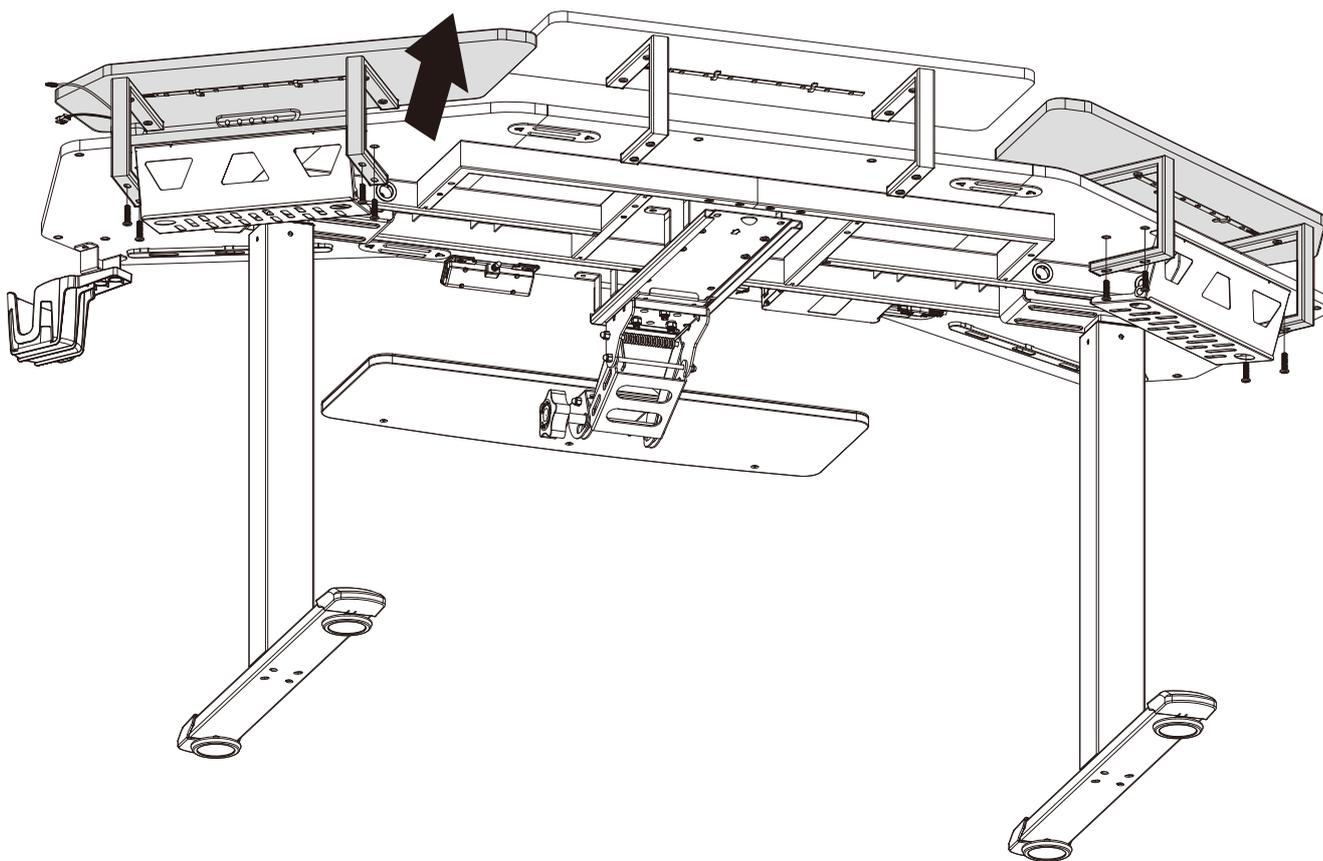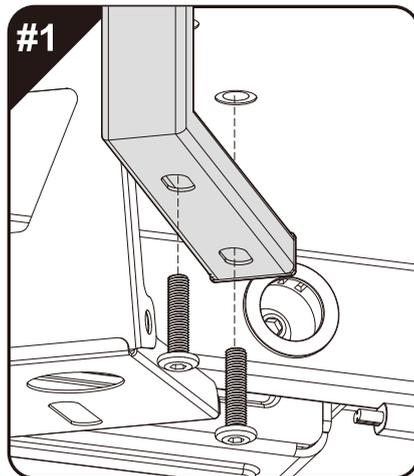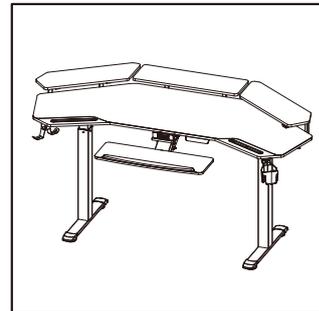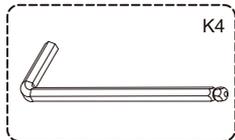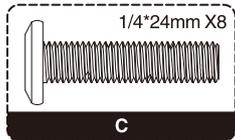






LEFT/RIGHT SHELF INSTALLATION PLAN II

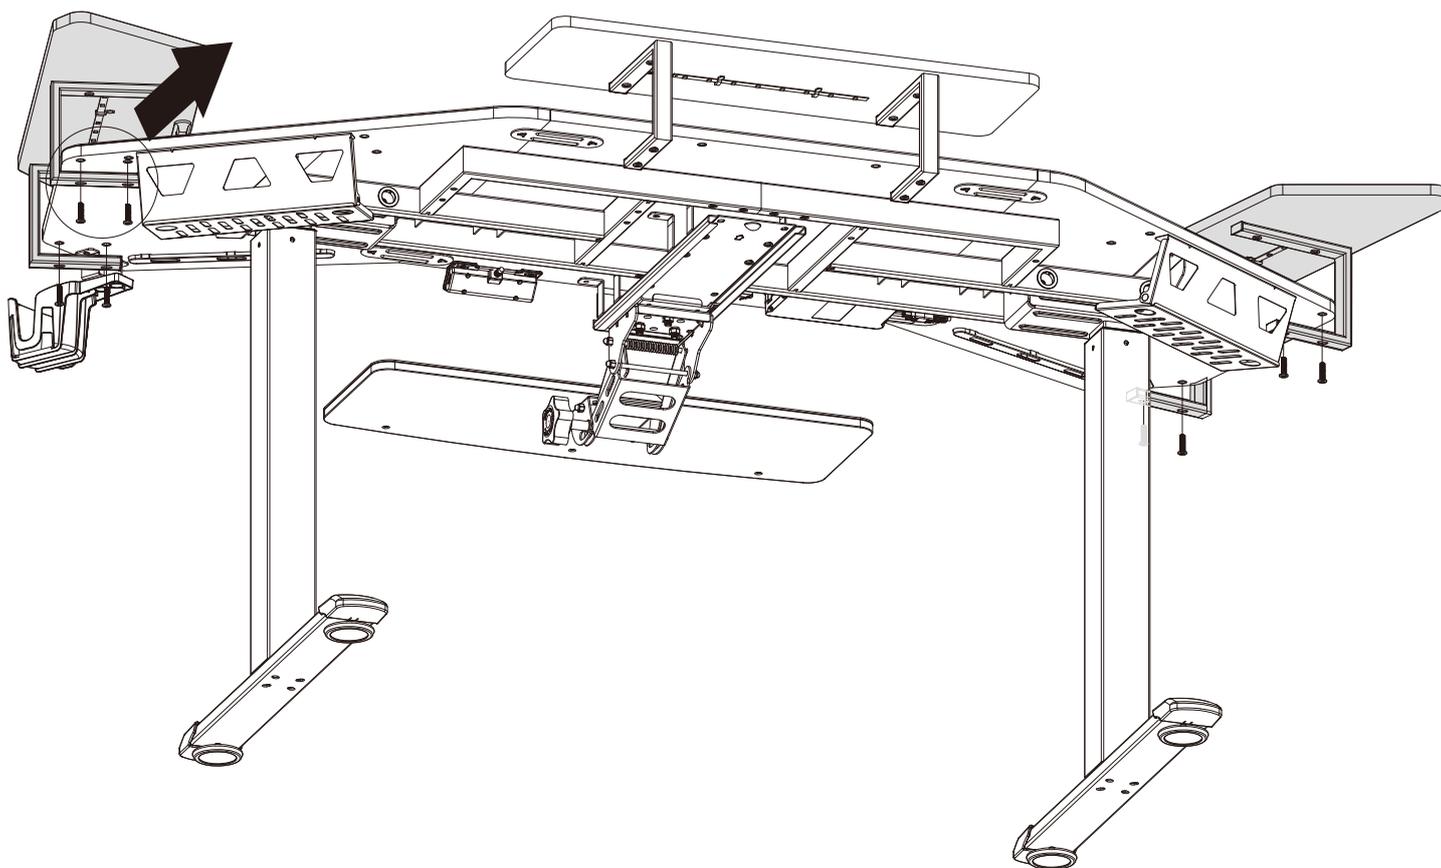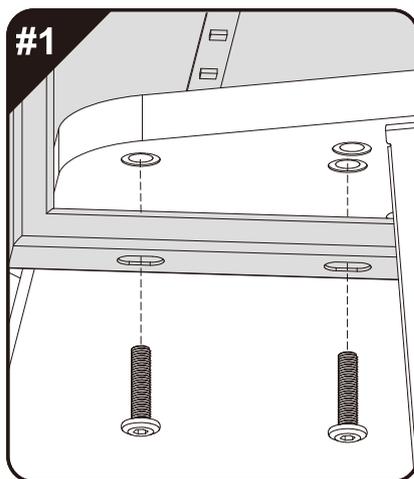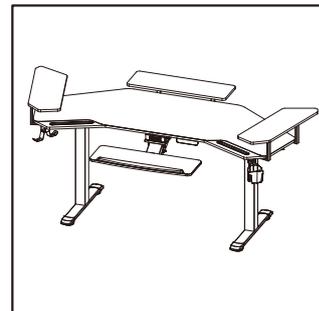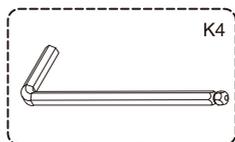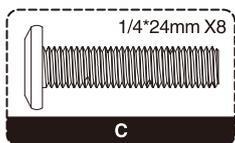









STEP 27

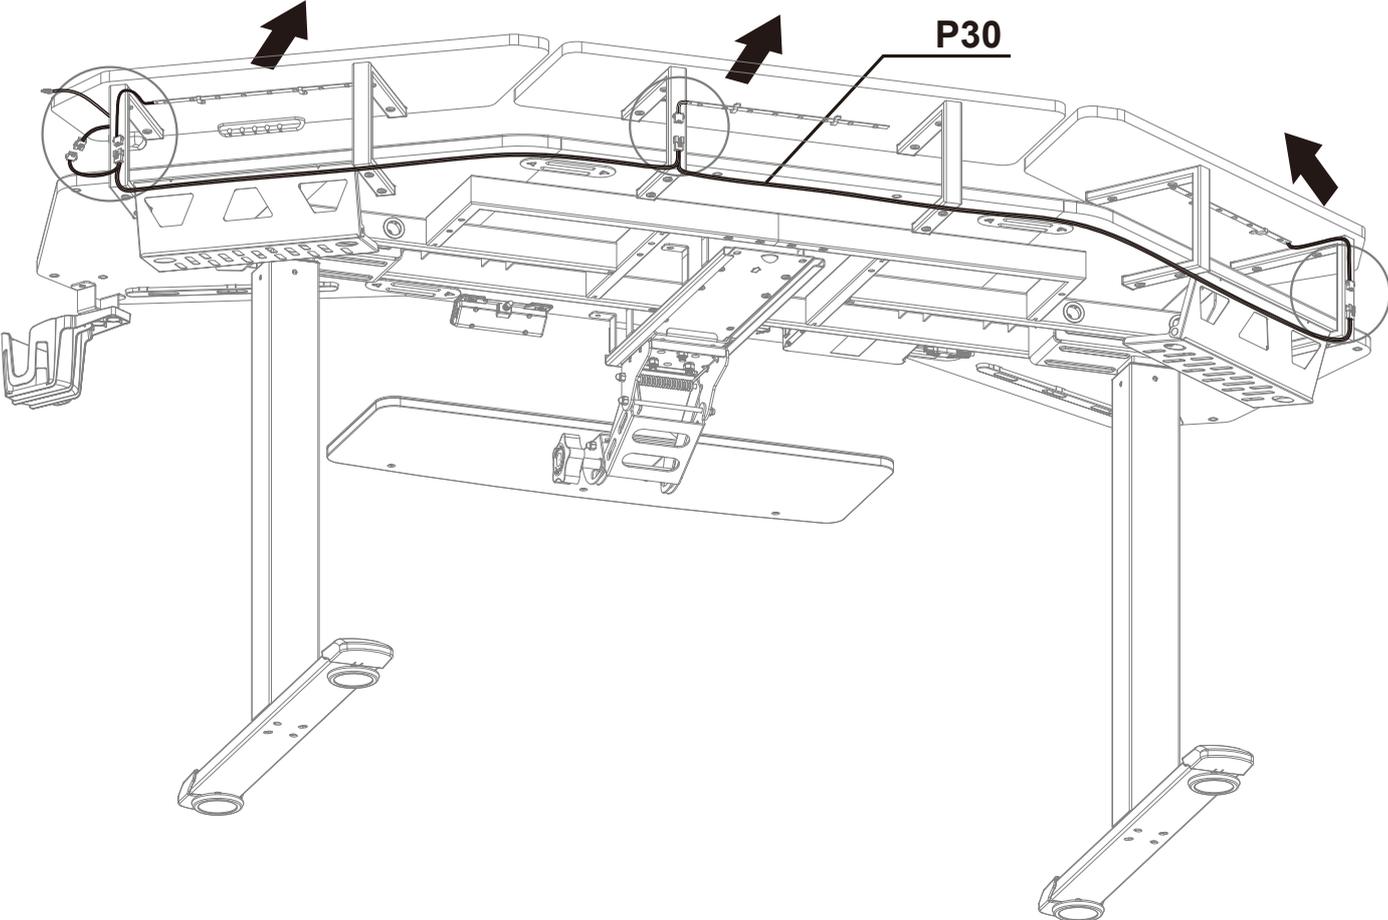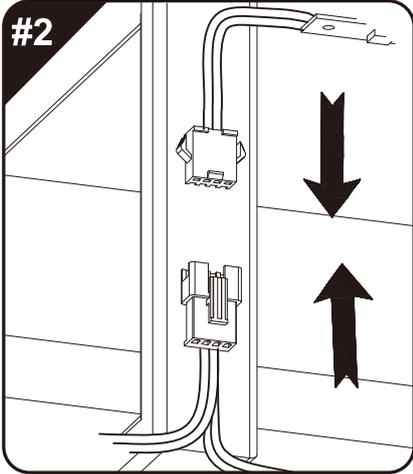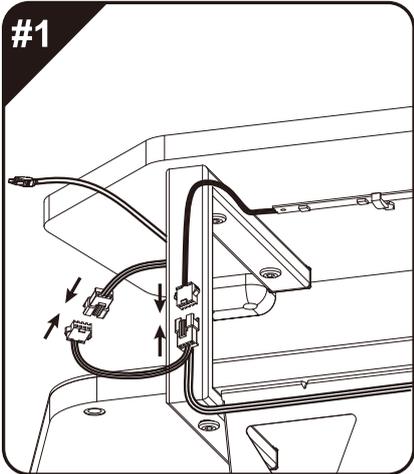


STEP 28

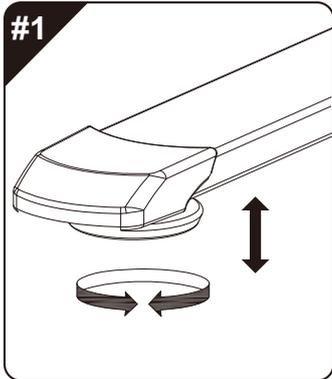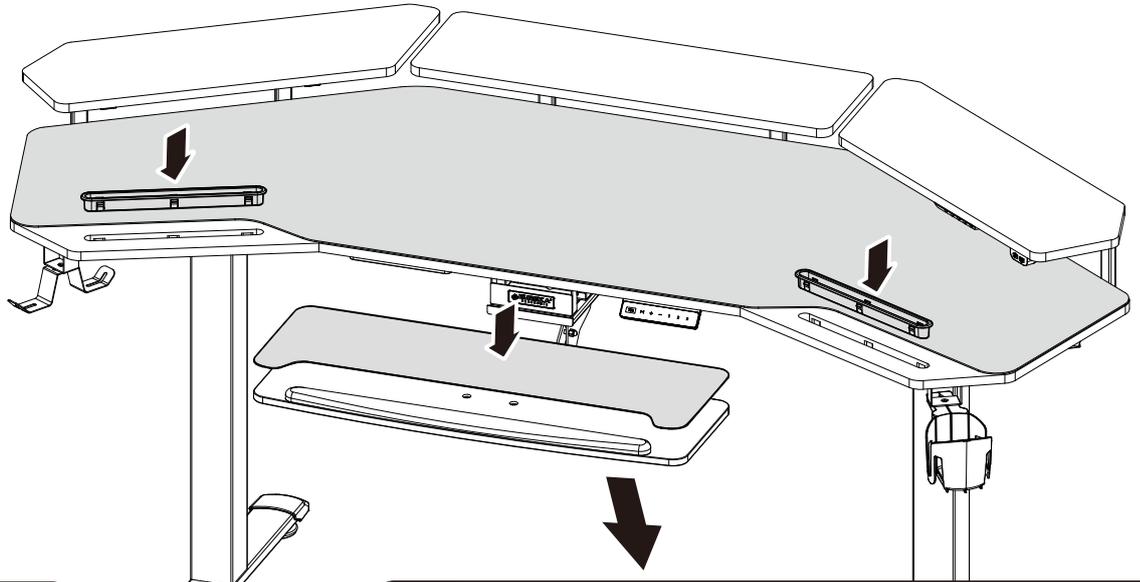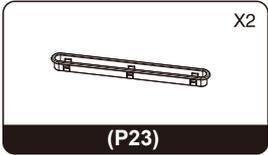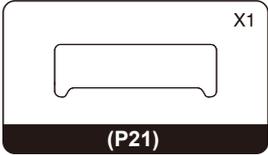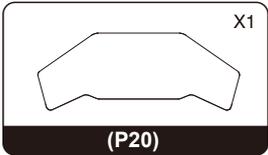

Adjust the height until the desk is level.

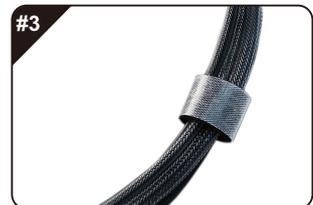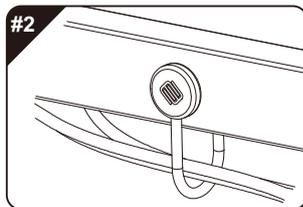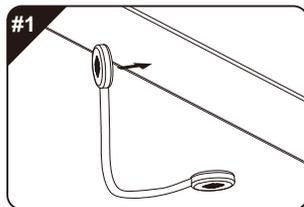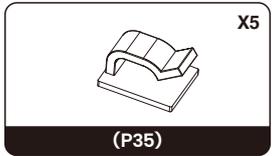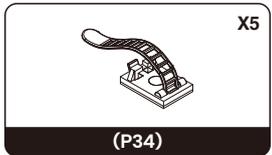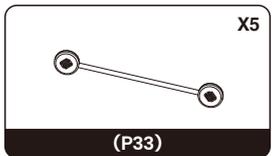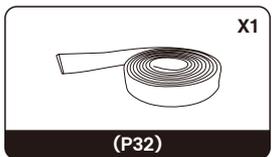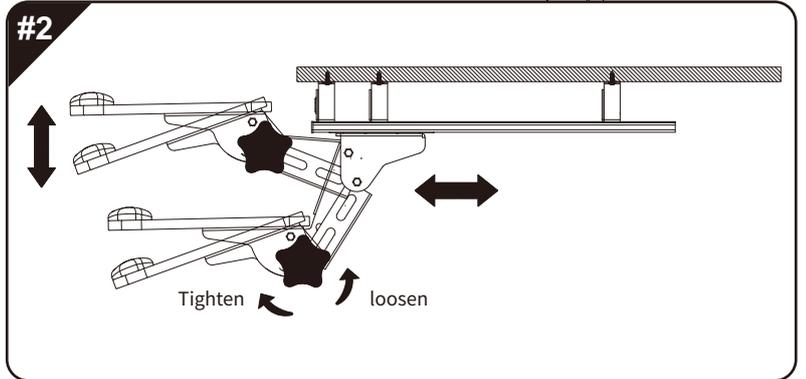

LIGHTS OPERATING INSTRUCTIONS

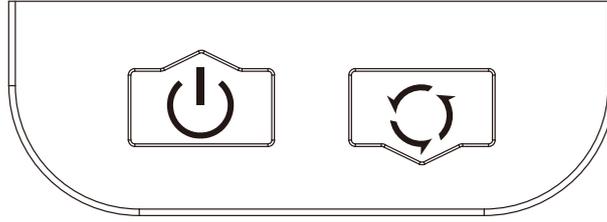


1. Change lighting modes: when the desk is on, press "↻" to change modes. Each press will lead to a different mode. 14 modes are available.
2. Turn on/off the lights: when the lights are on, you can turn them off by pressing "⏻" for about 3-4 seconds. When the lights are off, you can turn them on by pressing "⏻".
3. Memorize lighting modes: when the lights are off, the last lighting mode will be memorized automatically by the system. The next time when the lights are turned on, they will enter the memorized mode automatically.
4. Illuminating function: when the desk is on, press "↻" for about 3-4 seconds and the lights will enter the light mode.

OPERATING INSTRUCTIONS


INITIALIZATION OPERATION

When the system is abnormal, or the hand controller displays "RSE", it is necessary to initialize the lifting table. The initialization operation is to press and hold the "-" button until the motor stops and release the button, and then press "-" for 5 seconds to enter automatically. Initialization mode. Do not release the "-" button at this time, if you release the "-" button, the system stops the initialization mode. After the initialization is completed, the buzzer will sound a prompt, indicating that the initialization is successful.

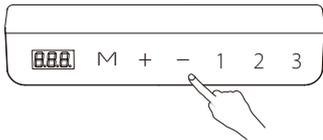

UP AND DOWN KEY OPERATION

When the "+" key is pressed, the desktop runs upward until it reaches the highest point of the desktop.
When the "-" key is pressed, the desktop runs downward until it reaches the lowest point of the desktop.
When the "+" or "-" key is clicked, the desktop moves a small distance accordingly to realize jogging.

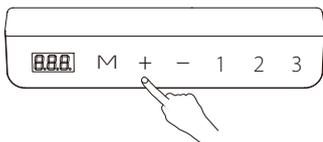


LOCATION STORAGE AND MEMORY OPERATION

The hand controller in the picture above can store 3 memory points. The storage method is as follows. When running to a specific point, press the "M" button. The digital tube will display "S-" and "-" will flash. At this time, press "1-3" key to store the current position to the corresponding label.


In fully automatic mode (S-6 is 1), if you want to run to the memory point, you only need to click the key corresponding to the storage location. At this time, the digital tube will display the height of the corresponding key position, and then automatically run to the location stored. Corresponding to the height, when running, any key can stop the system.

In semi-automatic mode (S-6 is 0), if you want to run to the memory point, you only need to keep pressing the key corresponding to the storage position. At this time, the digital tube will display the height of the corresponding key position, and then automatically run to the stored height. While running, release the button to stop the system.

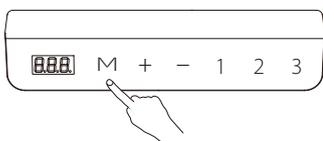

HIGH AND LOW LIMIT SETTING

The system supports desktop height limit. The operation method is: when you want to set the current height as the desktop limit height, press and hold the "+" and "-" buttons at the corresponding height for 5 seconds. At this time, you will hear a buzzer sound, indicating Restricted location storage successful. When the table is in the upper half of its travel, the upper position is restricted. When the table top is in the lower half of its travel, the lower position is restricted.

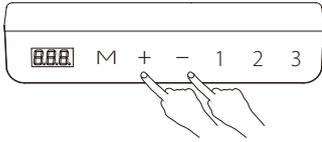


Cancel height limit Method 1: Reset the system at this time, and the system height limit will be cancelled. Method 2: Let the desktop run to the limit high or low point. At this time, press and hold the "+" and "-" buttons at the same time for 5 seconds. You will hear a buzzer sound, indicating that the limit position is successfully cancelled.

LOCK AND UNLOCK


Lock: Press and hold "M" and "+" at the same time for 5 seconds. When the digital tube displays "Loc", it means that the system has been locked and the system cannot be raised or lowered.

Unlock: Press and hold "M" and "-" at the same time for 5 seconds. When the digital display changes from "Loc" to normal digital display, it means the system has been unlocked.

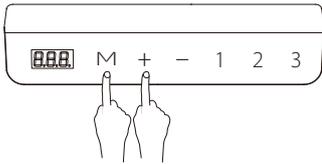

RESET

When the system is replaced with a new table leg, or the parameters need to be restored to the factory settings, press and hold "+" and "-" at the same time for 10 seconds to hear a long buzzer prompt, and the parameters are restored to the factory settings. , forced initialization.

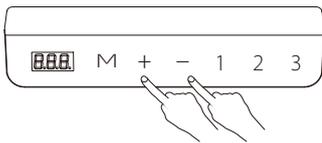


INTERNAL PARAMETERS AND INSTALLATION DISTANCE SETTINGS

By pressing and holding the "M" key on the hand controller for 5 seconds, you can enter the setting interface, where "S-x" is displayed and "x" flashes, where "x" is the parameter group. At this time, press "M" to enter the parameter group to set the corresponding parameters, and press "+" or "-" to switch parameter groups. After setting the parameters, press the "M" key to return to the running interface.


The parameters that can be set are as follows:

- a. "S-1" 0 means metric display, 1 means imperial display.
- b. "S-2" indicates the sensor's stopping accuracy when encountering obstruction, 0 indicates off, 8 is the most sensitive, and 1 is the least sensitive.
- c. "S-3" indicates the accuracy of stopping the upward current when encountering resistance, 0 indicates shutdown, 8 is the most sensitive, and 1 is the least sensitive.
- d. "S-4" indicates the accuracy of stopping the downward current when encountering resistance, 0 indicates shutdown, 8 is the most sensitive, and 1 is the least sensitive.
- e. "S-5" indicates the installation distance in cm.
- f. "S-6" 0 means pressing the storage position key to run and then releasing it to stop running, 1 means pressing the storage position key to automatically run to the stored position and any key to stop.
- g. "S-7" means 0 means turning off the 2-minute and 18-minute working system and relying only on the temperature protection controller, and 1 means turning on the 2-minute and 18-minute working system.
- h. "S-8" means the left and right tilt of the desktop, sensitivity, to prevent the screw rod from breaking or other causes of inconsistent heights of the two table legs. 0 means off, 1-8 means a tilt angle of 0.5-4° respectively.

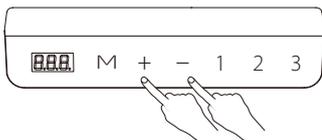

DISTRIBUTION NETWORK


Enter the network distribution mode by pressing and holding the "M" key on the hand controller for 10 seconds. At this time, the device can be found in the Add Device section of the APP interface.

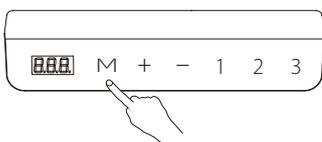

ERROR CODE

ERROR CODES	CAUSE	SOLUTION
E01、 E06、 E07	Faulty power supply of the control box	Unplug the desk and plug it back in after 10 seconds. If the code still exists, the control box is faulty. Please contact our local customer service team for replacement parts.
E02	Unbalanced legs	Reinitialize
E04	Hand controller connection or communication error	Check hand control cable
E05	stop in case of obstruction	Release the button and run again
E08	Desktop tilts protection	Reinitialize
HOT	Overheat protection	Please wait for the temperature to drop before use.
E11、 E13、 E21、 E23	Loose connection between the legs and the control box	Check the connection cable
E12、 E22、 E42、 E43	Overload or motor failure	Replace control box
E14、 E17、 E24、 E27	Desk leg position sensor abnormality	Press the "+" key or the "-" key again. If the problem persists, please check whether the plug wire of the table leg is inserted in place.
E15、 E25	Desk leg failure	If it cannot be eliminated after restarting, replace the desk legs.
E16、 E26	Leg Stuck	Reinitialize
E18、 E28	The load is too large, overloaded	Reduce load

DOWNLOAD AND INSTALL MOBILE APP

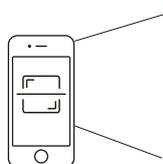

Eureka App



Apple store



Google Play

This product is controlled by a mobile app, which is available on both Android and iOS devices.

1. Apple phones: require iOS 10.0 or later.
2. Android phones: require Android 5.0 or later.
3. Please search for "Eureka Smart" in the App Store.
4. Please search for "Eureka Smart" or "Eureka" in the Google Play.
5. Scan the QR code below to download the app.
6. Open the "Eureka" app and sign up for an account or log in with your existing account.
7. After downloading and installing the APP, when you encounter problems when using the APP, you can check the "Me" page of the APP -> "FAQ and Feedback".

CONNECT TO THE APP




PREPARATION :

Turn on the device and open the app. Please ensure that your phone and the device are connected to the same Wi-Fi.


CONNECT THE CONTROLLER :

1 Enter the network configuration mode by pressing and holding the "M" key on the controller for 10 seconds. At this time, the device can be found in the Add Device section of the app interface.

2 Tap "+" on the app and add the device.

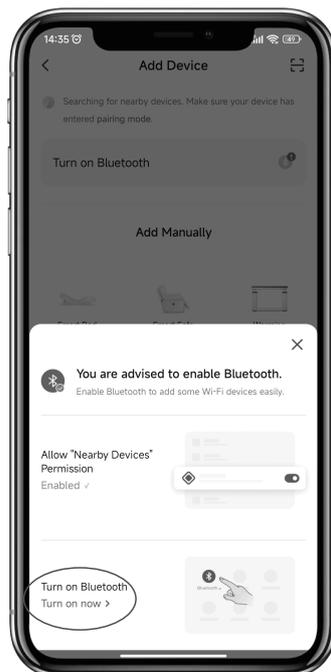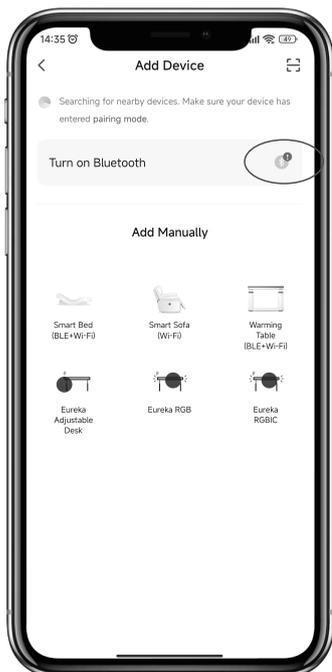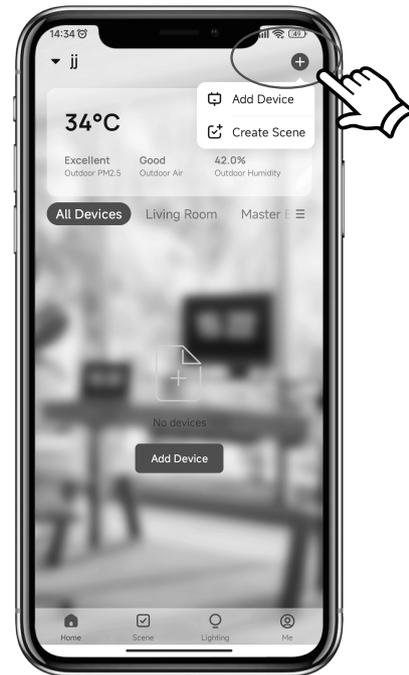

3 Make sure that you turn on Bluetooth on your phone beforehand. Otherwise, when you open the app, a pop-up window will appear inviting you to enable Bluetooth. Then, select "Allow".

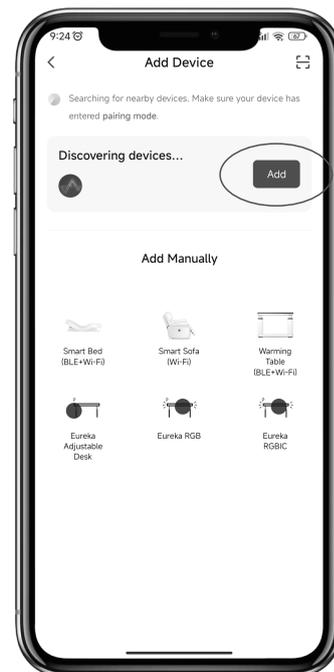

4 Select "Add" to continue to the next step. Then, enter your Wi-Fi password and select "Confirm". It will start connecting. You need to wait until "Added successfully" appears and select "Finished".