
Branson Natural Hamper

SKU# 2256005001

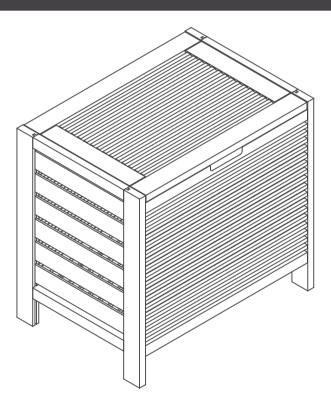




WARNING: To avoid serious personal injury:

- · Carefully and strictly followsssembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children.
 Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

WB-20428-CN

PART LIST

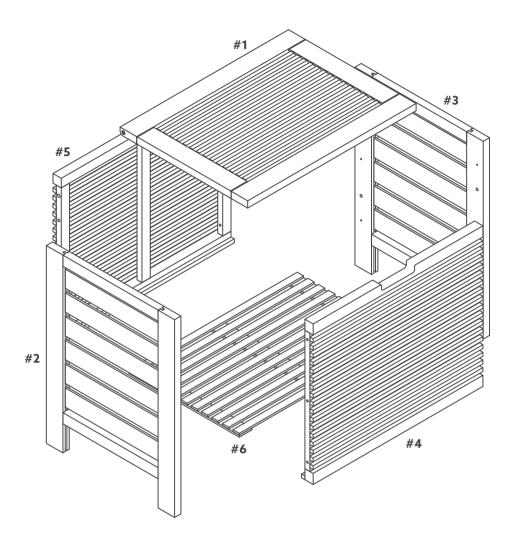

SPARE PARTS - AVAILABLE FOR REPLACEMENT


#1	TOP PANEL	01
#2	LEFT PANEL	01
#3	RIGHT PANEL	01
#4	FRONT PANEL	01
#5	BACK PANEL	01
#6	BOTTOM PANEL	01

HARDWARE LIST

Α		SCREW (Ø4 X 30mm)	12
В	9	PIN LOCK	02
С		WOOD DOWEL (Ø6 X 30mm)	08
D		PIN	02
Е	THE PARTY OF THE P	LID SUPPORT	01
F		SCREW (Ø4 X 12mm)	04

NOTE: Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.

 TOOLS REQUIRED




IMPORTANT:

- 1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
- 2. Do not over tighten screws and bolts to avoid stripping.
- 3. Please use hand tools to assemble this product. Do not use power tools.
- 4. For ease of assembly, two adults are recommended


1.

2.

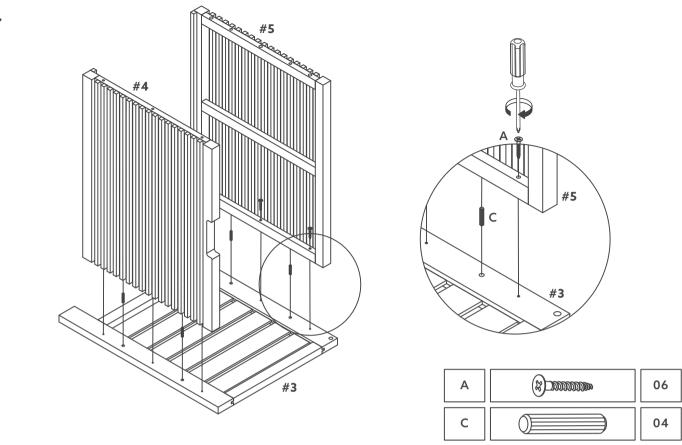


#1

#3

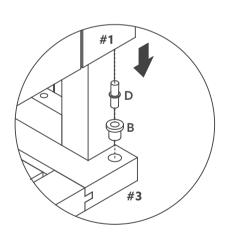


В	01
D	01

3.

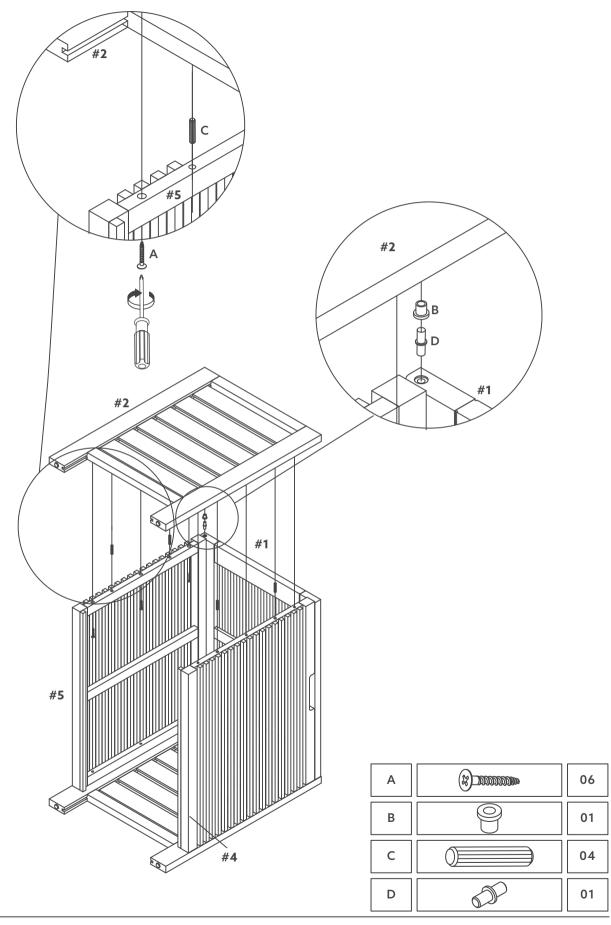

4.

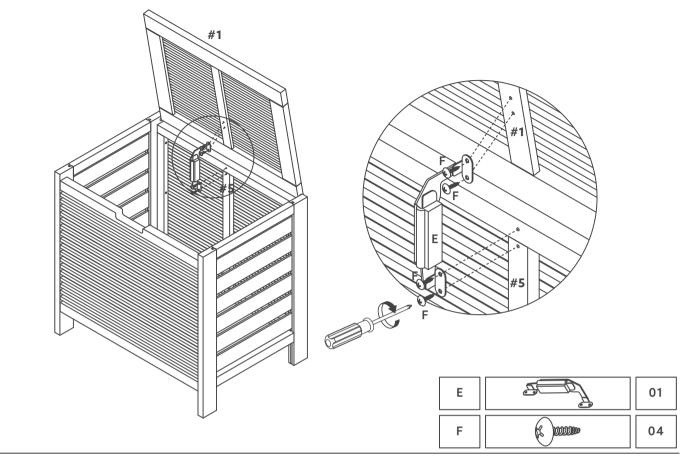

5.

