

# **ELSA WOOD KITCHEN CART**

SKU# 2022094001 SKU# 2022094002

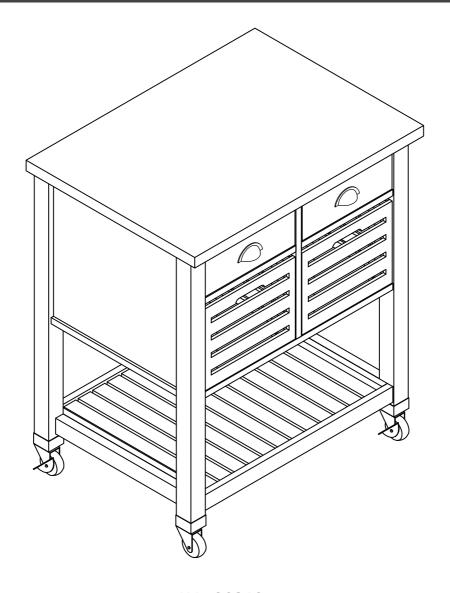

HAI-20368

## **PART LIST**

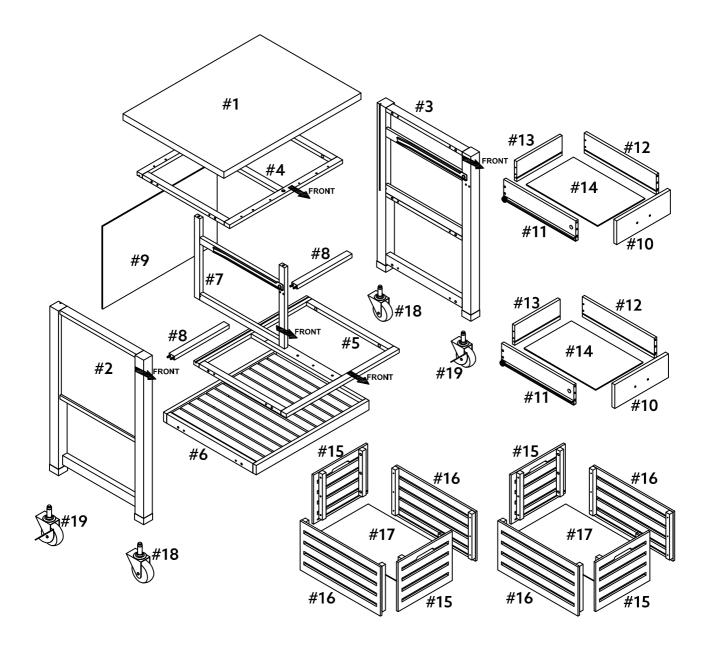

#1	TOP PANEL	01
#2	LEFT FRAME	
#3	RIGHT FRAME	
#4	TOP FRAME	01

## **PART LIST**

#5	SHELF FRAME	
#6	BOTTOM FRAME	
#7	DIVISION FRAME	
#8	RAIL	
#9	BACK PANEL	
#10	DRAWER FRONT	
#11	DRAWER LEFT	
#12	DRAWER RIGHT	
#13	DRAWER BACK	
#14	DRAWER BOTTOM	
#15	BASKET FRONT & BACK	
#16	BASKET SIDE	
#17	BASKET BOTTOM	
#18	CASTER	
#19	CASTER WITH BRAKE	
00	HARDWARE PACK	

### **HARDWARE LIST**

Α	(%)	SCREW (Ø8X25MM)	32
В		WOOD DOWEL (Ø6X25MM)	26
С		CAM LOCK	04
D		CAM BOLT	08
E	(Ma)	NUT	05
F		KNOB	02
G		BOLT (Ø4X12MM)	04
Н	(a)	ALLEN BOLT (Ø1/4X30MM)	21


**NOTE:** Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


### **TOOLS REQUIRED**


ALLEN KEY	SUPPLIED
PHILIPS SCREWDRIVER	NOT SUPPLIED


#### **IMPORTANT:**


- 1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
- 2. Do not over tighten screws and bolts to avoid stripping.
- 3. Please use hand tools to assemble this product. Do not use power tools.
- 4. For ease of assembly, two adults are recommended.

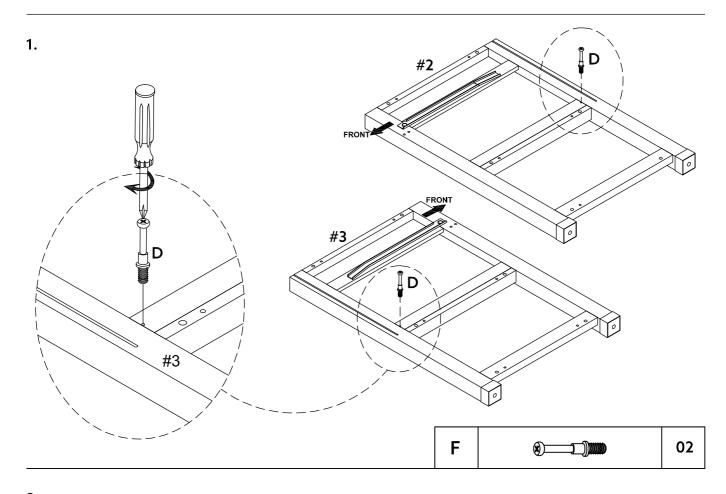

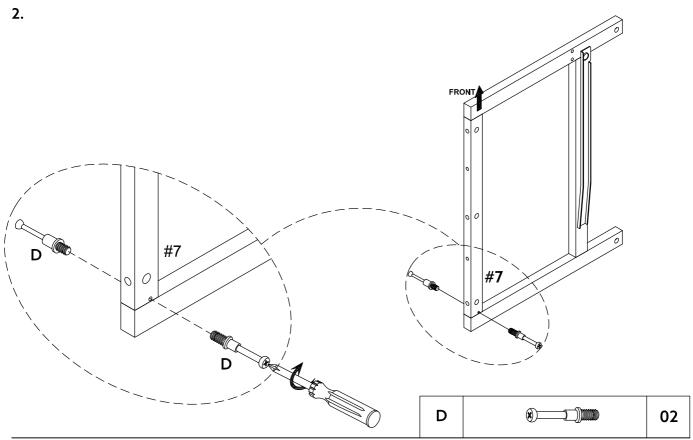

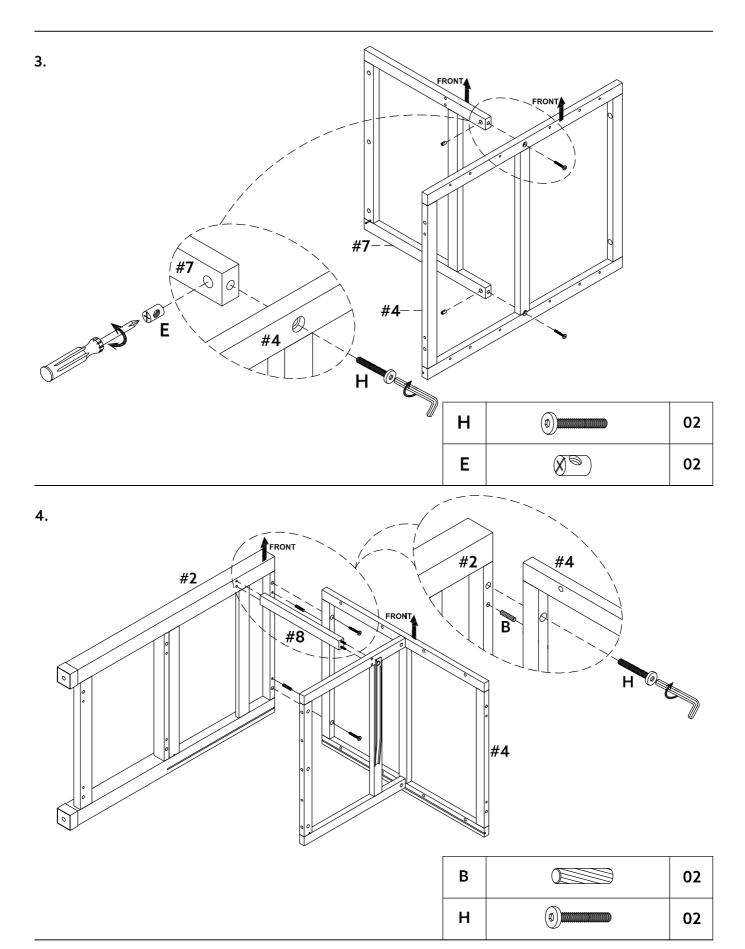

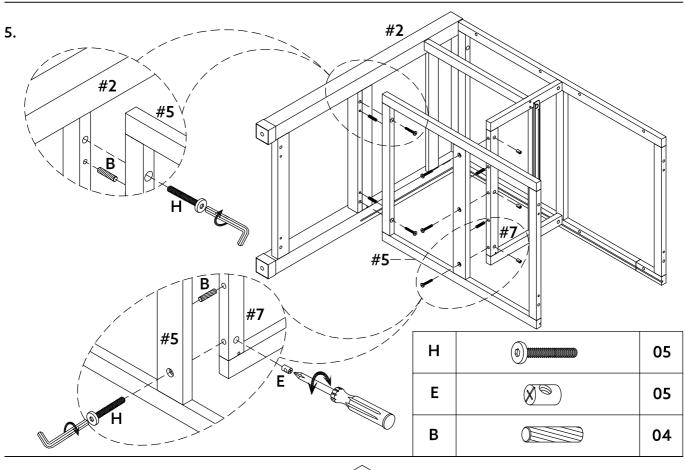

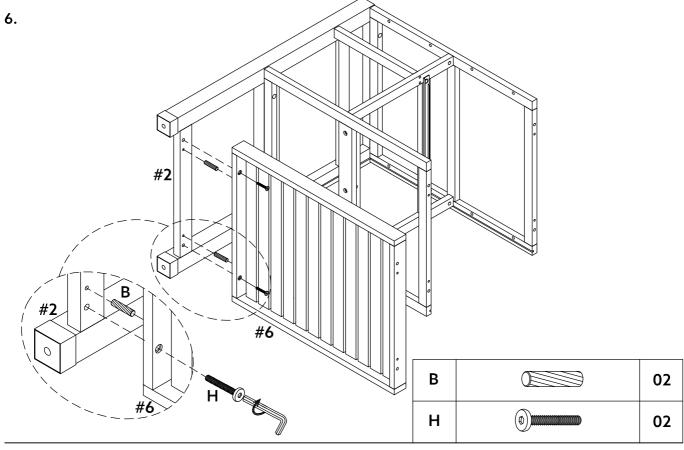

7.

