 


Rowan 2 Drawer Desk

SKU# 2258064001/2258064002

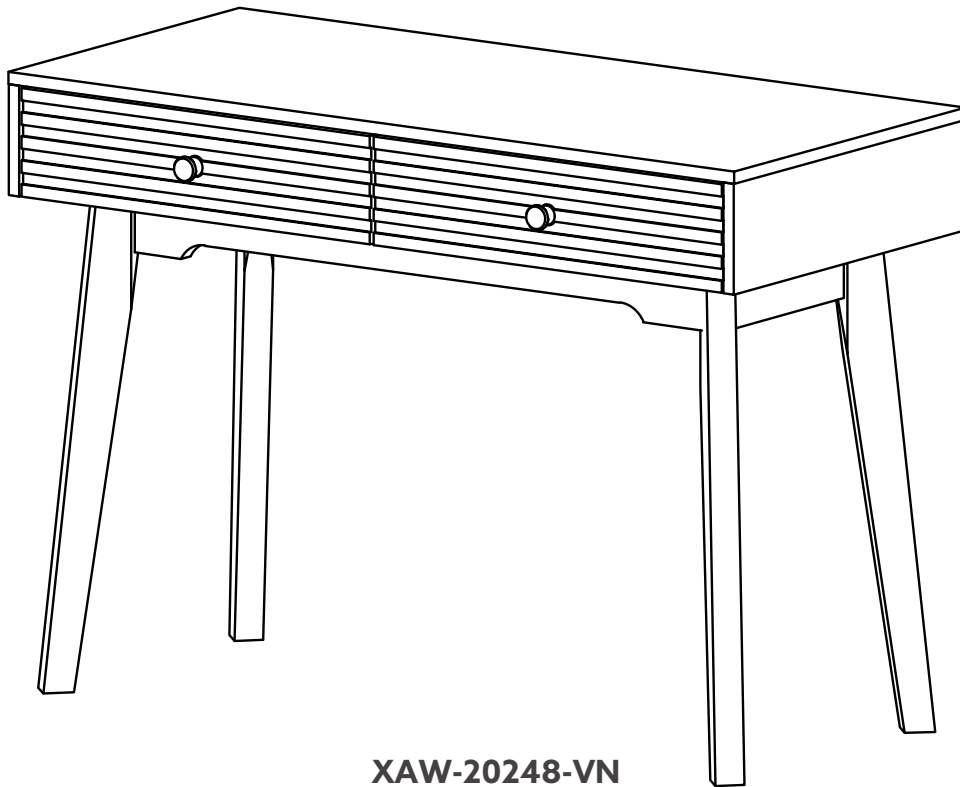 


XAW-20248-VN

 WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

PART LIST

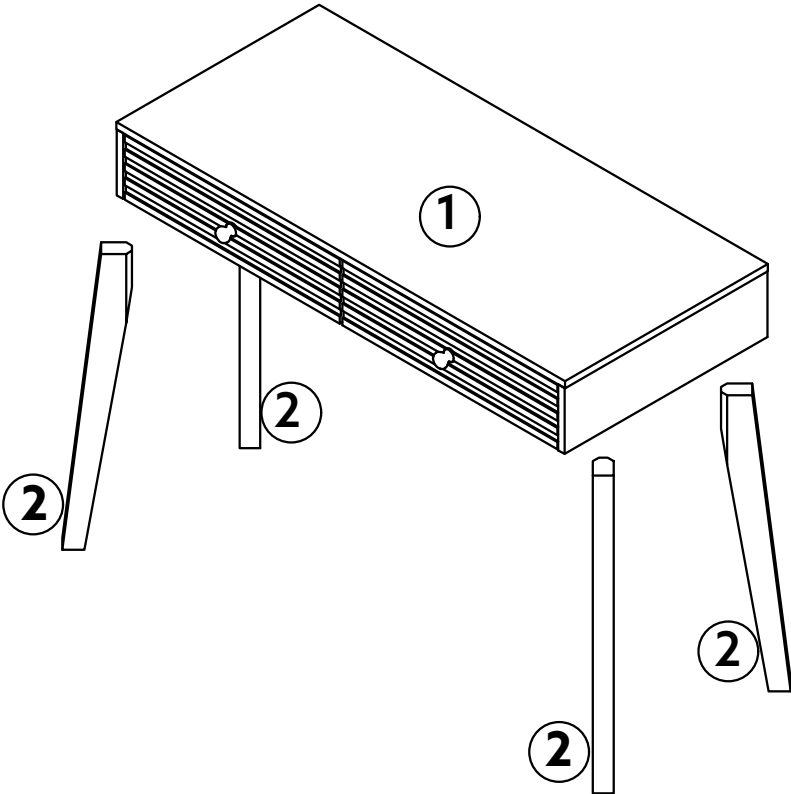

#1	TOP FRAME	01
#2	LEGS	04
#0	HARDWARE	01

HARDWARE LIST

H1		BOLT / BOULON/ PERNO (Ø1/4" x 2-1/2"L)	08
H2		FLAT WASHER / RONDELLE PLATE / ARANDELA PLANA (Ø1/4")	08
H3		SPRING WASHER / RONDELLE À RESSORT / ARANDELA ELÁSTICA (Ø1/4")	08

NOTE: Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.

 
TOOLS REQUIRED

ALLEN KEY		SUPPLIED
-----------	--	----------

IMPORTANT:



1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. For ease of assembly, two adults are recommended

1.




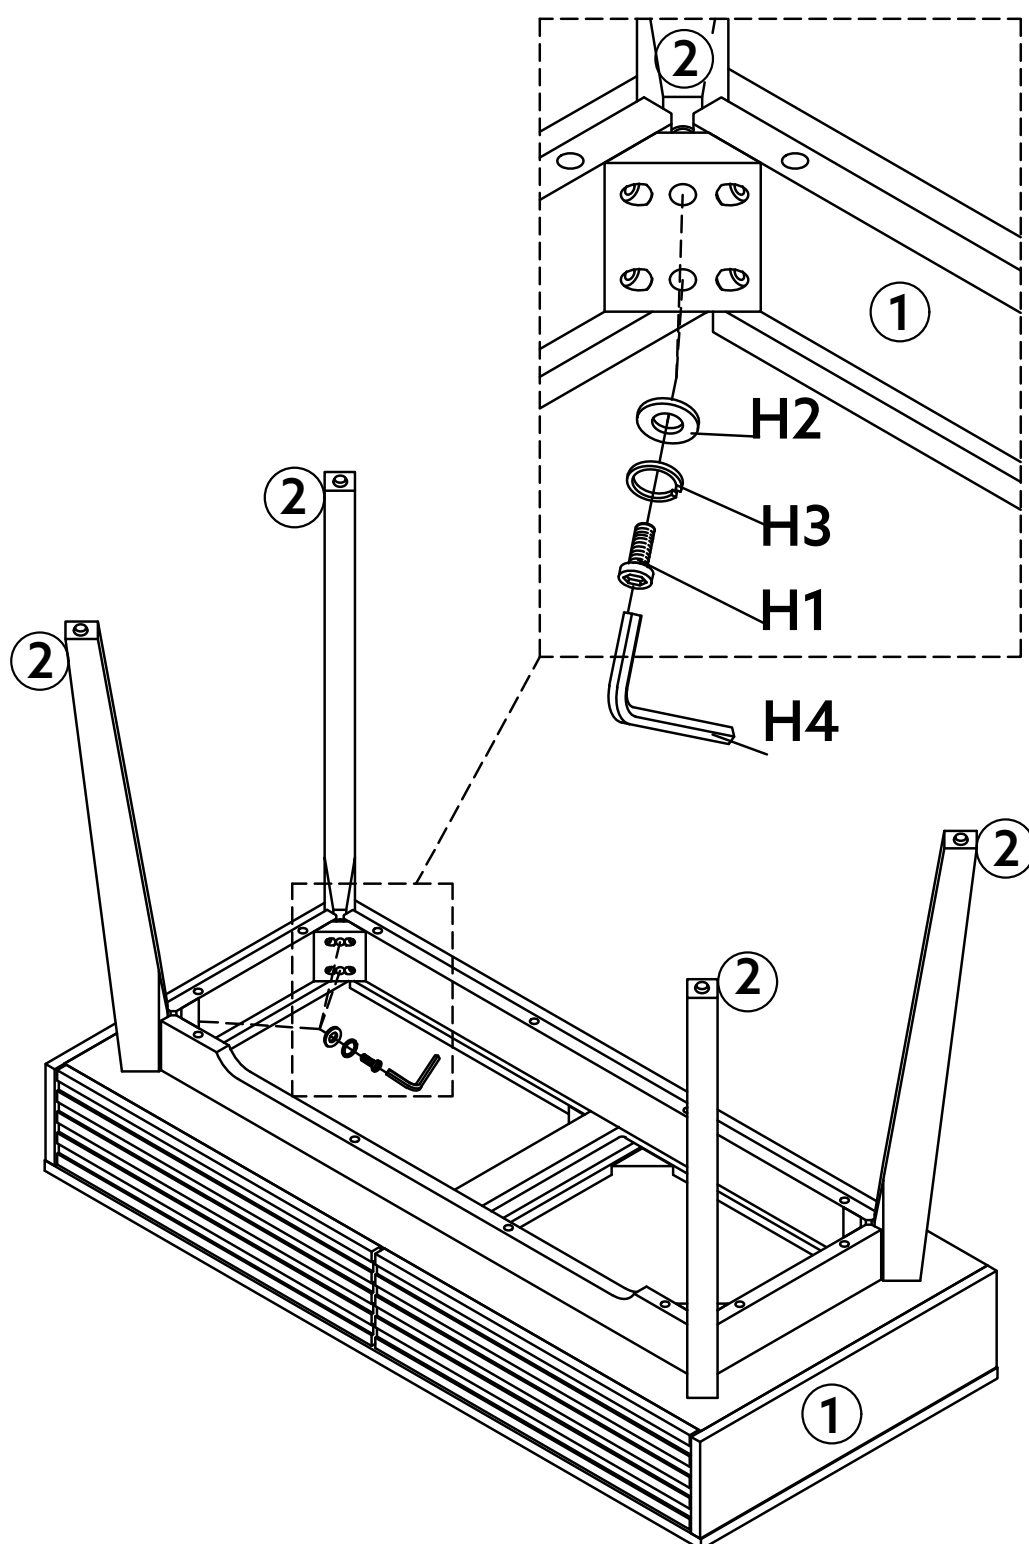


H1		08
H2		08
H3		08

  2.

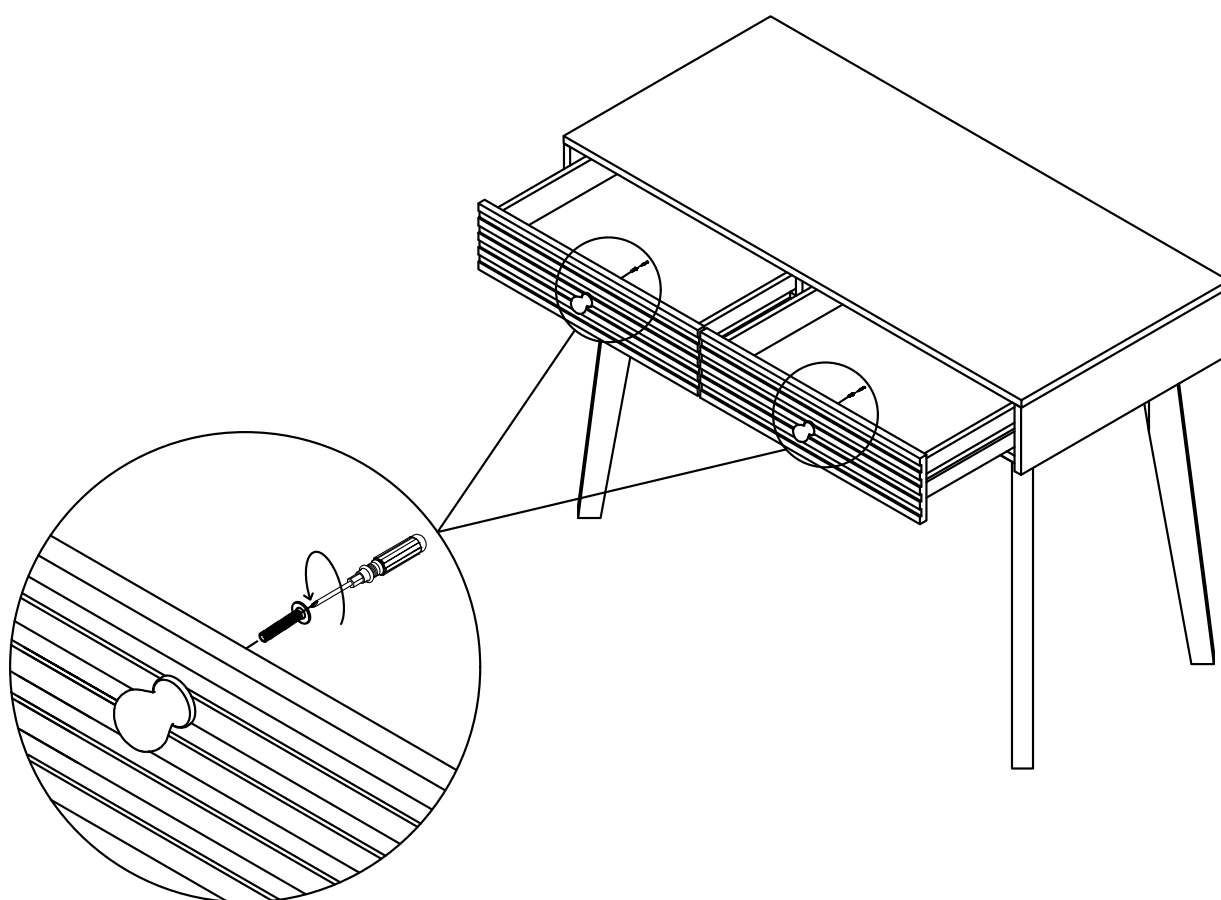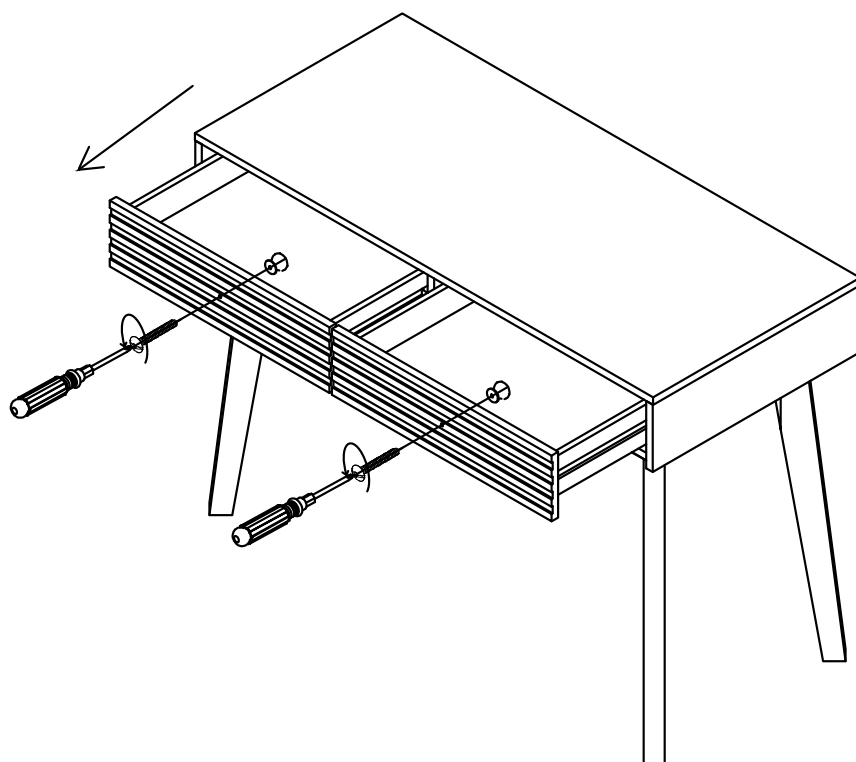


⚠ WARNING		⚠ AVERTISSEMENT		⚠ ADVERTENCIA	
	Children have died from furniture tipover. To reduce the risk of furniture tipover:		Des enfants sont morts quand un meuble s'est renversé sur eux. Pour prévenir le basculement du meuble:		Un mueble que se vuelca puede provocar la muerte de un niño. Para reducir el riesgo de volcadura del mueble:
	• ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, door, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. This is a permanent label. Do not remove !		• Installez TOUJOURS le dispositif fourni pour prévenir le basculement. • Ne placez JAMAIS un téléviseur sur ce produit. • Ne laissez JAMAIS un enfant se tenir debout ou monter sur un tiroir, une porte ou une tablette, ni s'y accrocher. • N'ouvrez JAMAIS Plus d'un tiroir à la fois. • Placez les objets les plus lourds dans les tiroirs les plus bas. Cette étiquette est permanente. Ne l'enlevez pas!		• Instale SIEMPRE los dispositivos antivuelco proporcionados. • NUNCA coloque un televisor sobre este mueble. • NUNCA permita que un niño suba sobre un cajón, una puerta o un estante nique se cuelgue de dichas piezas. • NUNCA abra más de un cajón a la vez. • Guarde los artículos más pesados en los cajones inferiores. Esta etiqueta es permanente. No la quite.

    
				
Strap A (1pc)	Mounting Bracket B (2pcs)	Wall Anchor C (2pcs)	Short Screw Ø3.5X15mm D (2pcs)	Long Screw Ø4X38mm E (2pcs)

Step 1: Put wall anchor (C) into the wall and attach mounting bracket (B) to the wall with long screw (E).

 
PLEASE NOTE: For your safety, to prevent the danger of this unit tipping over, it is important that the wall anchors are properly attached.

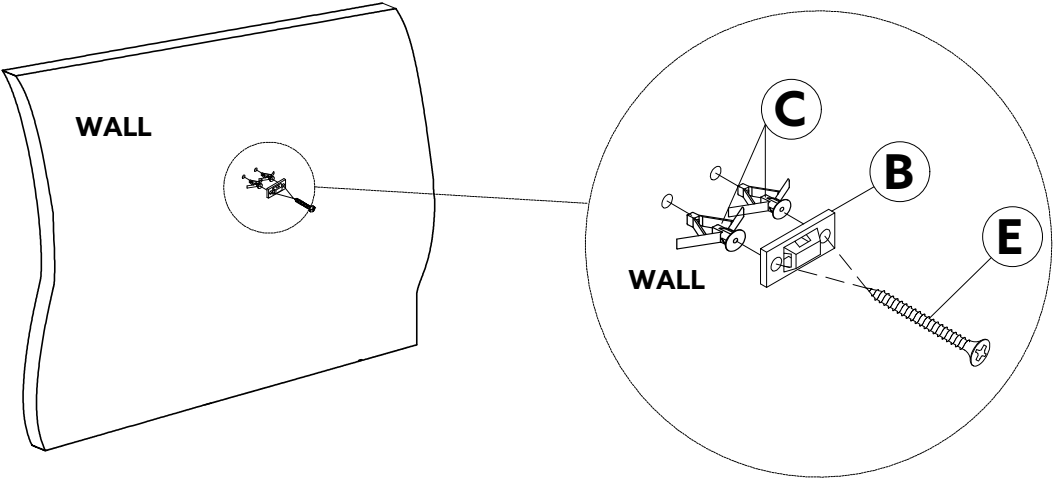

 Step 2: Attach mounting bracket (B) to the back of the product with short screw (D).

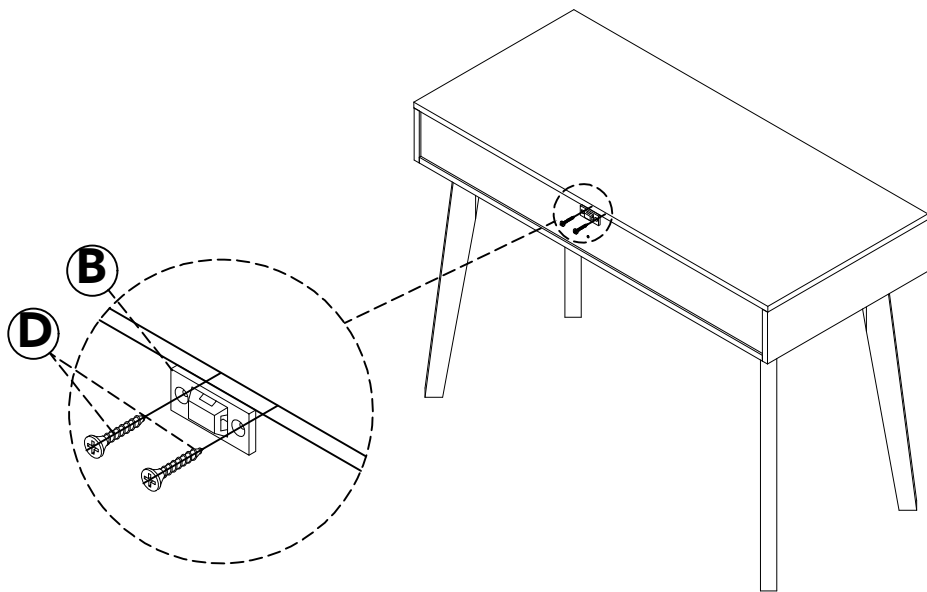

 Step 3 : Slide the strap (A) through the mounting brackets and pull to tighten the product snug against the wall.

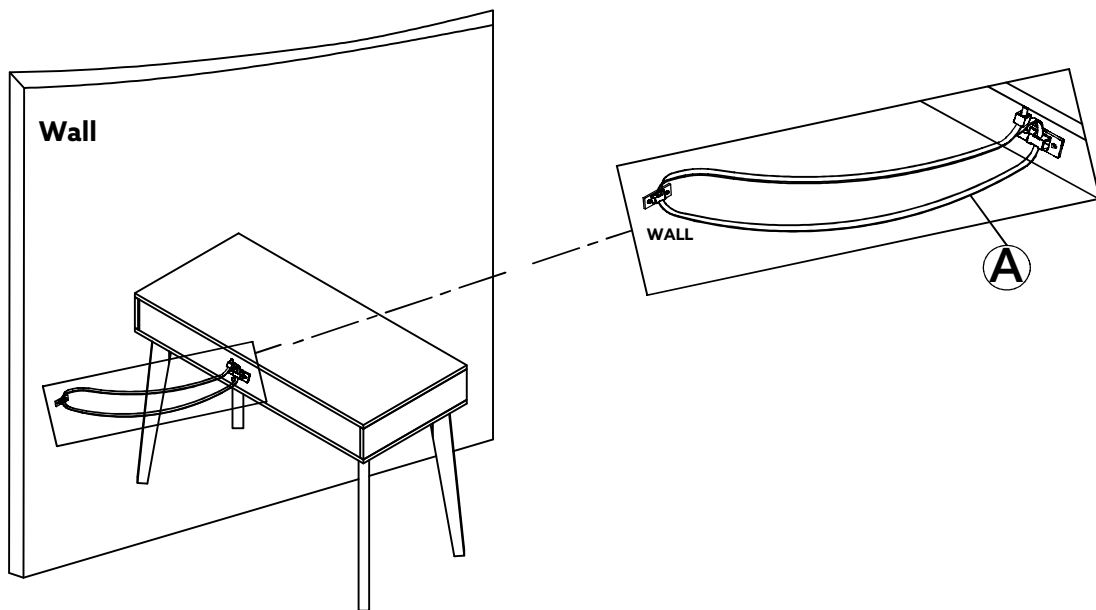

ASSEMBLY COMPLETED

