



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

ITEM NO.:LSO-23766

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack parts from carton, remove covering from parts and check that all parts are included as shown in the illustration.
2. Secure the neck (B) onto the Lamp body (A).
3. Place the shade(C) onto the lamp socket for the neck (B) and secure with socket ring(D) until tightened.
4. Take out a LED light bulb (E) and operate the bulb brightness to suit your needs. (Please refer to the overleaf for the LED Bulb User's Guide.)
5. Install the light bulb(E) into the lamp socket (B) and enjoy your new outdoor lamp.

USE A 5.6W (MAXIMUM) LED/BATTERY (INCLUDED)

※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

