 **WARNING: To avoid serious personal injury:**





- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


ASSEMBLY INSTRUCTIONS

 
 
 
 

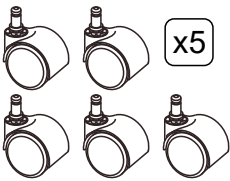 
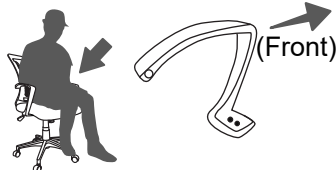 
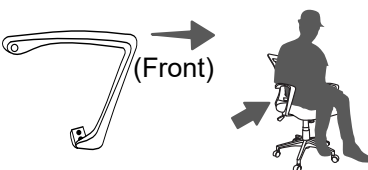 
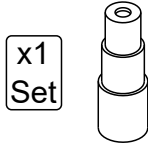 
REV.1-FT-8910-0625



Thank you for purchasing our product!

Hardware			
No.	Item		Qty.
I	M6x20		4 Pcs
J	M6x25		4 Pcs
K	M6x35		6 Pcs
L	Ø6mm x Ø16mm x 1mm		12 Pcs

Tools (Included)	
M5, 70mm x 70mm Allen Wrench	

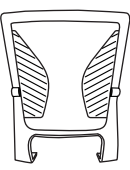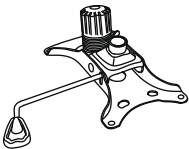MAIN PARTS LIST				
A Backrest 	B Seat 	C Nylon star base 	D Mechanism 	E Lift cylinder 
F Casters 	G-L Left armrest 		G-R Right armrest 	
	H Covers for lift cylinder 			

 
* The left metal bracket on the seat is loose, while the right is stiff and can only move once the chair is assembled.

ASSEMBLY STEPS

STEP 1

FIRST: Attach F to the legs of C.


THEN: Place E into C and cover it with H.

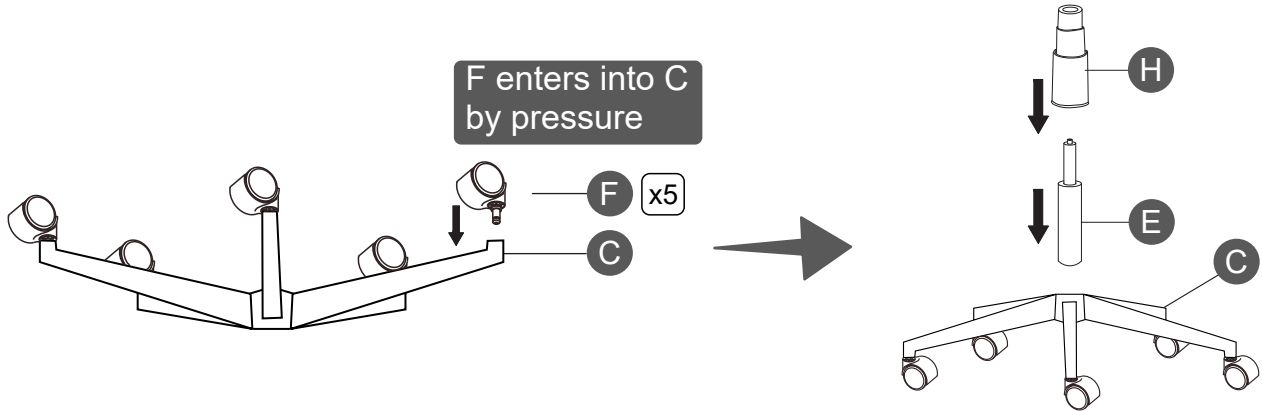

STEP 2

Attach D to B with I and L.

 ⚠ PAY ATTENTION:
The Knob from D faces towards the FRONT.

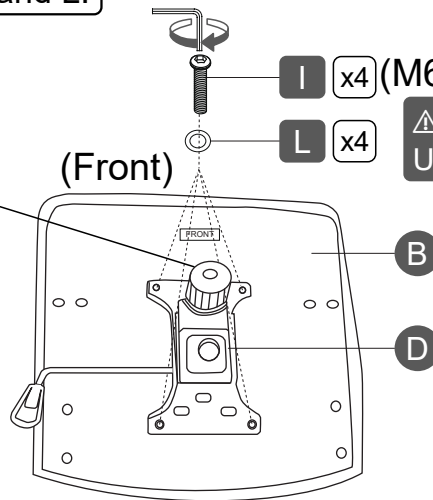


⚠ PAY ATTENTION:
Use the correct screws.

STEP 3


Attach G-L and G-R to A in their respective sides with K.

 ⚠ VERY IMPORTANT:
Leave the screws loose to allow flexibility for proper alignment of the pieces in the next step.

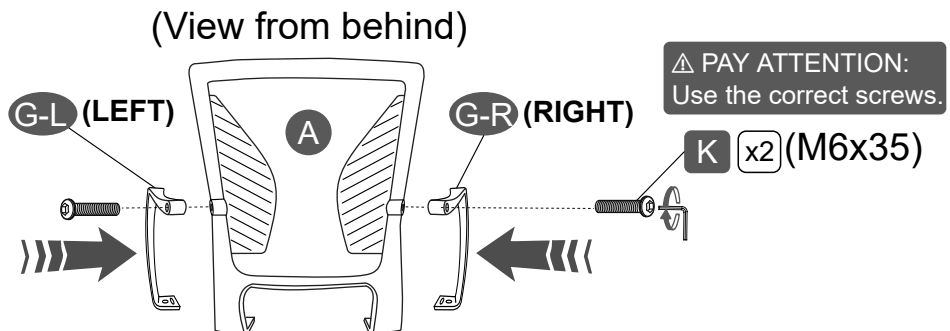


ASSEMBLY STEPS

 STEP 4 Attach A, G-L and G-R to B with J and K.

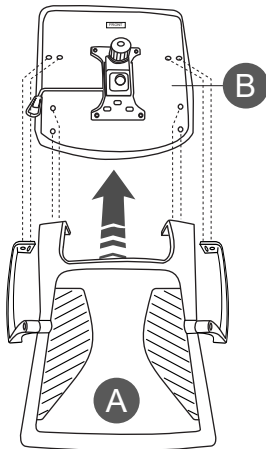

(View from behind)

 
⚠ **VERY IMPORTANT:**
Screw loosely to allow flexibility for proper alignment; tighten only after all are in place.

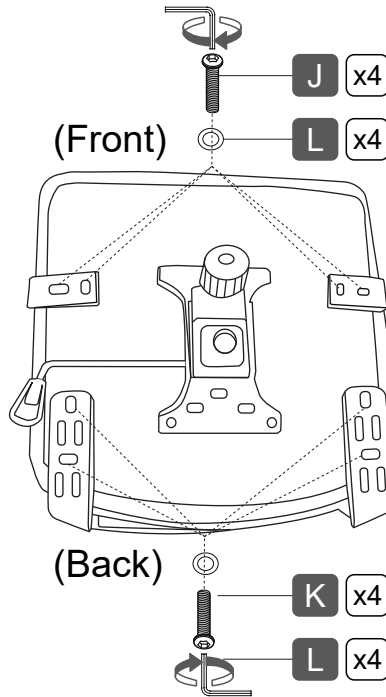


⚠ **PAY ATTENTION!**
SHORTER screws J for the FRONT holes.

⚠ **PAY ATTENTION!**
LONGER screws K for the BACK holes.

 STEP 5 Join the seat with the base.

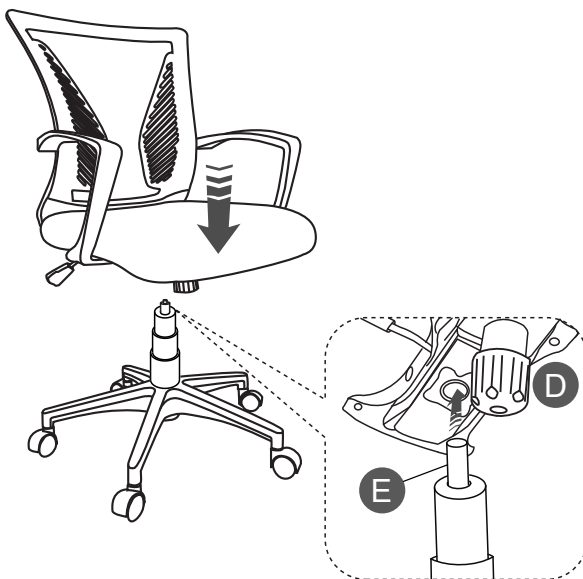

 STEP 6 FINALLY, tighten the screws K.



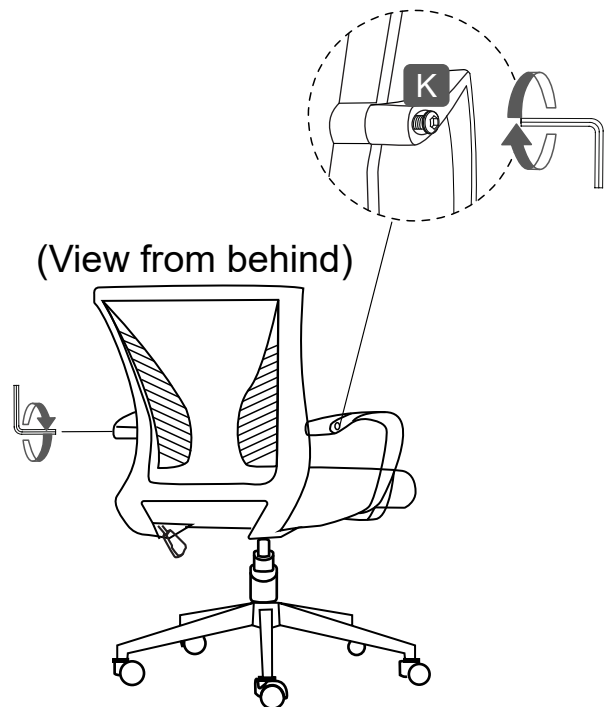


(View from behind)

CHAIR'S FUNCTIONS



Pull Handle OUT to UNLOCK;
Push Handle IN to LOCK.

   Pull Handle UP.

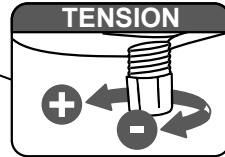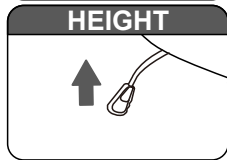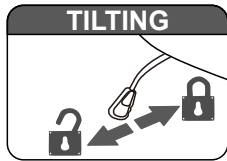

Turn CLOCKWISE for less tension (-);
COUNTERCLOCKWISE for more tension (+).
With less tension, the tilting feels easier.

  
WARNINGS - Not paying attention to the following warnings could result in injuries.

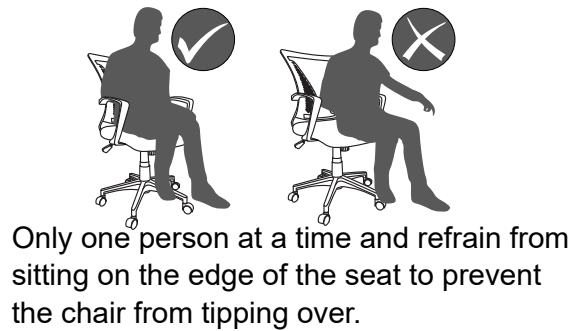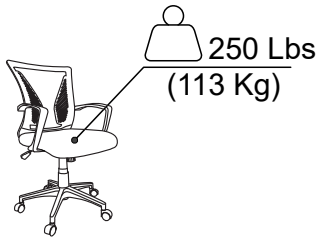

Only one person at a time and refrain from sitting on the edge of the seat to prevent the chair from tipping over.



 Do not stand on the chair or use it as a ladder.

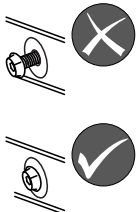


Do not use the chair if the frame parts are damaged, or if any of the screws are loose or missing.



Do not leave babies or toddlers unattended while seated on the chair, always ensure adult supervision. Keep children from playing with the chair for their safety.

CARE AND MAINTENANCE

 
Clean with a soft cloth lightly dampened in a solution of smooth soap and water.

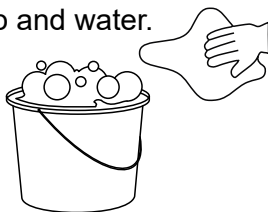

Do not use solvents or abrasive materials.



 Do not expose to direct sunlight or to extreme environmental conditions.

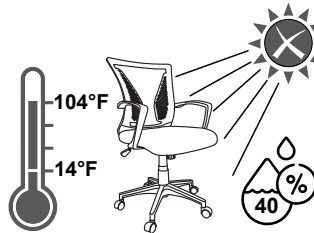

Inspect the chair thoroughly every 4 months and re-tighten the screws.

