### **WARNING:** To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# Media Console(AWDD1020)



Thank you for purchasing our Media Console.It will be helpful to have a second person available during the assembly of this product.

## **Assembly Instructions**

Lay out all parts on a "non-abrasive" surface to avoid scratching the furniture.

NO.	DRAWING	DESCRIPTION	QTY.
Α		ТОР	1
В		LEG	4

NO.	DRAWING	DESCRIPTION	QTY.
С		M8×25MM BOLT	8
D		ALLEN KEY	1

#### Step 1

Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when first assembling this product.

#### Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface (like the carton or carpet) to prevent damage to the finish.

#### Step 3

Lay Top (A) upside down and attach 4 Legs (B) using 8, 8M×25MM Bolts (C)

# TIGHTEN ALL BOLTS FIRMLY AT THIS TIME. A D

Step 4



# TIGHTEN ALL BOLTS FIRMLY AT THIS TIME USING ALLEN KEY (D). SET MEDIA CONSOLE UPRIGHT.

#### CARE

Clean with mild soap and wipe dry.