


 **WARNING: To avoid serious personal injury:**

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

# INSTRUCTION MANUAL

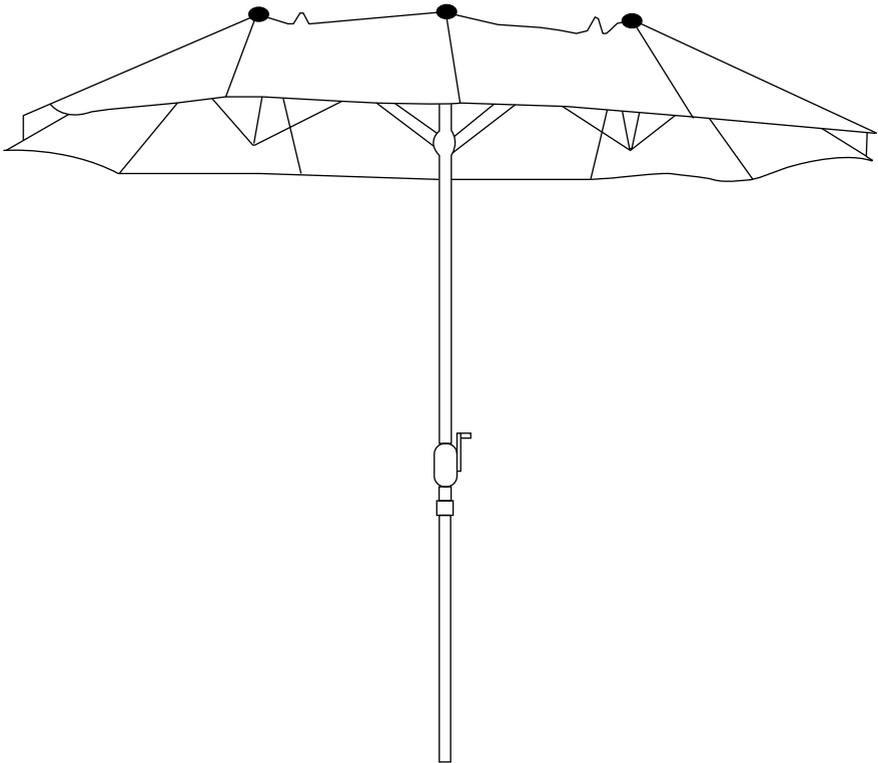

**Twin 15' \* 9'**  
**Rectangular Market Umbrella**  
**SKU: OS3004**

## ! CARE & MAINTENANCE

- △ Clean with lukewarm water, mild detergent & Sponge.
- △ Wipe down the pole with damp cloth.
- △ Store in a location when not in use.


## ! SAFETY PRECAUTIONS

- △ Store the umbrella in windy or stormy weather.
- △ Be aware that some parts are heavy and have sharp edges.
- △ Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- △ Do not allow umbrella to flap in the wind as it may cause damage.
- △ When adjusting umbrella, make sure no person or item is close to umbrella to avoid injury or damage.

## PARTS

A

### UMBRELLA BODY

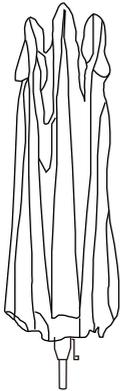

1 PC

B

### EXTEND POLE



1 PC


## PRODUCT ASSEMBLY

**1**

Check the status of umbrella before your assembly.

Plug part B Extend Pole carefully into part A Umbrella Body.


△ Pay attention that the spring bracket on the end of Extend Pole is fixed into the small hole at the end of part A Umbrella Pole after you hear "KA" sound.

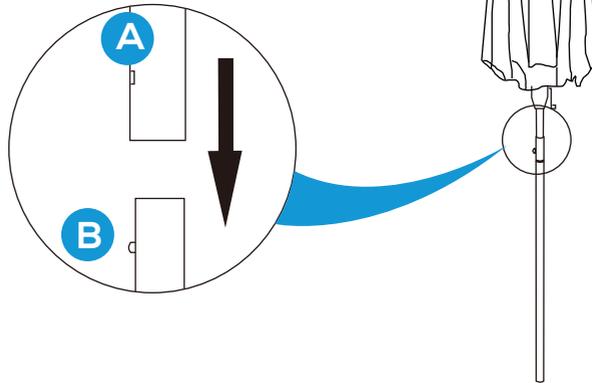

**2**

Insert part B the Extend Pole into the Umbrella Base or the fixing tube on the Table.


Tighten the bolt to fix the Extend pole.

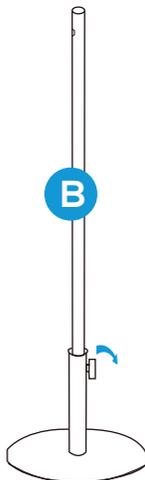

## PRODUCT ASSEMBLY

3

Loose the umbrella cloth belt before you open the umbrella.

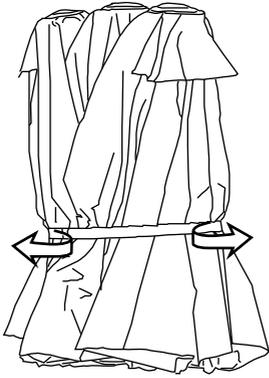

4

Turn the crank clockwise to open the umbrella while turn anti-clockwise to close the umbrella.

