



# ITEM NO.: 20095271/ Gemma Gray 3-Arch Floor Lamp

## WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

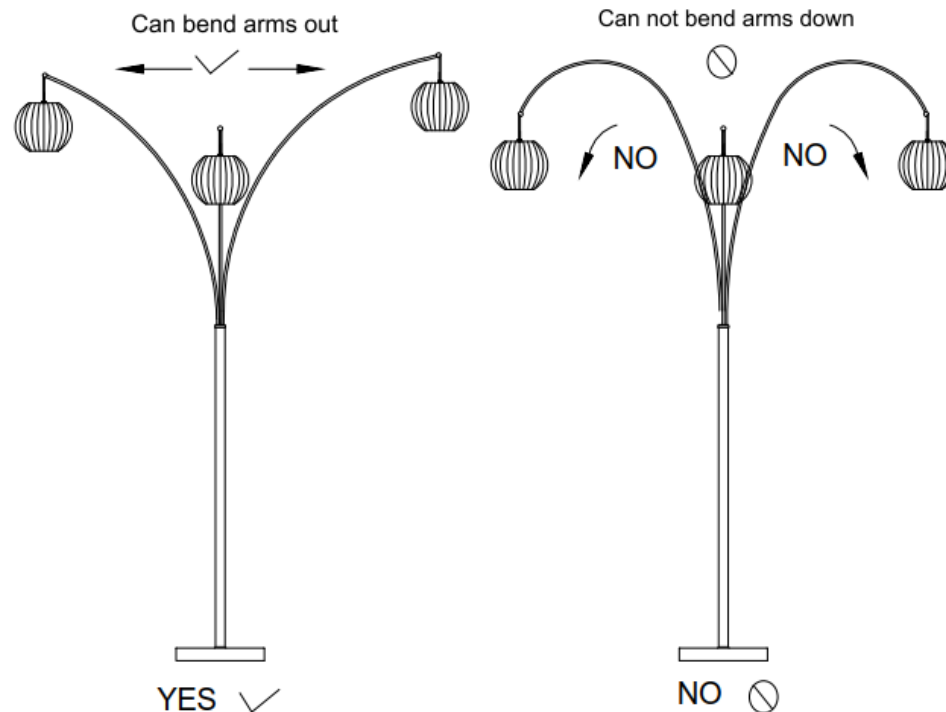
 
## COMPONENT LIST




J. Wrench x 1pc



I. Nut x 1pc



 G. Washer x 1pc



H. Washer x 1pc



E. Screw x 1pc



A. Socket Ring x 3pcs

## ASSEMBLY INSTRUCTIONS:

1. Carefully place all parts on a smooth surface and line them up as per the sketch.
2. Insert the iron pipe (D) onto the base (F), secure with washer(G and H) and nut (I) using wrench 17 (J).
3. Insert body (C) into the iron pipe (D), and secure with screw(E).
4. Place three shades (B) onto lamp sockets, and secure with socket rings (A).
5. Install bulb into socket, then insert the polarized plug into a wall outlet and enjoy your lamp.
6. To clean, use a soft dry cloth only. Never use chemical or abrasive cleaners.

**※Use 3pcs 60W (Maximum) Type A Incandescent bulbs (Not Included)  
or 3pcs Equivalent Energy-Saving Bulbs ( Not Included).**


## IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

## ATTENTION:

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES A FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

**※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

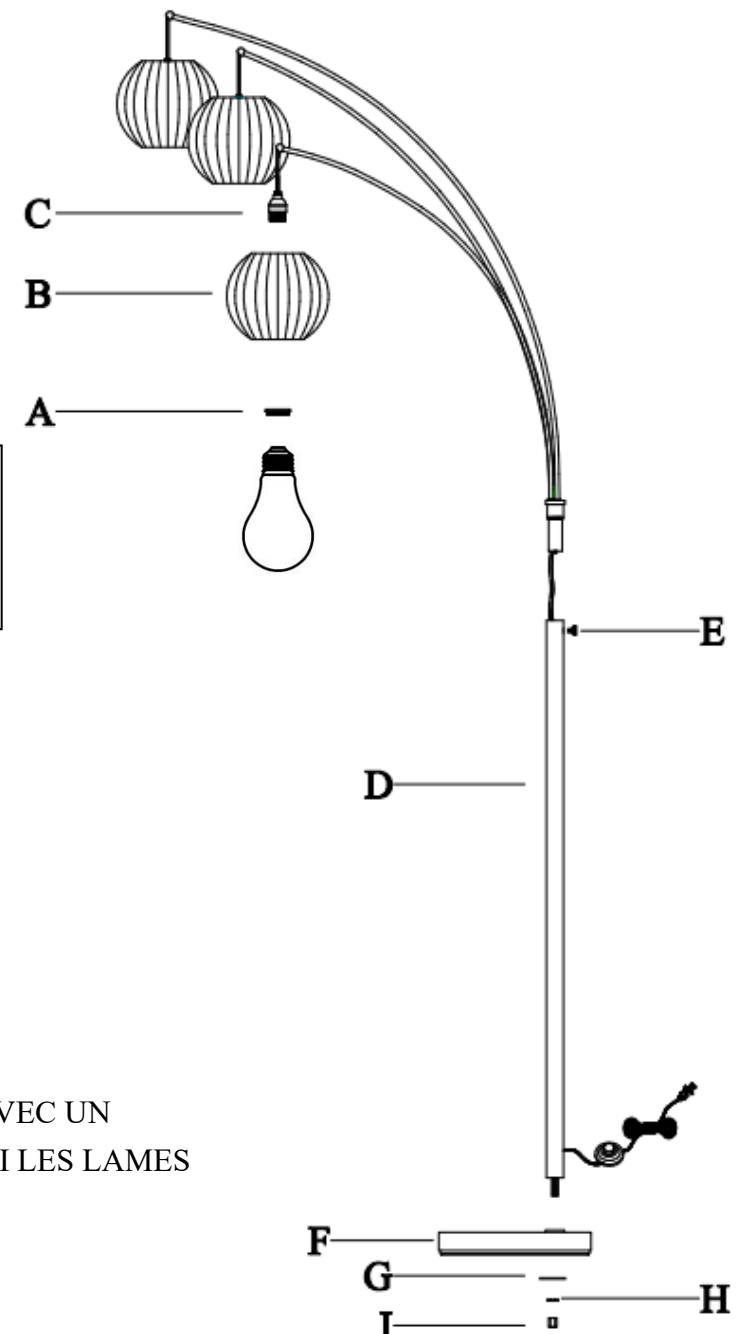

**BOB'S** DISCOUNT FURNITURE