
## BOB'S FURNITURE

## **ASSEMBLY INSTRUCTIONS**


**MODEL: DOOR DRESSER** 

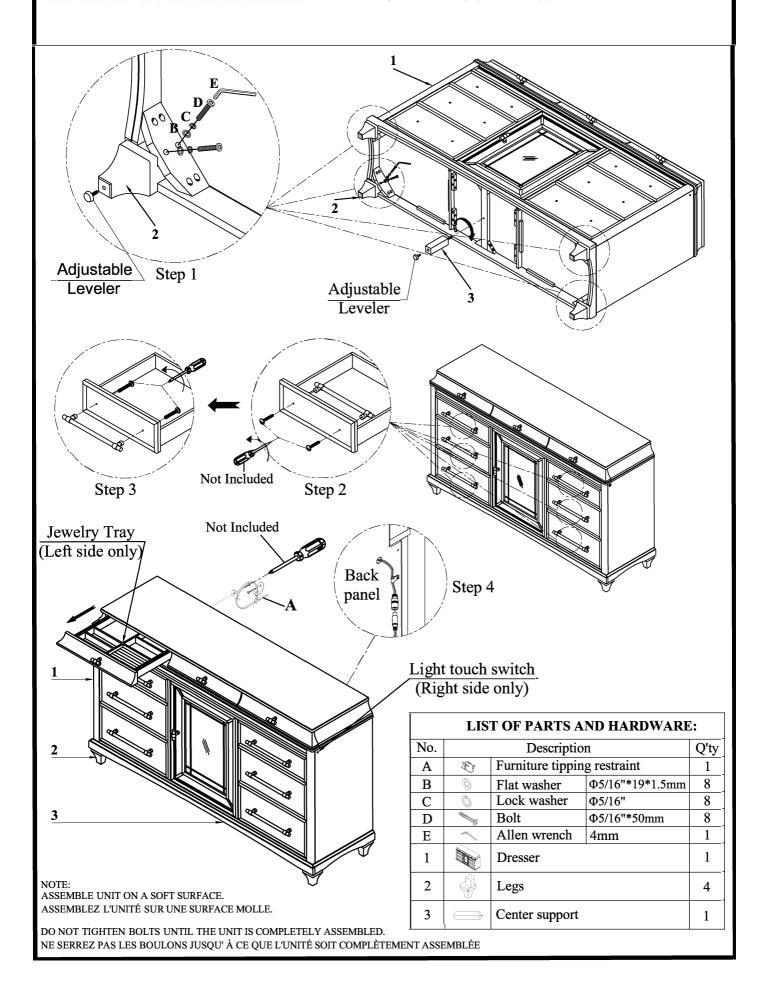




## **ASSEMBLY INSTRUCTIONS**

**MODEL: MIRROR** 

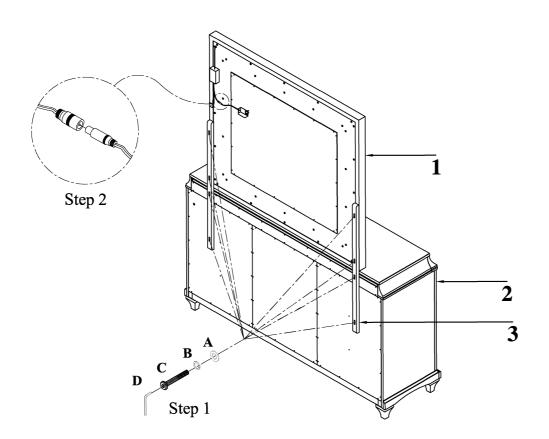

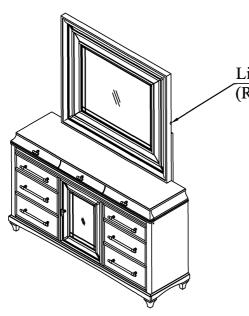

Light touch switch (Right side only)

NOTE:
ASSEMBLE UNIT ON A SOFT SURFACE.
ASSEMBLEZ L'UNITÉ SUR UNE SURFACE MOLLE

DO NOT TIGHTEN BOLTS UNTIL THE UNIT IS COMPLETELY ASSEMBLED.			
NE SERREZ PAS LES BOULONS JUSQU' À CE QUE L'UNITÉ SOIT COMPLÈTE	MENT A	SSEMBL	ÉΕ

LIST OF PARTS AND HARDWARE:					
No.	No. Description		Q'ty		
A	0	Flat washer	Φ1/4"*16*1.5mm	8	
В	0	Lock washer	Ф1/4"	8_	
C		Bolt	Φ1/4"*45mm	8	
D	(	Allen wrench	4mm	1_	
1		Mirror		1	
2		Dresser		1	
3	·	Support		2	



## MARNING: To avoid serious personal injury:

- · Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- · Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- · Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.