

SETUP AND OPERATION GUIDE

POWER RECLINER

TABLE OF CONTENTS

Important Safety Instructions	2
Assembly of recliner	
Recliner Assembly	3
Operating Instructions For Recliner	4
Warning	4
Other Function Instructions	4
Side Control User's Manual	5
FCC Instructions	6
Trouble shooting	6

Note: When placing the furniture on non-carpeted flooring, it is recommended to use some type of floor protection such as an area rug or furniture pads under the chair glides. Area rugs and padding are not included with purchase.

WARNING: To avoid serious personal injury:

Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Assembled only by responsible adults and children should not be involved in the assembly process.

Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER:** To reduce the risk of electric shock - Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. **WARNING:** Risk of injury - Keep children away from extended foot support.
11. **WARNING:** Risk of injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.

SAVE THESE INSTRUCTIONS.

SERVICING OF DOUBLE- INSULATED PRODUCTS.

In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-Insulated Product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.

 
 
RECLINER ASSEMBLY

ATTACHING THE RECLINER BACK TO THE RECLINER BASE

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Inside the carton you will find two red plastic bags that have the recliner's wings in it. Remove the wings from the plastic bags and set them aside to be used in assembly and installation.

Make sure to read the instructions below before assembling your Home Theater Recliner.

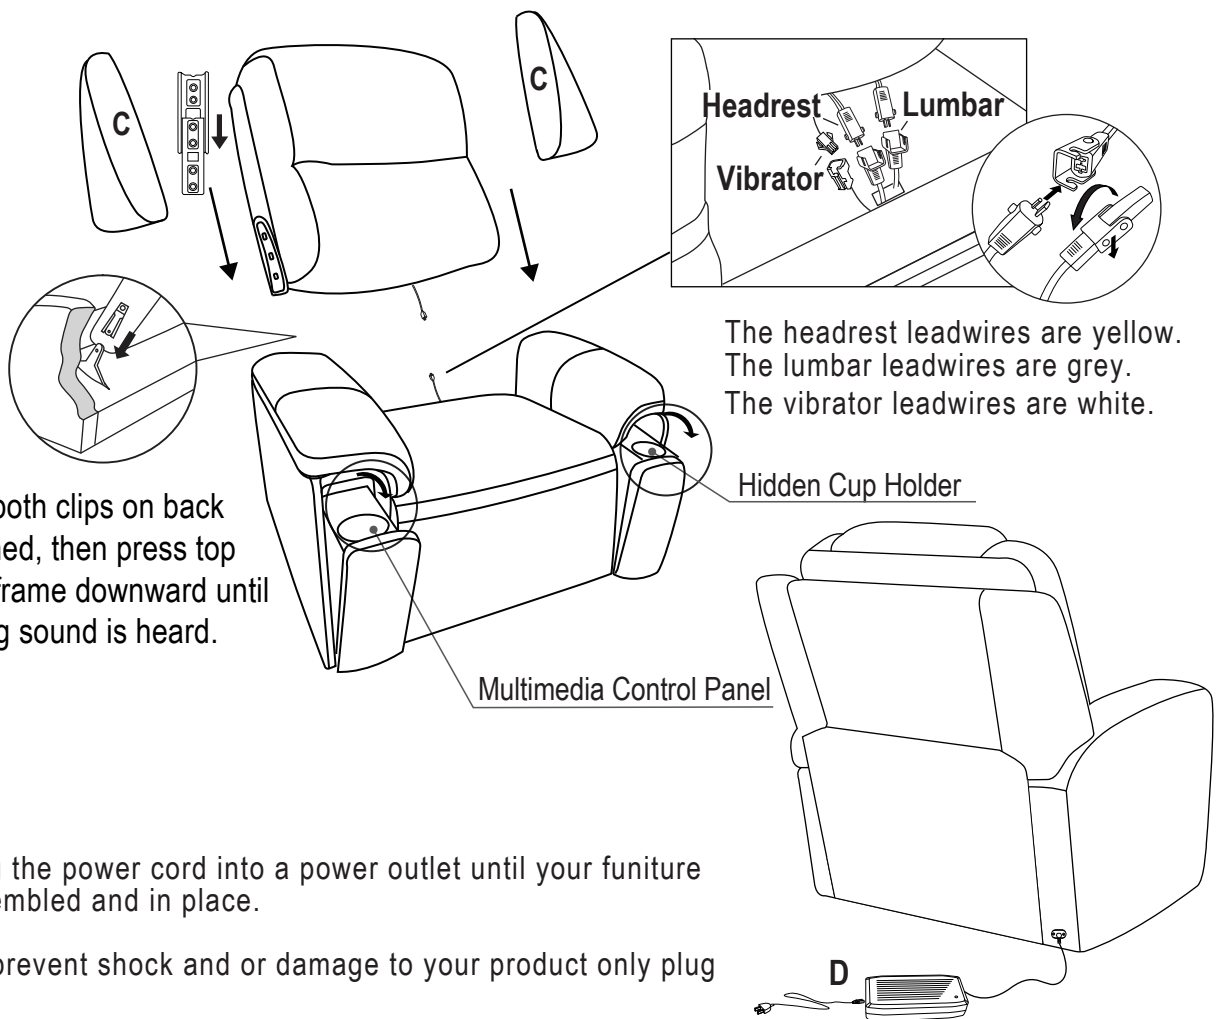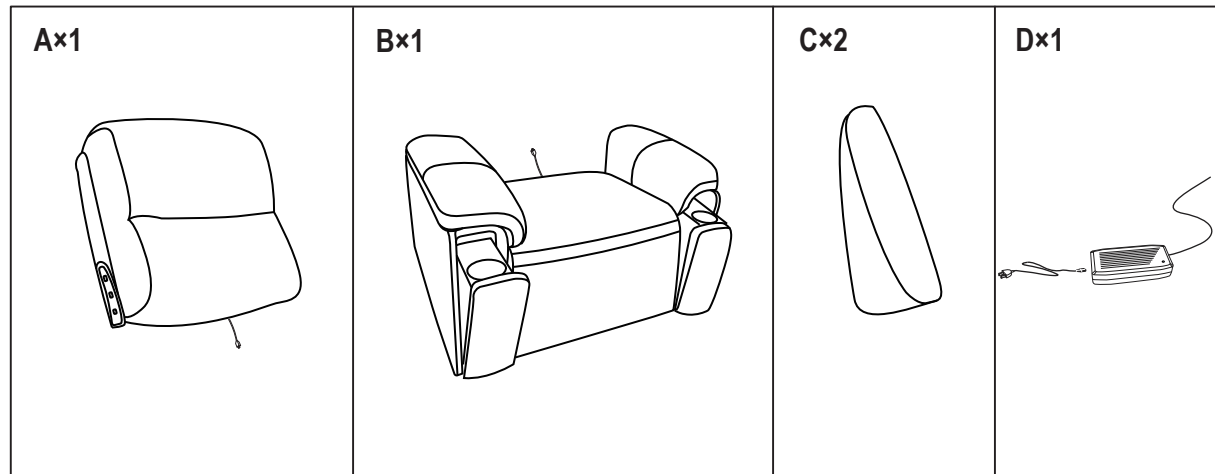

Do Not plug the power cord into a power outlet until your furniture is fully assembled and in place.

 
Notes:

1) To help prevent shock and or damage to your product only plug


Other Function Instructions

Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment

Multimedia Control Panel

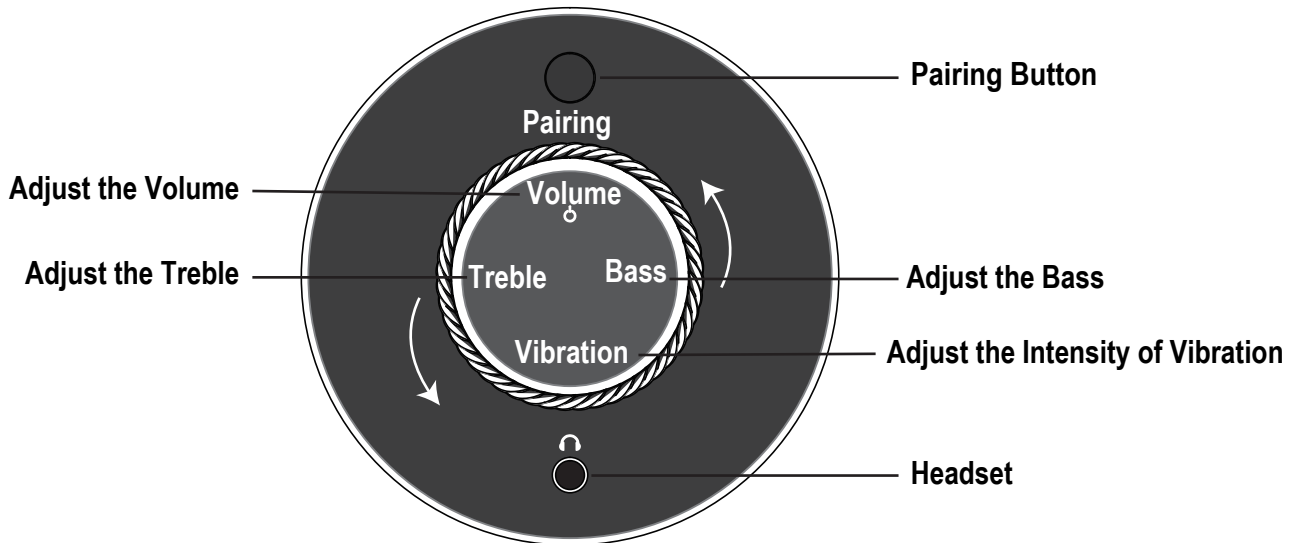

How to Connect Wireless

Press and hold the  button, the LED on the button will light up. Press and hold the Pairing button, the LED on the button will flash to indicate that the control is in "pair" mode. Switch on the pairing function on your device.

How to Adjust the Treble

Press the Treble button to activate the treble function, rotate to adjust the treble level.

How to Adjust the Bass

Press the Bass button to activate the bass function, rotate to adjust the bass level.

How to Adjust the Vibration

Press the Vibration button to activate the vibration function, rotate to adjust the vibration level.

How to switch off all functions

Press and hold the  button to switch the multimedia control panel off.



WARNING: To avoid serious personal injury:

 
Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.

Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

SIDE CONTROL USER'S MANUAL

Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment

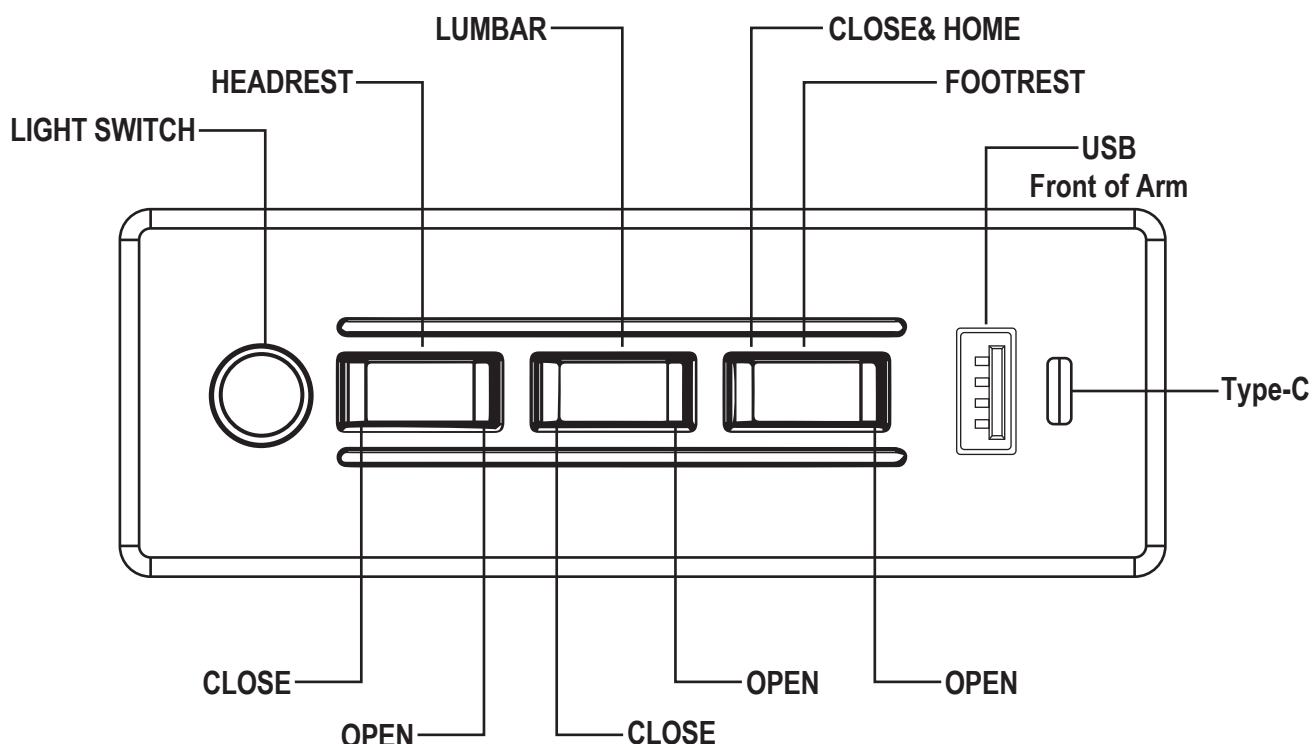

Care should always be taken to assure there is nothing in the path of the mechanism before and during operation.

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

To turn on the led lights: Press the light switch button to turn on/off the cup holder lights and led lights under the arms.

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Recline doesn't recline or lift	Transformer may not connected well	<ul style="list-style-type: none">• Check the power supply has been correctly connected to socket• Confirm the wire from chair to transformer is firmly connected
Headrest or Lumbar doesn't work	Headrest or lumbar motor may not connected well	<ul style="list-style-type: none">• Check the headrest and lumbar motor has been correctly connected to socket
The side switch doesn't work	Side switch may not be connected well	<ul style="list-style-type: none">• Check the side switch cord has been correctly connected to plug

FCC INSTRUCTION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Protected By Following Patents:
Patented Articulating Power Headrest & Lumbar
US Patent: 10,736,423
Patented Power Hidden Cupholder
US Patent: 10,681,987

BOB'S **DISCOUNT** **FURNITURE**

Customer Service

If you have any questions regarding the use of this unit or find that your unit need service, please contact your retailer.