


# BROADCAST FUNCTION INSTRUCTION

## Multi Media Control Panel

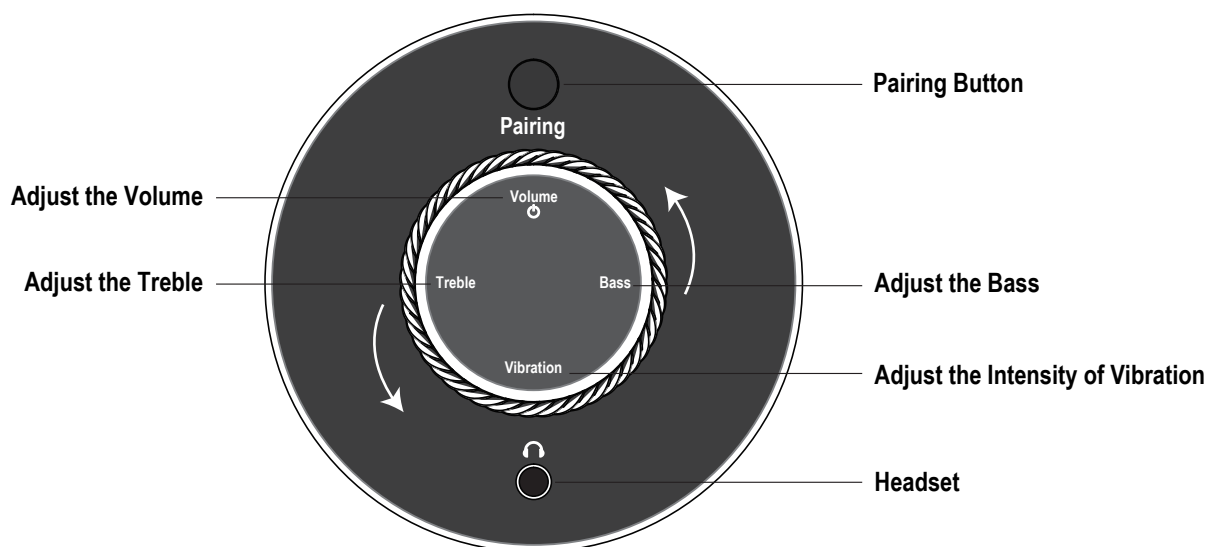

### ***Turning On/Off the Speaker***

Press and hold the volume adjustment knob to turn on the speaker. Press and hold again to turn off the speaker.

### ***Wireless Connection Pairing Mode***

Press and hold the pairing button (blue light flashes) to initiate pairing. The wireless device name is: Moto Media System. Once connected, the blue light stays on and you will hear a voice prompt: "Connected." If disconnected, the blue light will turn off and you will hear a voice prompt: "Disconnected."

### ***Switching Broadcast Mode***

1. Press the pairing button twice quickly; you will hear a voice prompt: "Broadcast mode." When connected, the red light stays on. Press the pairing button twice quickly again, and you will hear a voice prompt: "Broadcast off," which exits broadcast mode.
2. After the device connects via wireless connection, press the pairing button twice quickly (red light flashes) to enter broadcast mode; the blue light will turn purple. Press the pairing button twice quickly again to exit broadcast mode; the purple light will turn back to blue.

### ***Using Broadcast Mode***

When a device such as a phone or TV is connected to the wireless connection of Sofa A, press the pairing button twice quickly to switch to broadcast mode (purple light stays on). Then turn on the Sofa B speaker and press the pairing button twice quickly to switch it to broadcast mode (red light stays on). Sofa A will act as the signal source, and Sofa B will sync to play the audio or video from Sofa A.

## Notes

1. Wireless connection search will automatically end after three minutes without connecting to any devices, and the flashing light will turn off. If you press the button during the flashing period, the search will end.
2. Wireless connection mode has higher priority than broadcast mode. In broadcast mode, if different devices connect via wireless connection to play audio or video, broadcast mode will stop. If no playback occurs for about 4 seconds, it will re-search for other broadcast signal sources.
3. If multiple sofas are connected to the same device via wireless connection, audio and video cannot be played simultaneously. The default is for the last connected sofa to play.  
  
Example: If sofas A, B, and C are all in broadcast mode (red light stays on), press and hold the pairing button (red light flashes) to connect to sofa A (purple light stays on). Sofas B and C will sync to play audio or video from sofa A. If the same device connects to sofa B (purple light flashes), sofa B and C will play normally, and sofa A will stop working. If you then connect to sofa C (purple light stays on), sofa C will play normally, while sofas A and B will not work. A restart is needed for playback.
4. When using wireless connection to connect the main speaker sofa to a TV, there may be delays and instability. It is recommended to use a wired connection to the main speaker sofa and then use broadcast mode for wireless synchronization to other sofas.
5. Please keep the wireless connection between devices within 10 meters.