

SETUP AND OPERATION GUIDE

POWER RECLINER

TABLE OF CONTENTS

Important Safety Instructions	2
Assembly of recliner	
Recliner Assembly	3
Operating Instructions For Recliner	4
Warning	4
Other Function Instructions	4-5
Side Control User's Manual	6
Trouble shooting	6

Note: When placing the furniture on non-carpeted flooring, it is recommended to use some type of floor protection such as an area rug or furniture pads under the chair glides. Area rugs and padding are not included with purchase.

WARNING: To avoid serious personal injury:

Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Assembled only by responsible adults and children should not be involved in the assembly process.

Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. **DANGER:** To reduce the risk of electric shock - Always unplug this furnishing from the electrical outlet before cleaning.
2. Unplug from outlet before putting on or taking off parts.
3. Close supervision is necessary when used by or near children, or disabled people.
4. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
5. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors. Just for household indoor use only.
9. To disconnect, turn all controls to the off position, then remove plug from outlet.
10. **WARNING:** Risk of injury - Keep children away from extended foot support.
11. **WARNING:** Risk of injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.

SAVE THESE INSTRUCTIONS.

SERVICING OF DOUBLE- INSULATED PRODUCTS.




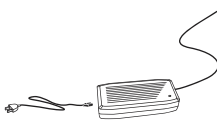 
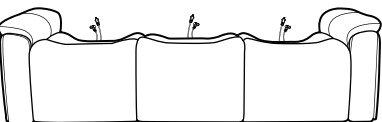 

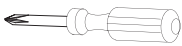 
In a double-insulated product, two systems of insulation are provided instead of grounding. No grounding. No grounding means is provided on a double-insulated product, nor is a means for grounding to be added to the product. Servicing a double-Insulated Product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace.


RECLINER ASSEMBLY

ATTACHING THE RECLINER BACK TO THE RECLINER BASE



Congratulations and thank you for making our product part of your home! Please check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Make sure to read the instructions below before assembling your Sofa.

A×1 	B×1 	C×1 	E×2 
D×1 	F×2 	Not Included 	

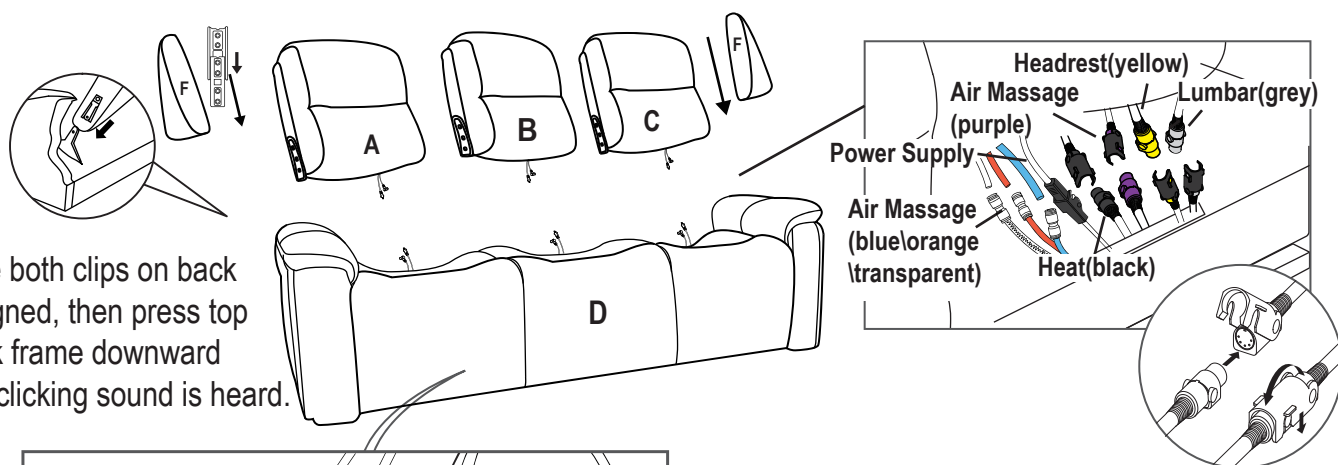 

  Ensure both clips on back are aligned, then press top of back frame downward until a clicking sound is heard.

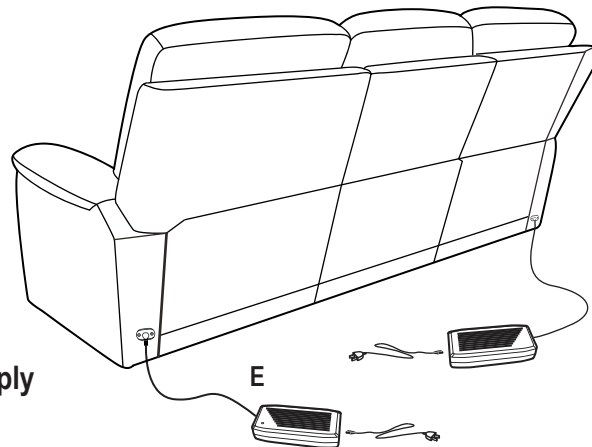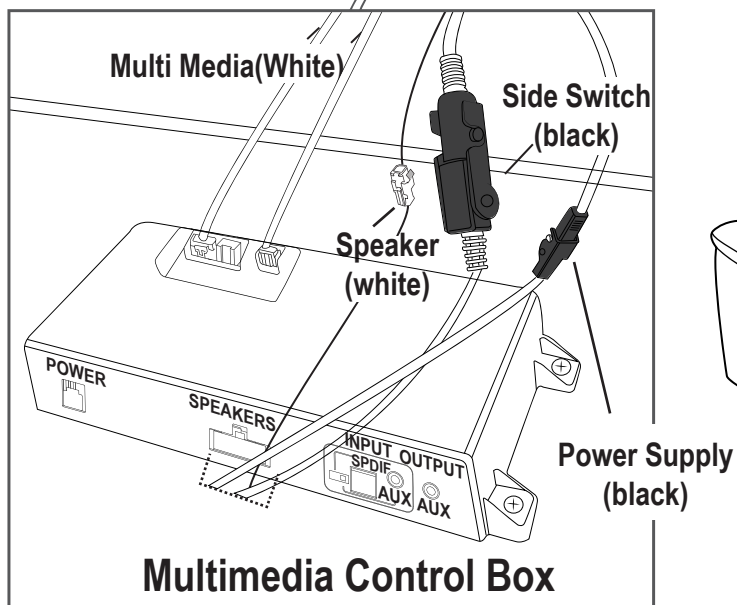

Do Not plug the power cord into a power outlet until your furniture is fully assembled and in place.

Notes:

 
- 1) Please read the operating instructions carefully before operating your furniture.

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

Other Function Instructions

How to Use Touch-Sensitive LED Lights
Touch the Middle of LED Lights to activate the LED Light.
Touch the Middle of LED Lights again to activate the stronger LED Light.
Touch the Middle of LED Lights again to turn off the light.

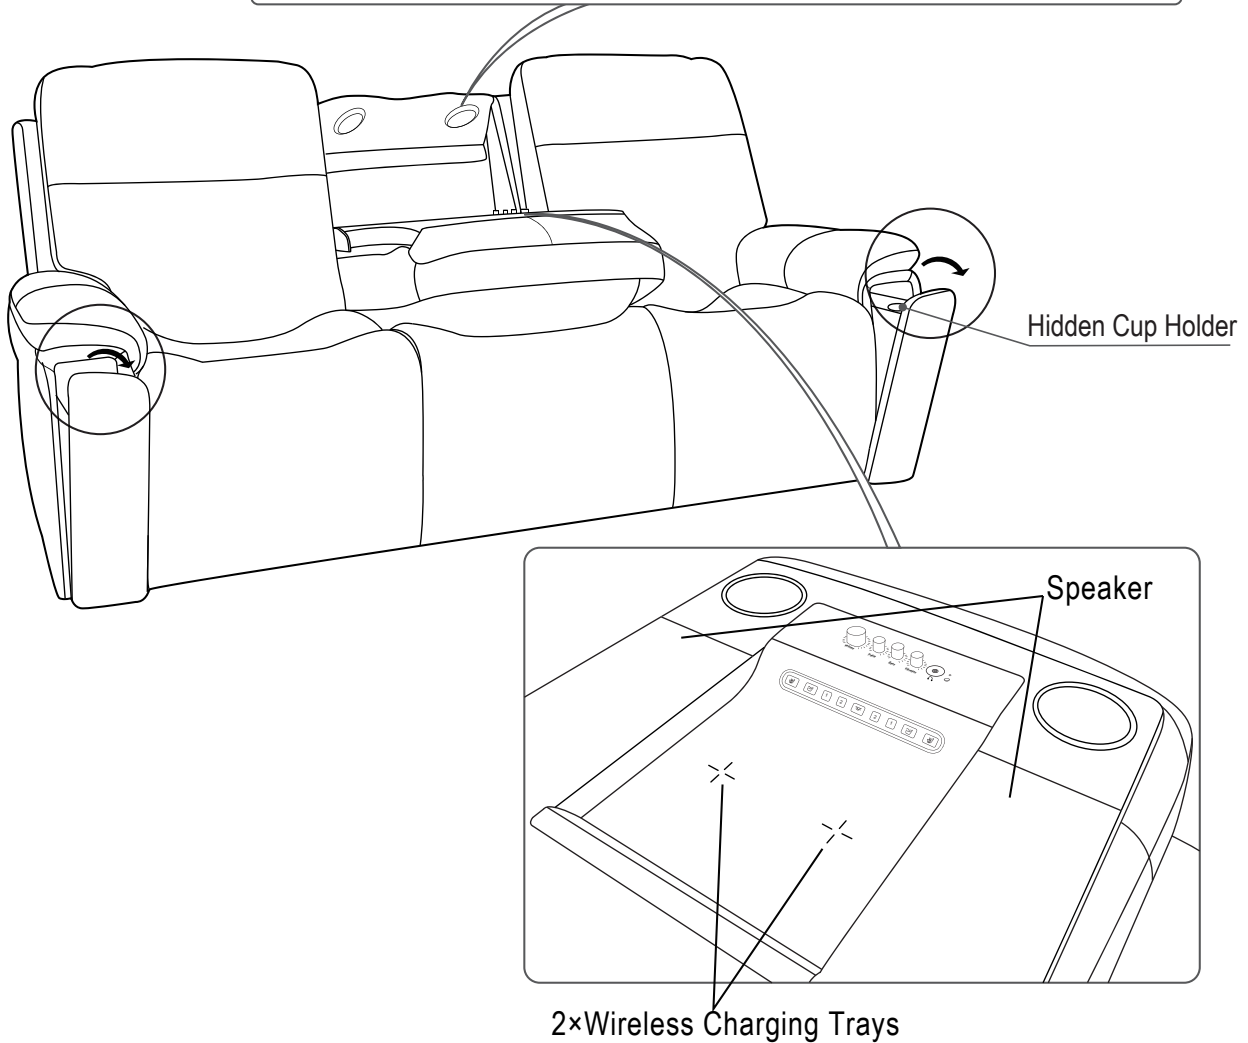

WARNING: To avoid serious personal injury:

 
Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.

Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.

Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

Other Function Instructions

Multimedia Control Panel

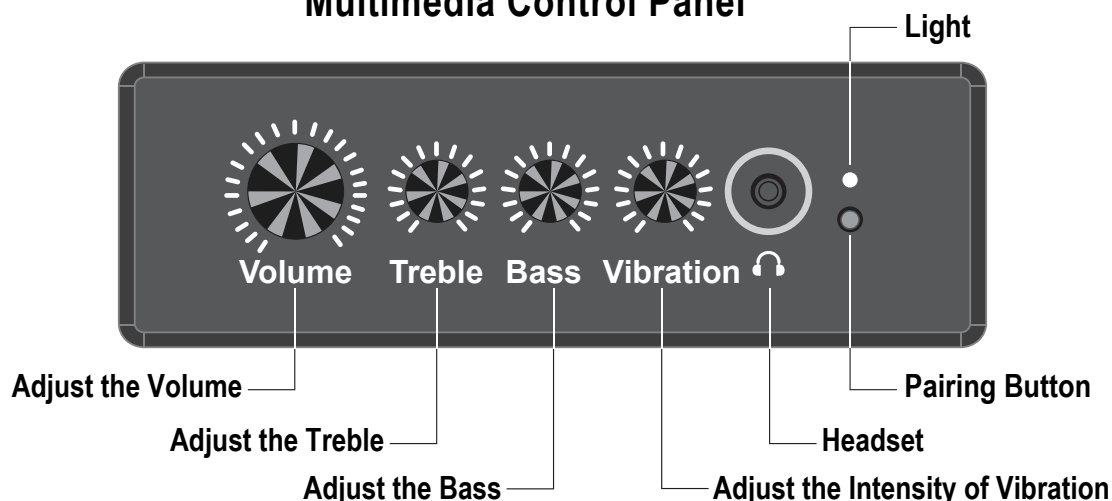


Turning On/Off the Speaker

Press and hold the volume adjustment knob to turn on the speaker. Press and hold again to turn off the speaker.

How to Connect Wireless

 Press and hold the Pairing button, the LEDs on the memory buttons will flash to indicate that the control is in "pair" mode. Switch on the pairing function on your device.

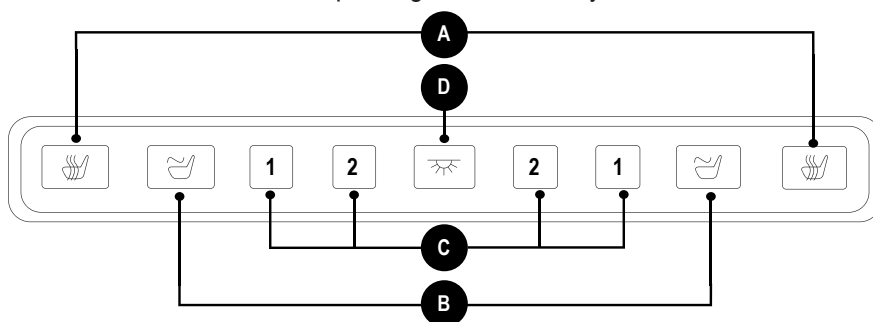

A HEAT BUTTON

Press the heat button to activate the heat function.

Press again to cycle intensity through low, medium, and high heat.

B AIR MASSAGE BUTTON

Press the air massage button to activate the massage function. Press again to cycle through low, medium, and high intensity.

 
C Set Up Memory Function

To setup memory function, adjust the chair position as the user desires, then press and hold the "1" & "2" together for 4 to 5 seconds, then press "1" or "2" to save the position until you hear a beep sound from the control box, to indicate that setup is complete.

D Lighting:


Press the lighting button to turn on or turn off.

Multimedia Control Box

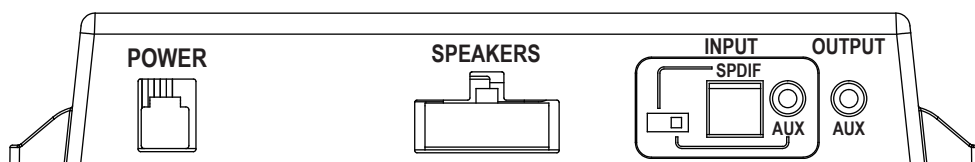

This is located underneath the console of the sofa. AUX input, AUX output, and S/PDIF are located on the Multimedia Control Box. You can connect multiple devices by using a 3.5mm AUX cable connecting the AUX input to the audio source and then connecting another 3.5mm AUX cable from AUX output to the AUX input of the next Multimedia control box. 3.5mm AUX cable sold separately.

 SIDE CONTROL USER'S MANUAL

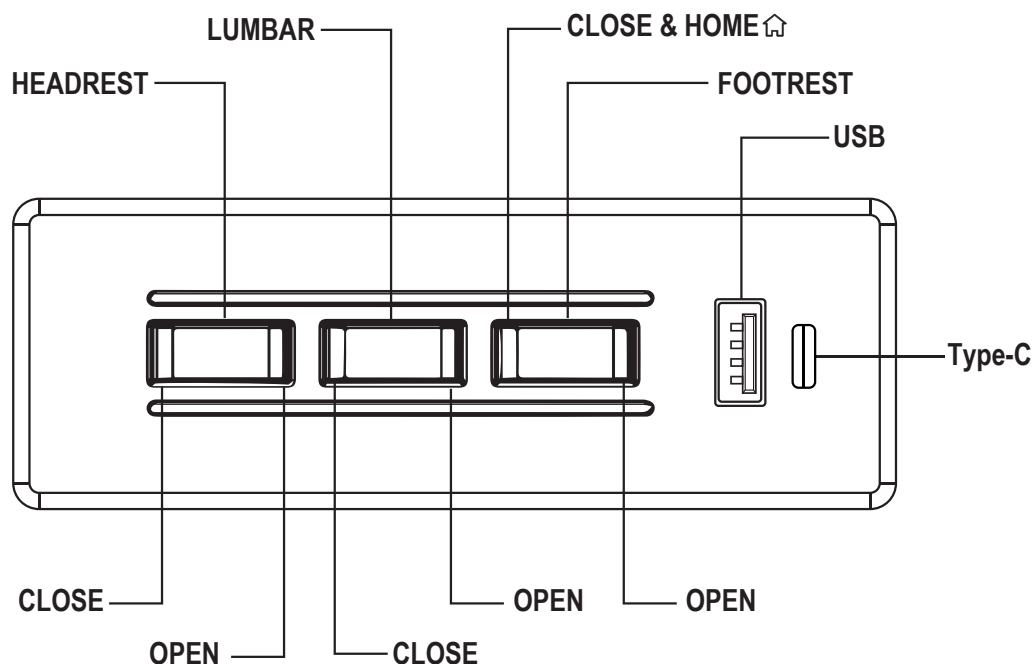

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

TROUBLE SHOOTING

PROBLEM	POSSIBLE FACTORS	SOLUTIONS
Recline doesn't recline or lift	Transformer may not connected well	<ul style="list-style-type: none"> • Check the power supply has been correctly connected to socket • Confirm the wire from chair to transformer is firmly connected
Headrest or Lumbar doesn't work	Headrest or lumbar motor may not connected well	<ul style="list-style-type: none"> • Check the headrest and lumbar motor has been correctly connected to socket
The side switch doesn't work	Side switch may not be connected well	<ul style="list-style-type: none"> • Check the side switch cord has been correctly connected to plug

Product Protected By Following Patents:

Patented Power Hidden Cupholder

US Patent: 10,681,987

Patented Articulating Power Headrest & Lumbar

US Patent: 10,736,423

BOB'S **DISCOUNT** **FURNITURE**

Customer Service

If you have any questions regarding the use of this unit or find that your unit need service, please contact your retailer.