

ASSEMBLY INSTRUCTIONS

BOB'S DISCOUNT FURNITURE

TL334739BF

SKU# 20093745

CHICAGO TABLE LAMP

1. FASTEN SOCKET ASSEMBLY ONTO LAMP BASE, BE CAREFUL NOT TO TWIST POWER CORD AND TIGHTEN SECURELY.
2. PLACE HARP ONTO SADDLE.
3. PLACE SHADE ONTO HARP AND TIGHTEN FINIAL.
4. MAX LED 9W E26 BULB (NOT INCLUDED).
MAY ALSO USE A MAX OF 100W E26 TYPE "A" BULB.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER).

THIS IS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRICAL SHOCK.

THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN.

NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

- | | | |
|--------------------|-----------------|---------------|
| 1. LAMP BASE x 1pc | 2. SADDLE x 1pc | 3. HARP x 1pc |
| 4. SHADE x 1pc | 5. FINIAL x 1pc | |



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

