

Assembly Instruction for

2-DOOR NIGHTSTAND WITH USB

280-3-B-NS2 / 280-7-B-NS2

⚠ WARNING: To avoid serious personal injury:


- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

| PART LIST | | | |
|-----------|----------------------|------------------------------------|------|
| NO. | PART DESC | CODE. | Q'TY |
| A | Nightstand with door | 280-3-B-NS2 280-7-B-NS2 | 1 |
| B | Back Leg | P280-3-B-DRLEG2 P280-7-B-DRLEG2 | 2 |
| C | Front Leg | P280-3-B-DRLEG1 P280-7-B-DRLEG1 | 2 |

| HARDWARE LIST | | | |
|---------------|---------------------------|-------------|------|
| NO. | HARDWARE DESC | CODE. | Q'TY |
| 1 | Allen bolt (Ø5/16 *2") | P280-B-CGHW | 4 |
| 2 | Spring washer (Ø5/16") | | 4 |
| 3 | Flat washer (Ø5/16 *3/4") | | 4 |
| 4 | Allen key (Ø1/8") | | 1 |

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.

STEP 1

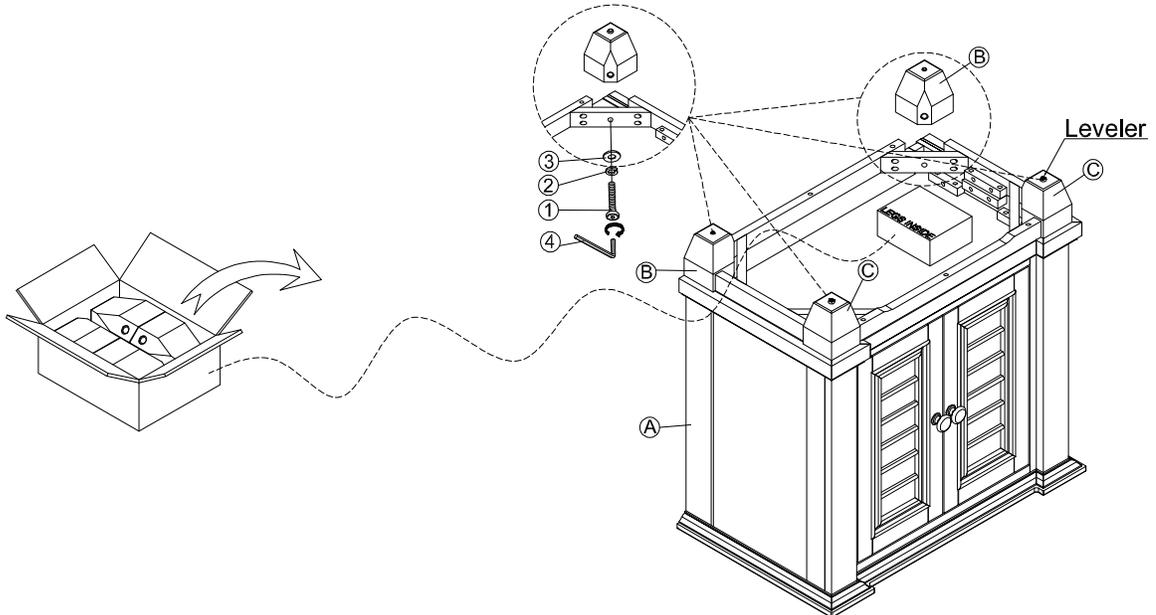

COMPLETED

