

Assembly Instruction for
ZOEY THREE PACK OCCASIONAL SET
20086759 / 10001245001

⚠ WARNING: To avoid serious personal injury:

 
- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to walls. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

PART LIST			
No.	PART DESC	CODE.	QTY
A	COFFEE TABLE OVAL TOP FRAME	PT-1500-3-OTCTSP PT-1500-5-OTCTSP	1
B	COFFEE TABLE CENTER LEG	PT-1500-3-OTCLEG1 PT-1500-5-OTCLEG1	1
C	COFFEE TABLE SIDE LEG	PT-1500-3-OTCLEG2 PT-1500-5-OTCLEG2	2
D	COFFEE TABLE GLASS TOP		1
E	END TABLE ROUND TOP FRAME	PT-1500-3-OTETSP PT-1500-5-OTETSP	2
F	END TABLE CENTER LEG	PT-1500-3-OTELEG1 PT-1500-5-OTELEG1	2
G	END TABLE SIDE LEG	PT-1500-3-OTELEG2 PT-1500-5-OTELEG2	4
H	END TABLE GLASS TOP		2


HARDWARE LIST			
NO.	HARDWARE DESC	CODE.	QTY
1	ALLEN BOLT (1/4"-20 x 1-3/4")	PT-1500-OTHW (COFFEE)	2
2	SPRING WASHER(1/4")		2
3	FLAT WASHER (1/4"-20 x 5/8")		2
4	BRACKET (4"x1-3/16" x 1/8")		4
5	ALLEN BOLT (1/4"-20 x -3/4")		12
6	ALLEN KEY(M4)		1
7	ALLEN BOLT (1/4"-20 x 1-1/4")	PT-1500-OTHW (END)	4
8	SPRING WASHER(1/4")		4
9	FLAT WASHER (1/4"-20 x 5/8")		4
10	BRACKET (4"x1-3/16" x 1/8")		8
11	ALLEN BOLT (1/4"-20 x -3/4")		24
12	ALLEN KEY(M4)		1

⚠ Only tighten all bolts when all bolts aligned with bolt inserts.


STEP : 1

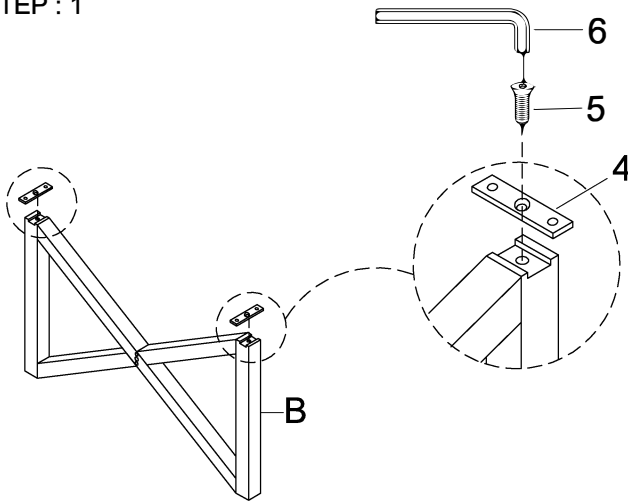


STEP : 2

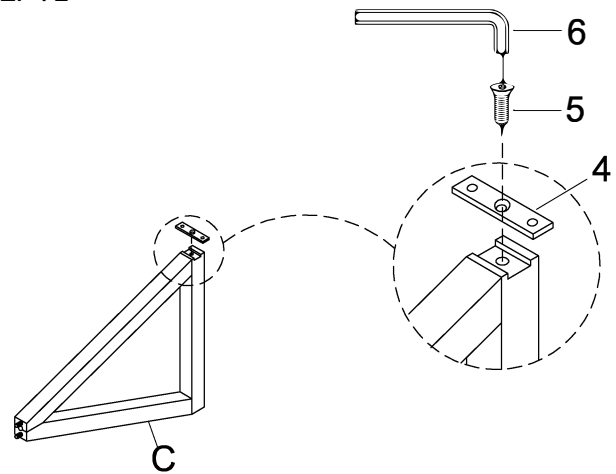 

STEP : 3

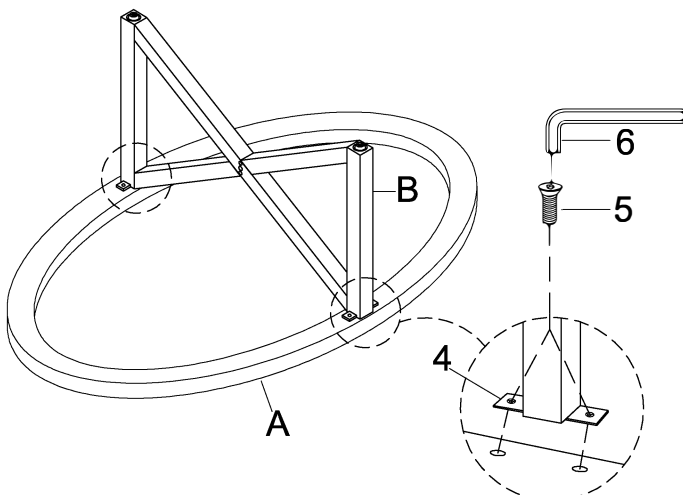 


STEP : 4

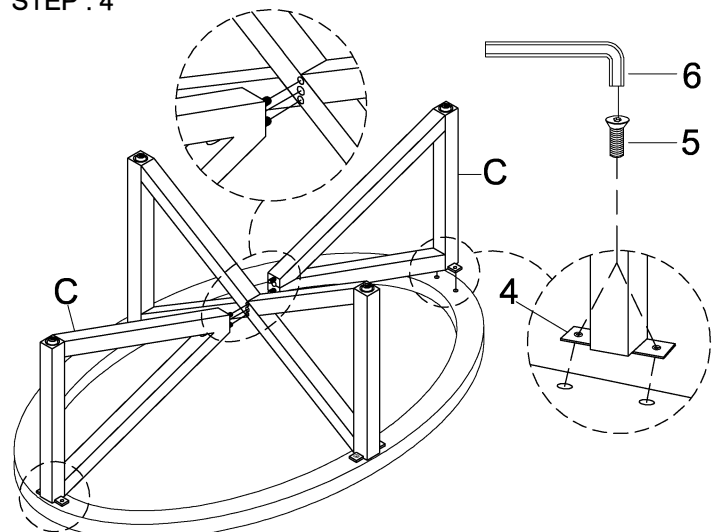 


Assembly Instruction for ZOEY THREE PACK OCCASIONAL SET 20086759 / 10001245001

 
STEP : 5

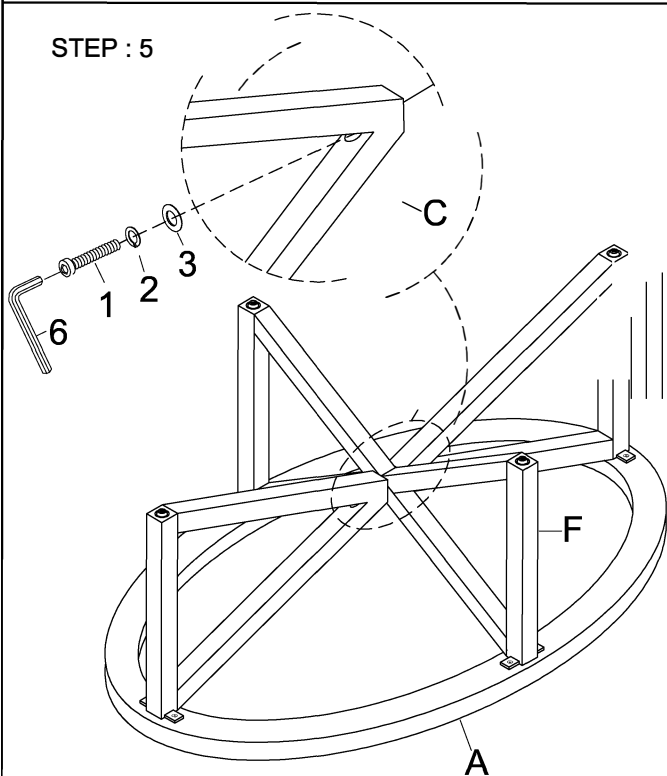


STEP : 6

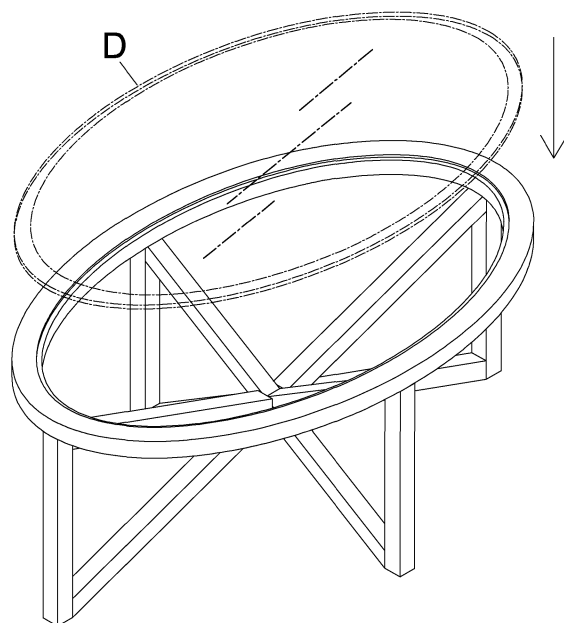 


STEP : 7

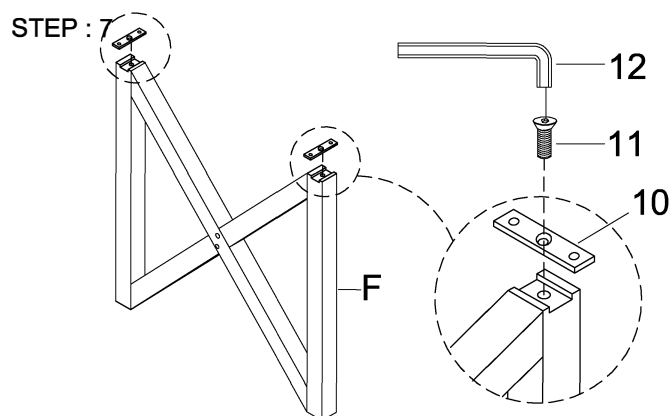 


STEP : 8

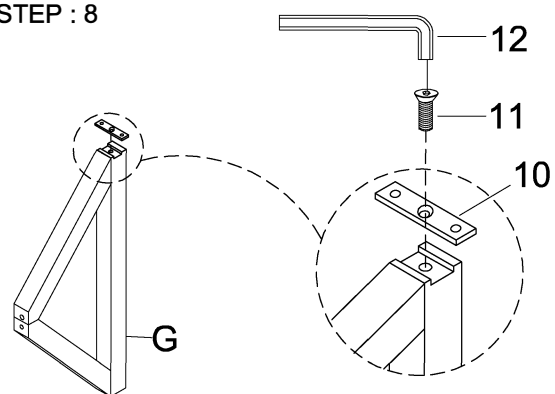 

STEP : 9

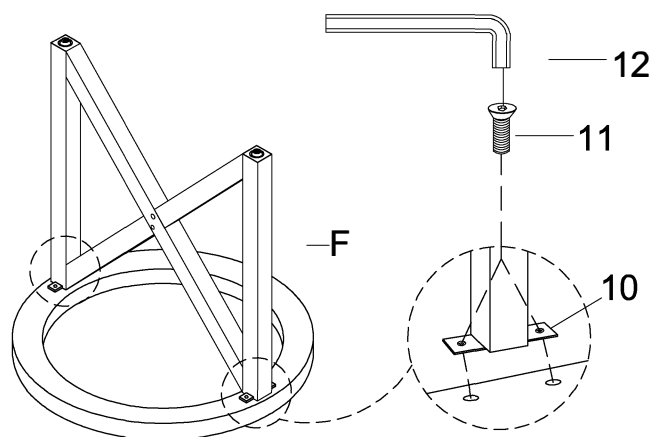 


STEP : 10

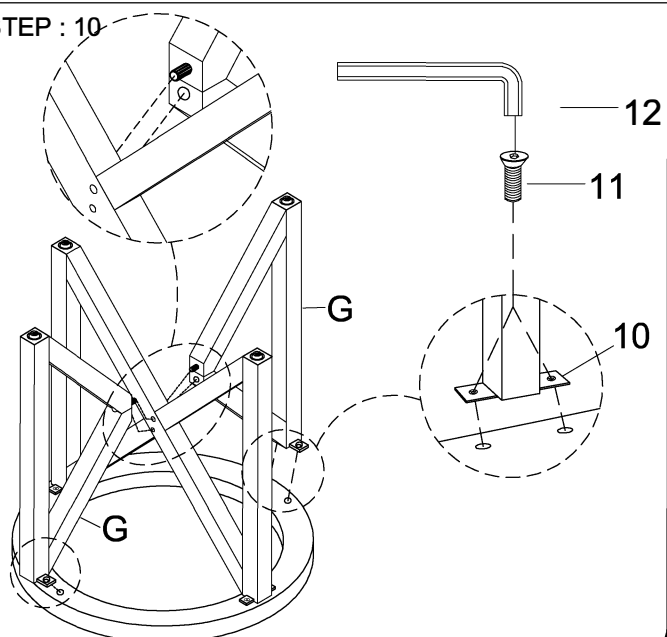 


Assembly Instruction for
ZOEY THREE PACK OCCASIONAL SET
20086759 / 10001245001

 
STEP : 11

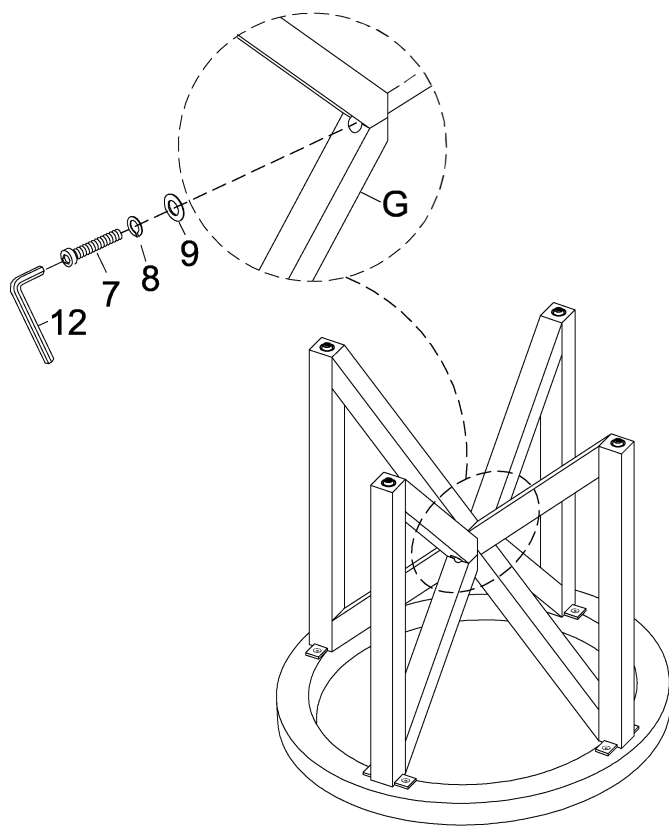

STEP : 12

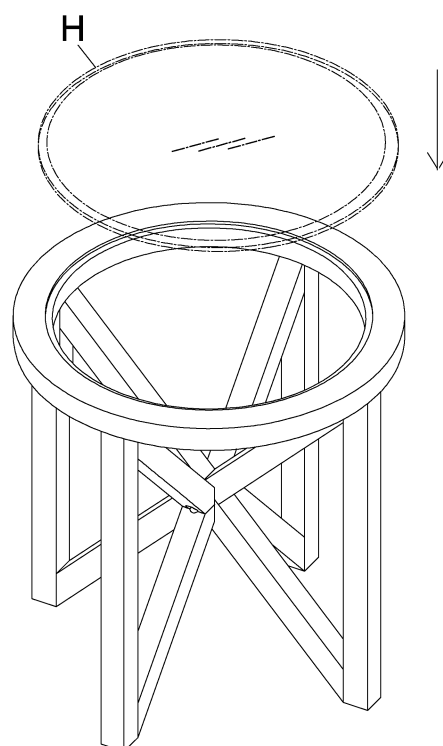 

COMPLETED

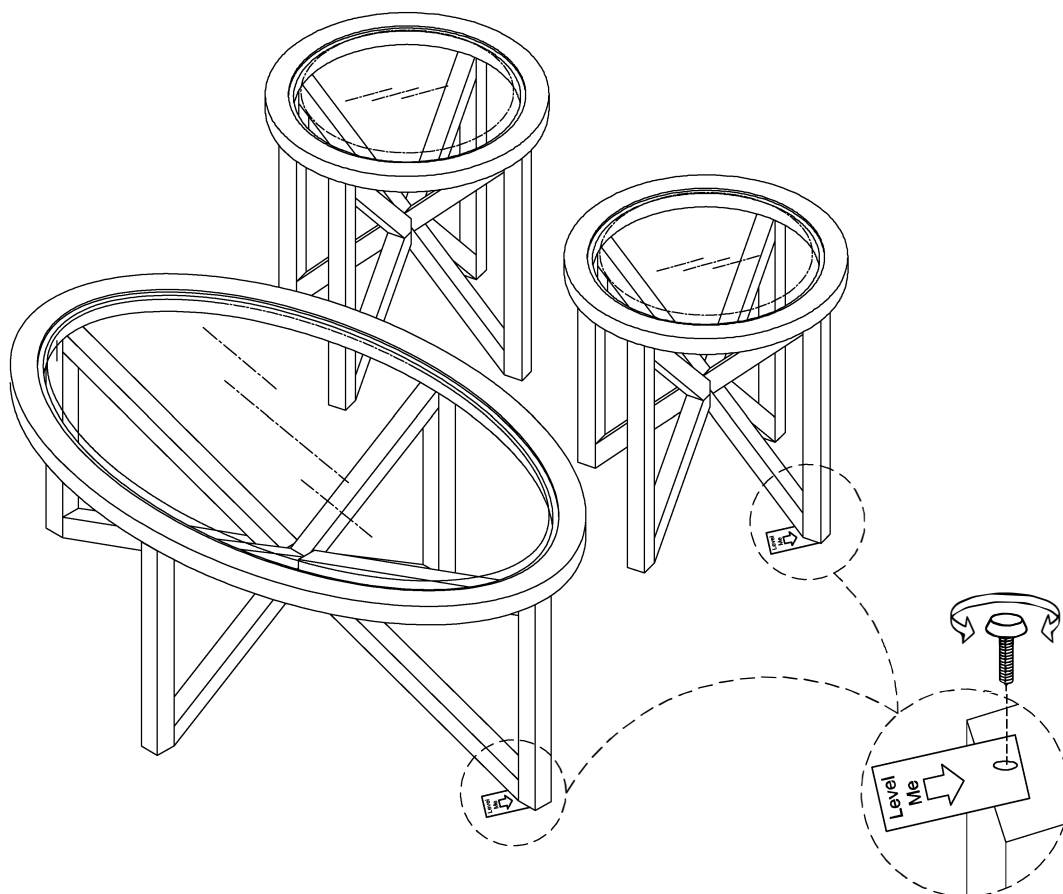 



WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.