


COUNTER STOOL

SKU # 2153005001

SKU # 2153005002

SKU # 2153005003


SKU # 2153005004

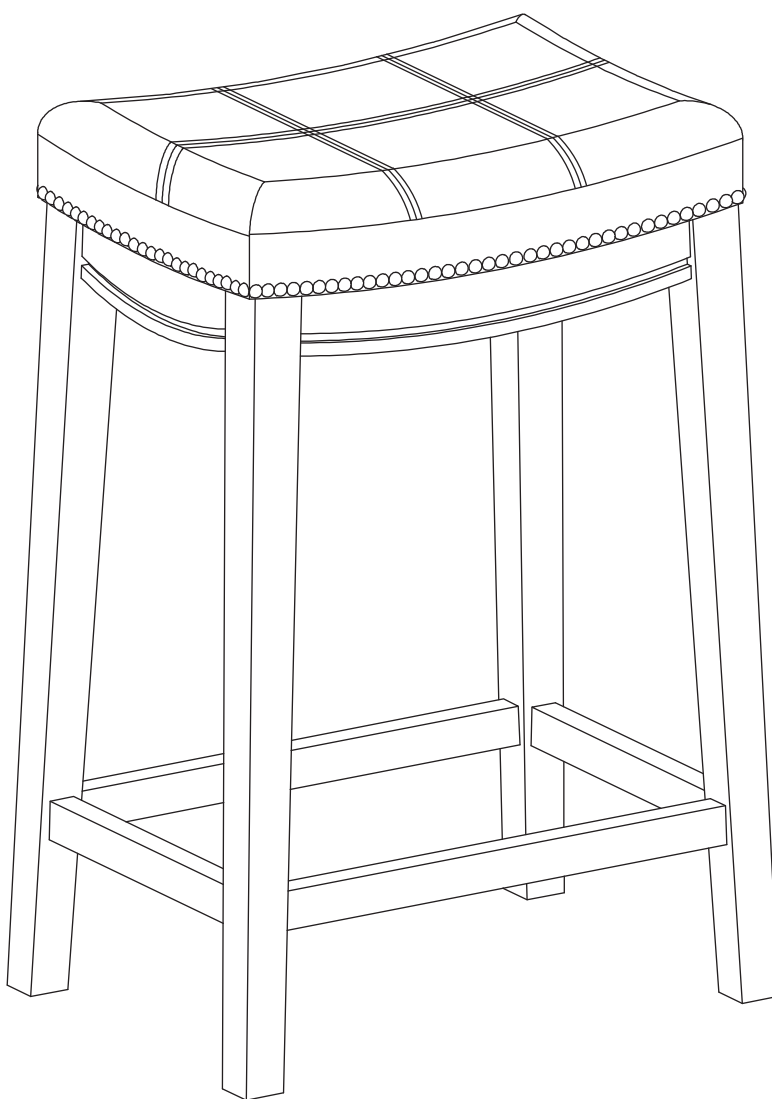

HOA-20146

MADE IN VIETNAM

PART LIST

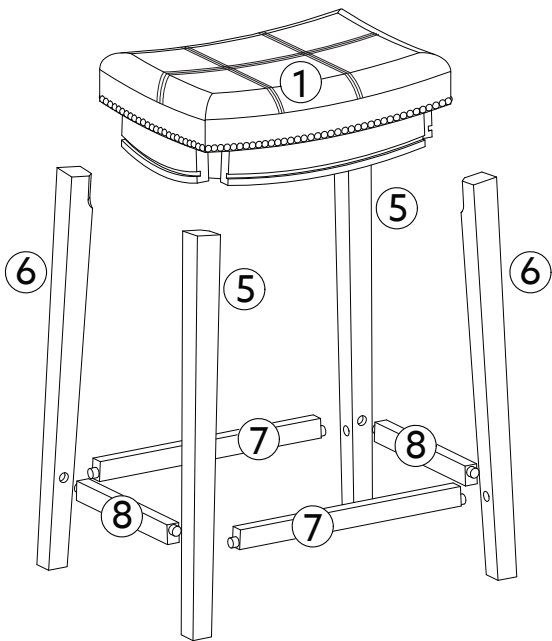





SPARE PARTS - AVAILABLE FOR REPLACEMENT

#0	HARDWARE PACK	01
#5	LEFT SIDE LEG	02
#6	RIGHT SIDE LEG	02
#7	FOOTREST	02
#8	STRETCHER	02

SPARE PARTS - NOT AVAILABLE FOR REPLACEMENT



#1	CUSHION WITH FRAME	01
----	--------------------	----

HARDWARE LIST

A		BOLT (Ø1/4"X 2-3/8"L)	08
B		SPRING WASHER (Ø1/4")	08
C		FLAT WASHER (Ø1/4")	08
D		ROUND HEAD SCREW (Ø4MMX1-3/4")	08

NOTE: Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


TOOLS REQUIRED




ALLEN KEY		SUPPLIED
PHILLIPS SCREWDRIVER		NOT SUPPLIED

IMPORTANT:


1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. For ease of assembly, two adults are recommended.

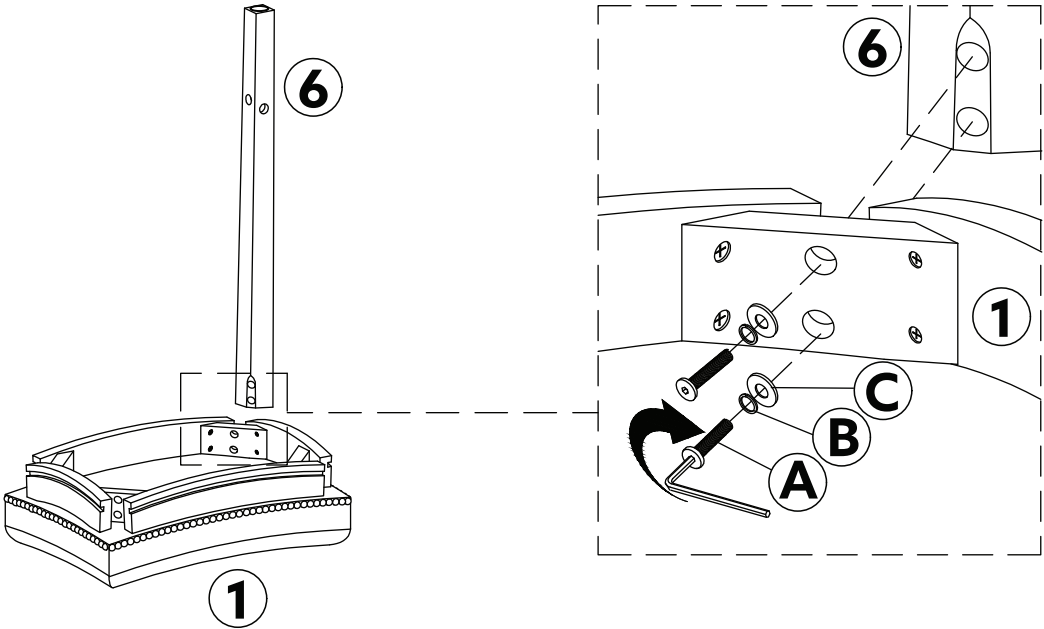


1.




A		02
B		02
C		02

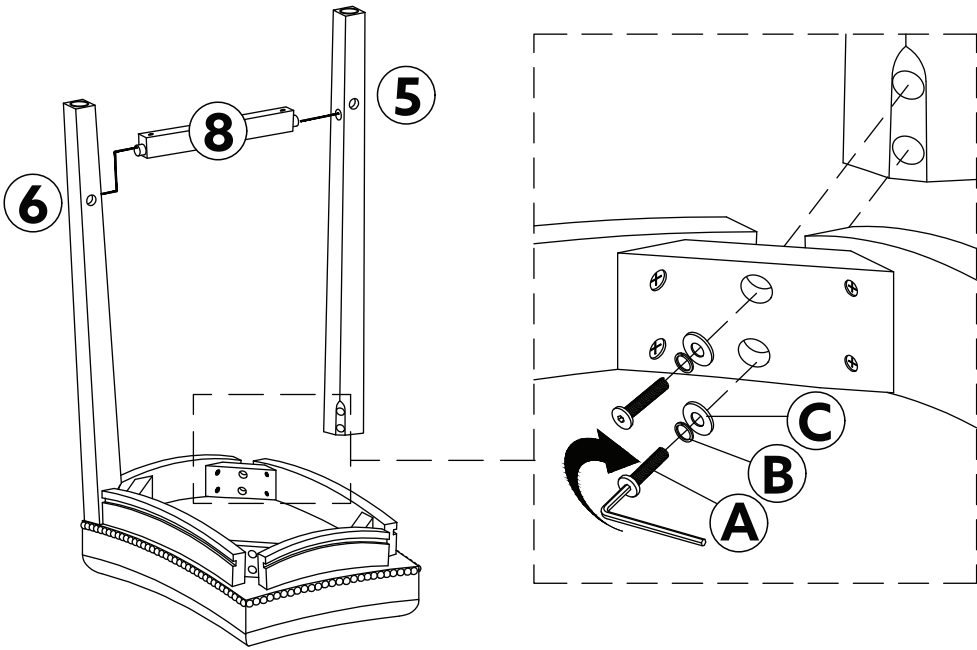2.







A		02
B		02
C		02

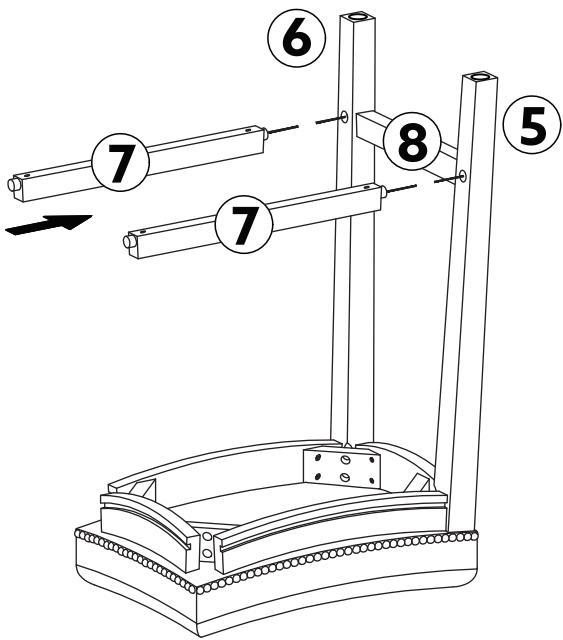3.




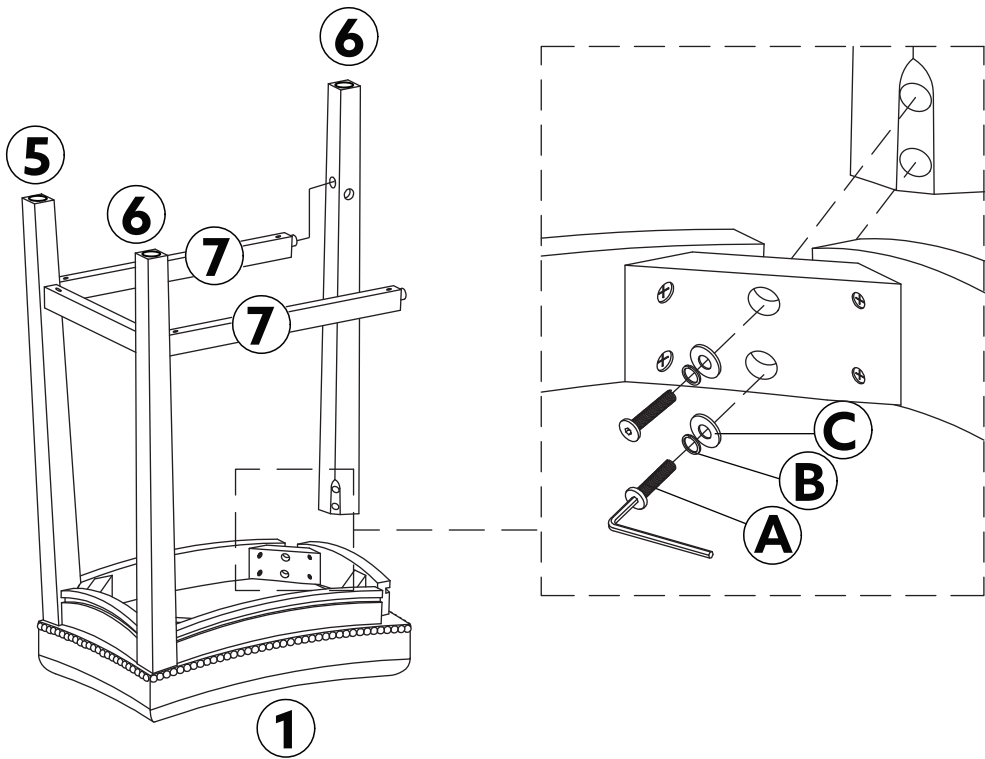


4.




A		02
B		02
C		02

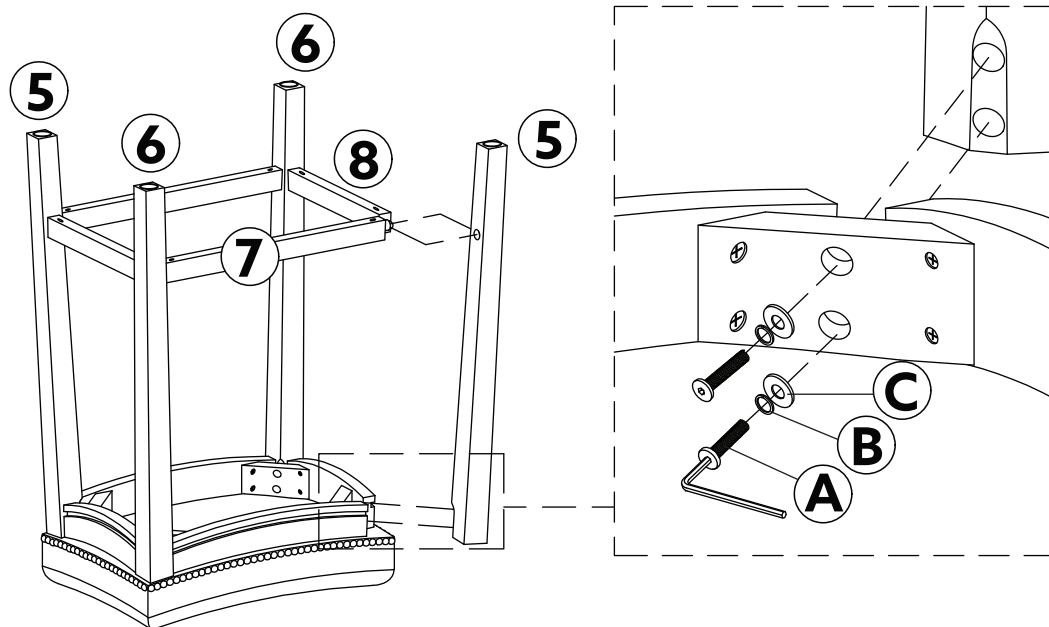
5.



A		02
B		02
C		02


6.

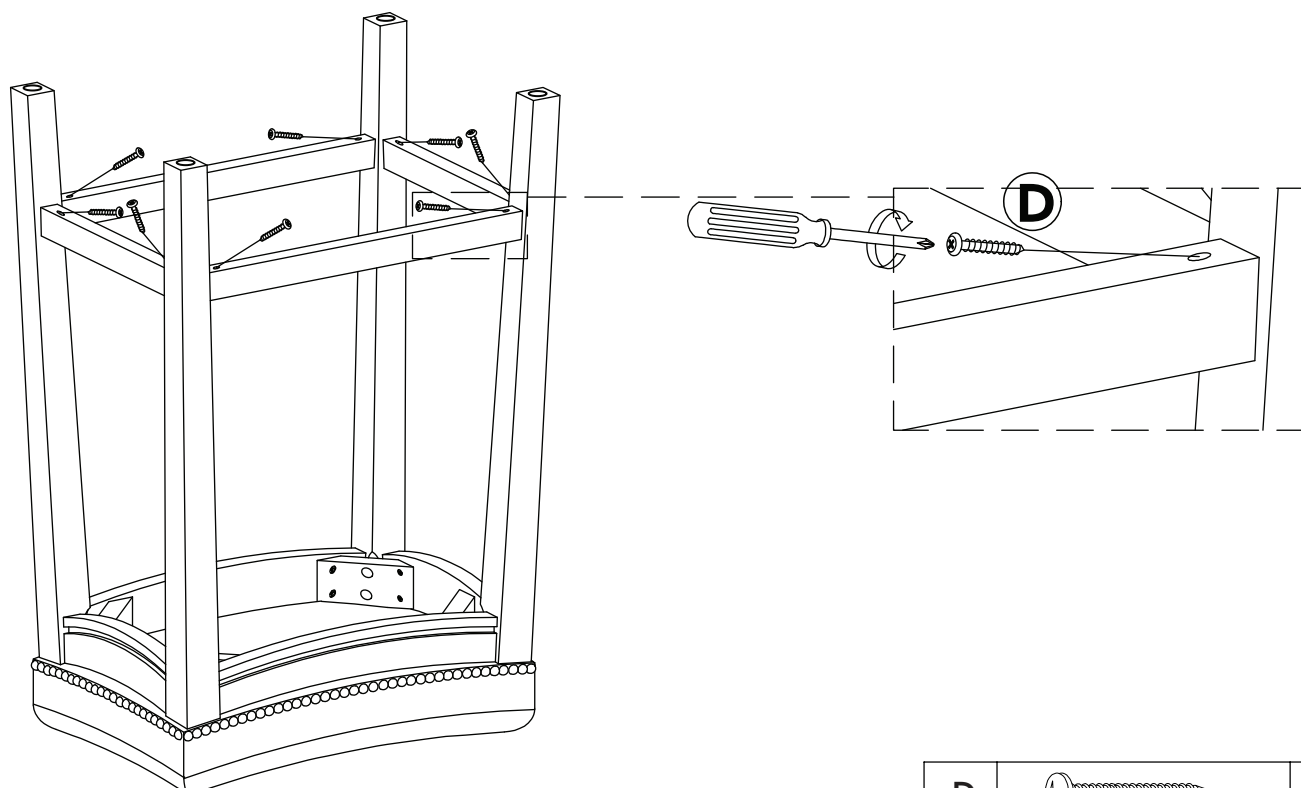

D		08
---	---	----

7.

ASSEMBLY COMPLETED

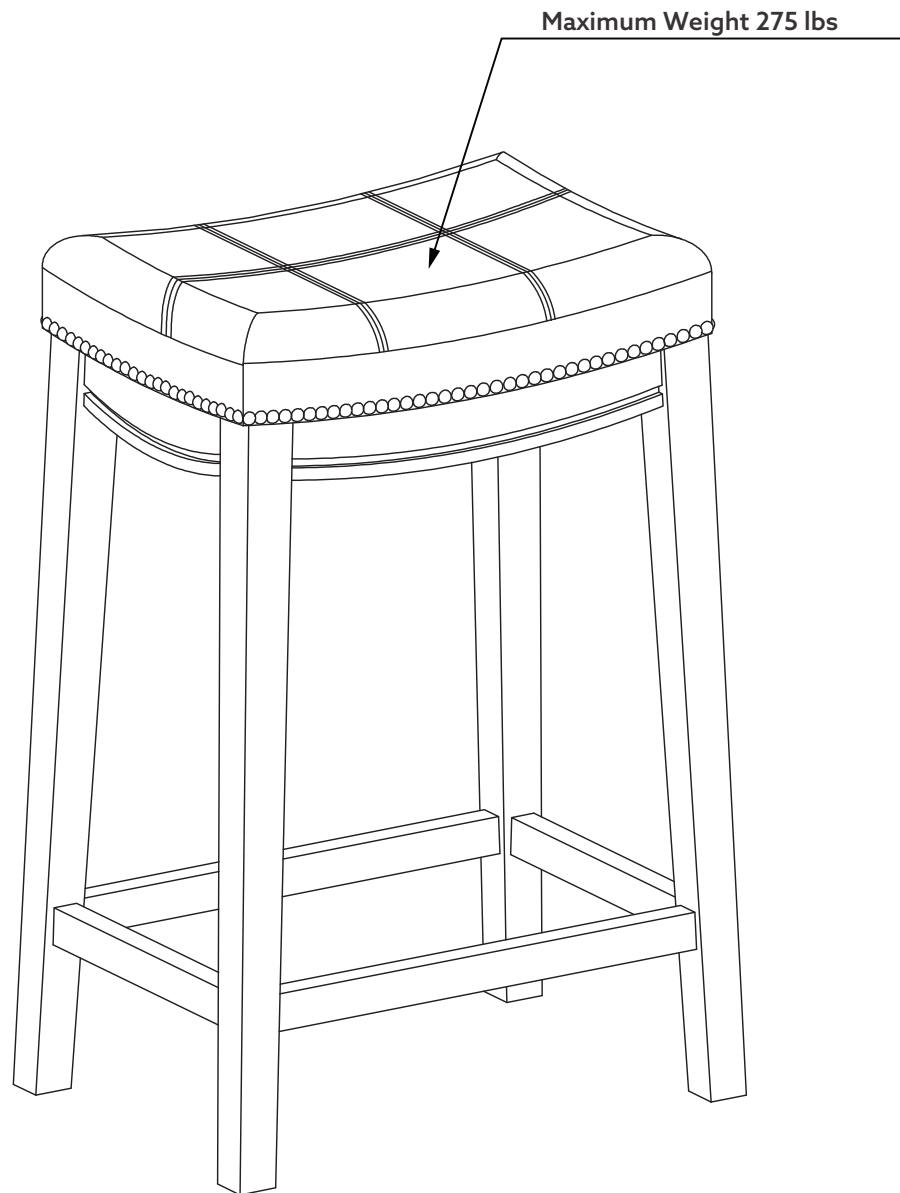

Tighten bolts firmly.

Level the unit before fully tighten all bolts.