
Craftsman Bar Stool SKU# 2014071001 SKU# 2014054001 SKU# 2258052001

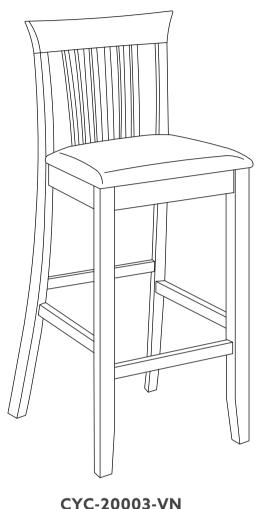


C1C-20003-V

# MARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
  parts and hardware that may present a choking hazard to small children.
  Bob's furniture should be assembled only by responsible adults and children
  should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
  prescribed in these instructions to anchor furniture to wall. Proper use of the
  wall mounting hardware can significantly reduce the potential for furniture
  tip-over and crushing injuries.

## **PART LIST**

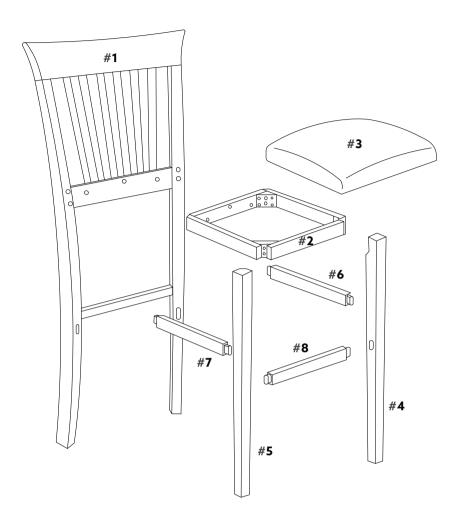

#1	CHAIR BACK	01
#2	SEAT FRAME	
#3	SEAT CUSHION	
#4	RIGHT FRONT LEG	01
#5	LEFT FRONT LEG	01
#6	RIGHT SIDE STRETCHER	
#7	LEFT SIDE STRETCHER	
#8	FRONT STRETCHER	

### **HARDWARE LIST**

Α		BOLT (Ø1/4" X 3-1/2")	04
В		BOLT (Ø1/4" X 2-3/8")	04
С		BOLT (Ø1/4" X 2")	03
D		SPRING WASHER	11
Е		FLAT WASHER	11
F	<b>{}</b>	WOOD SCREW (Ø4MM X 1-3/4")	06
G	<b>6</b> }************************************	WOOD SCREW (Ø4MM X 1-3/8")	05

**NOTE:** Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


## **TOOLS REQUIRED**


ALLEN KEY	SUPPLIED
PHILLIP SCREWDRIVER	NOT SUPPLIED


#### **IMPORTANT:**


- 1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
- 2. Do not over tighten screws and bolts to avoid stripping.
- 3. Please use hand tools to assemble this product. Do not use power tools.
- 4. For ease of assembly, two adults are recommended

## 1.

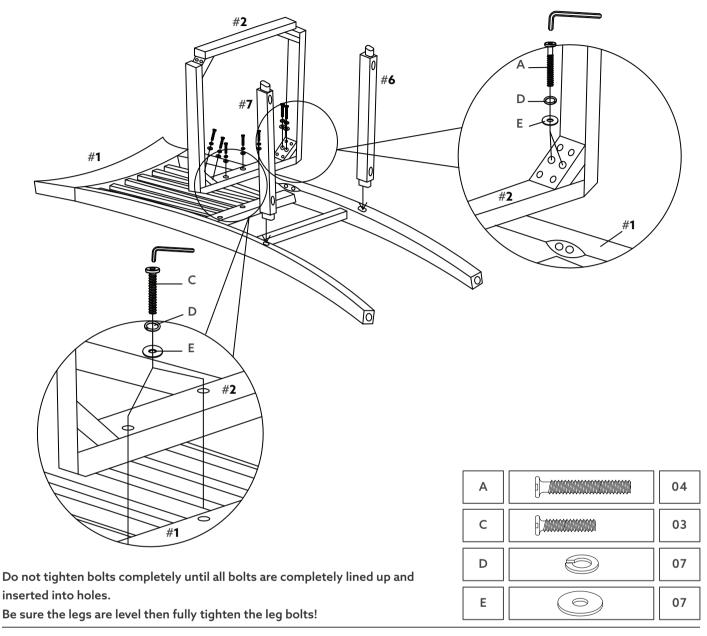

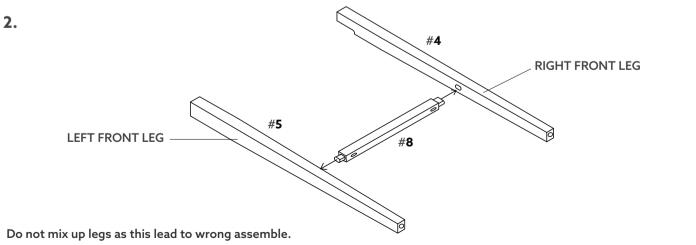

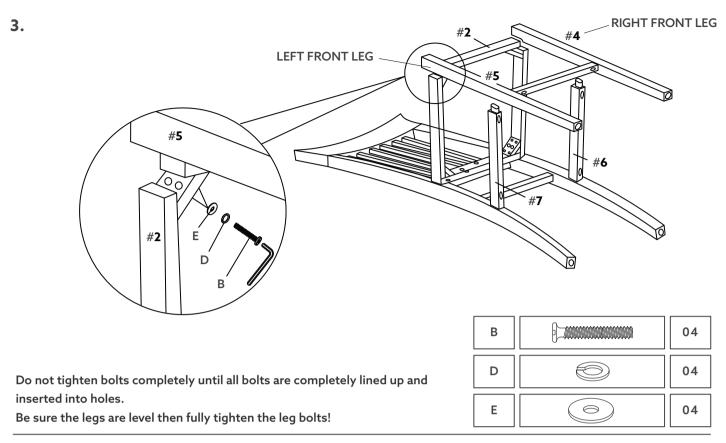

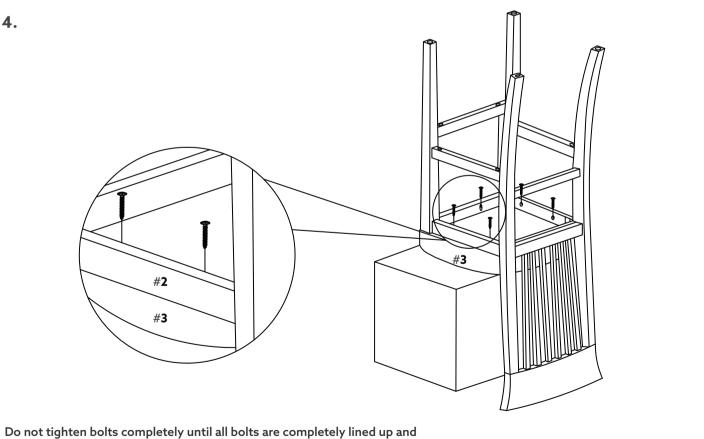


inserted into holes.

Be sure the legs are level then fully tighten the leg bolts!

05

G

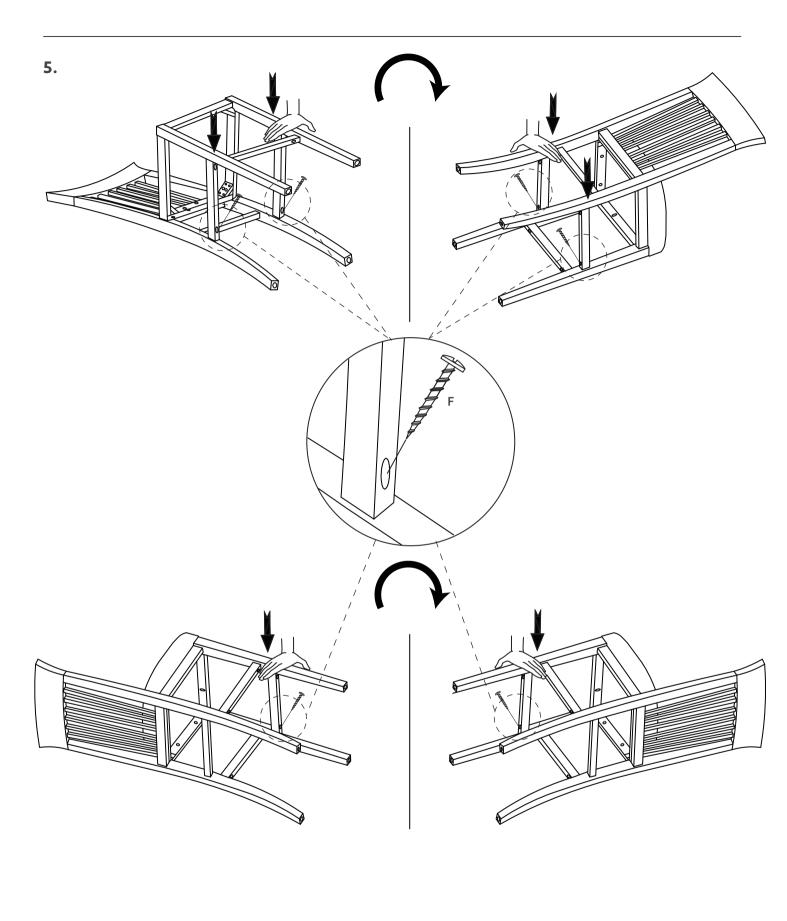

Press the legs and stretchers to make sure no gaps then tighten the screws.

