
EDISON 6 DRAWER ROLLING CART

2026118003 - Gray 2026118001 - Natural 2026118002 - White

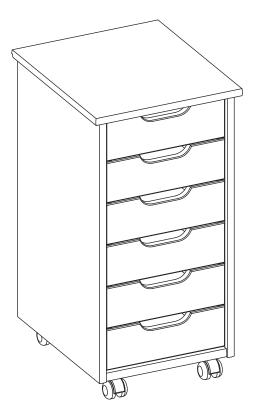




for Assembly




MARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- · Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

PART LIST

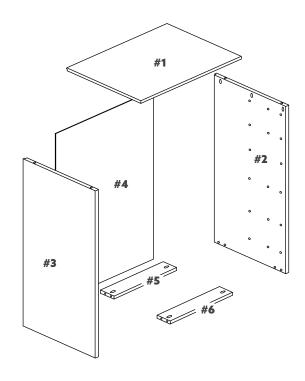

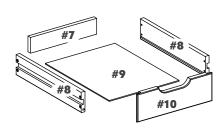

#1	TOP PANEL	01
#2	RIGHT SIDE PANEL	01
#3	LEFT SIDE PANEL	01
#4	BACK PANEL	01
#5	BACK RAIL	01
#6	FRONT RAIL	01
#7	DRAWER BACK PANEL	06
#8	DRAWER SIDE PANEL	12
#9	DRAWER BOTTOM PANEL	
#10	DRAWER FRONT PANEL	06
#00	HARDWARE PACK	01

HARDWARE LIST

Α		WOOD DOWEL 8 X 30 MM	12
В	Diminino	SCREW 3 X 25 MM	48
С	O mmin	SCREW 4 X 30 MM	10
D		PLASTIC SLIDE	12
Е	©	PLASTIC WHEELS	04
F		NAIL 1,3 X 18,4 MM	28
G		WHEELS SUPPORT	04

NOTE: Find the label of "Hardware Enclosed" on one of the cartoon corner then follow the red ribbon to get the hardware bag.


TOOLS REQUIRED

PHILLIPS HEAD SCREWDRIVER	NOT SUPPLIED
HAMMER	NOT SUPPLIED


IMPORTANT:

- 1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
- 2. Do not over tighten screws and bolts to avoid stripping.
- 3. Please use hand tools to assemble this product. Do not use power tools.
- 4. For ease of assembly, two adults are recommended


Attention! Do not use nails or screws to secure the glides to the side panels. A soft beat with a hammer in the correct sequence is enough.

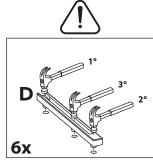


Start assembly from ends, then go to the middle pin.

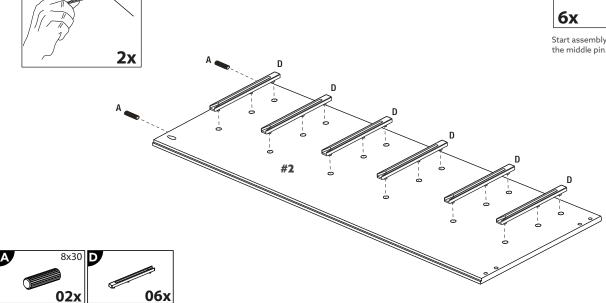


Attention! Do not use nails or screws to secure the glides to the side panels. A soft beat with a hammer in the correct sequence is enough.

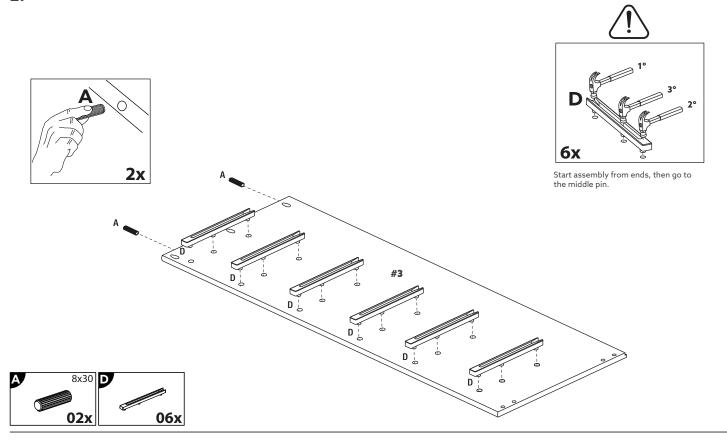


3.

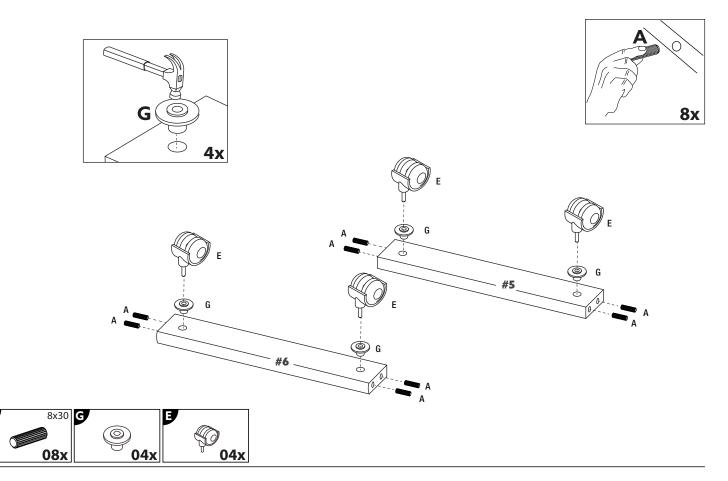




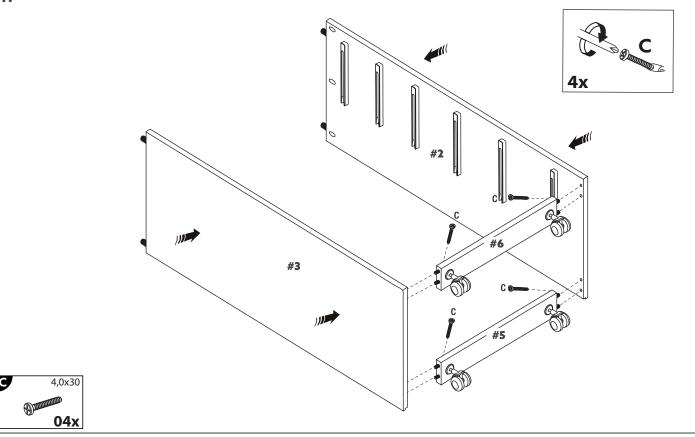

5.

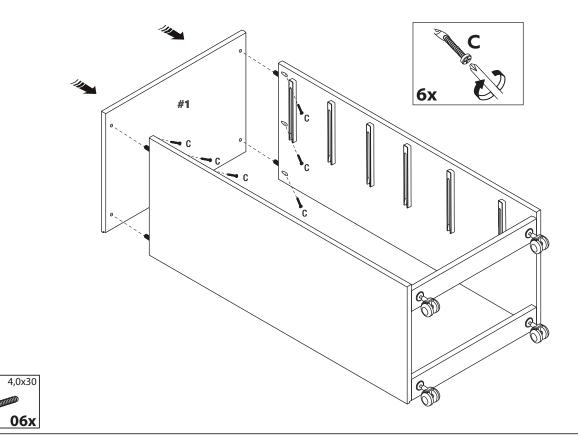

6.

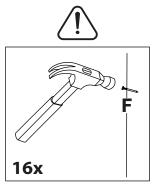

Use all back panels nails. Evenly spaced, they help make the unit strong.

