


# Friseal Barstool with Arms

SKU# 2140035001

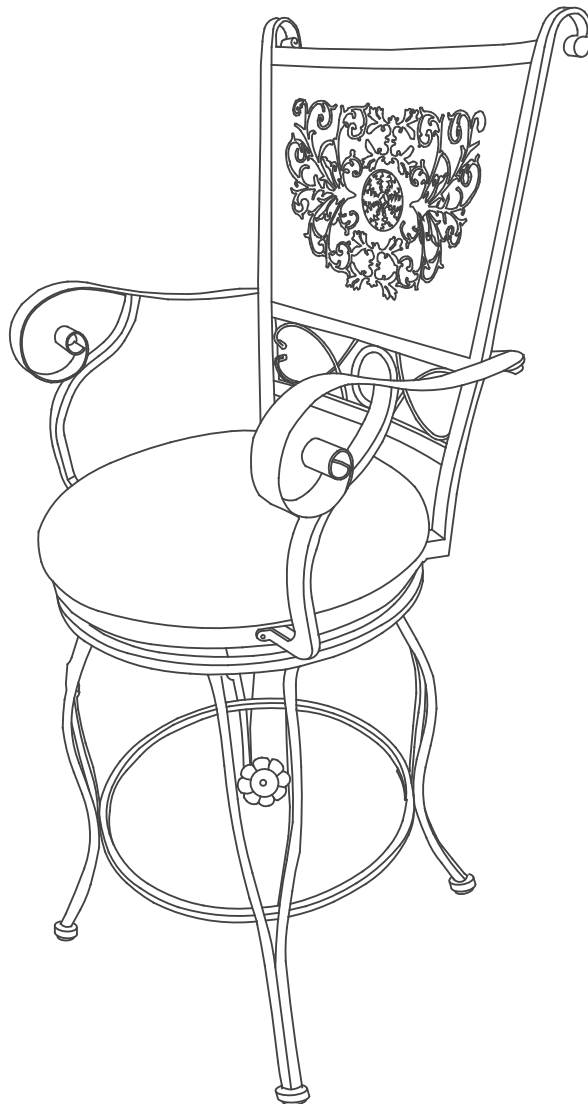


QBY-20117-CN

---







MADE IN CHINA

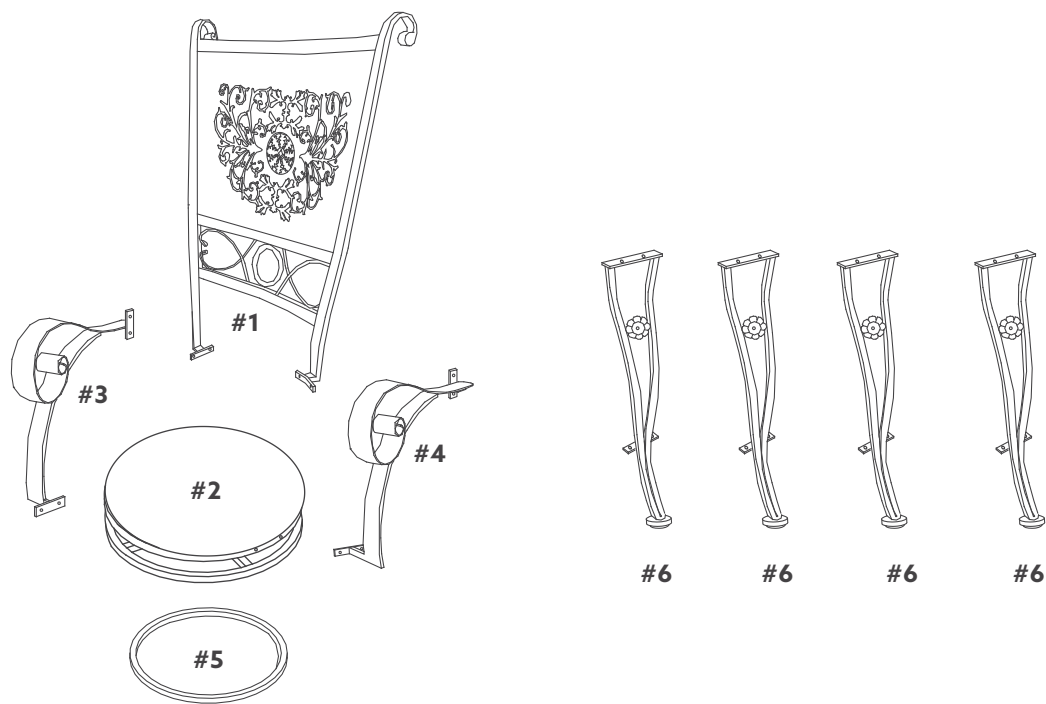PART LIST





#1	BACK	01
#2	SEAT	01
#3	LEFT ARM	01
#4	RIGHT ARM	01
#5	SUPPORT - RING	01
#6	LEG	04

## HARDWARE LIST

A		BOLT (Ø1/4"x5/8")	16
B		BOLT (Ø1/4"x1")	08
C		NUT	08
D		SPRING WASHER	20
E		FLAT WASHER	36
F		BOLT (Ø1/4"x1/2")	04

**NOTE:** Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


## TOOLS REQUIRED

ALLEN KEY		SUPPLIED
OPEN SPANNER		SUPPLIED


### IMPORTANT:




1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. For ease of assembly, two adults are recommended

1.

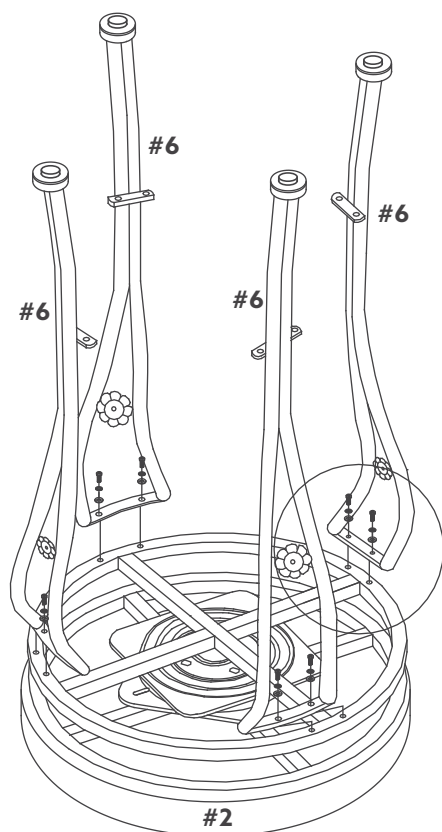


Do not fully tighten the bolts.

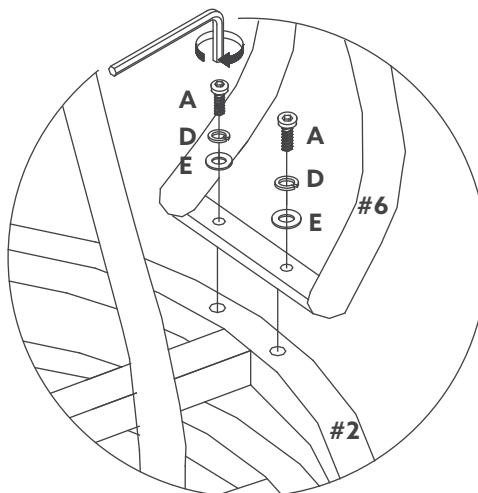





A		08
D		08
E		08

2.

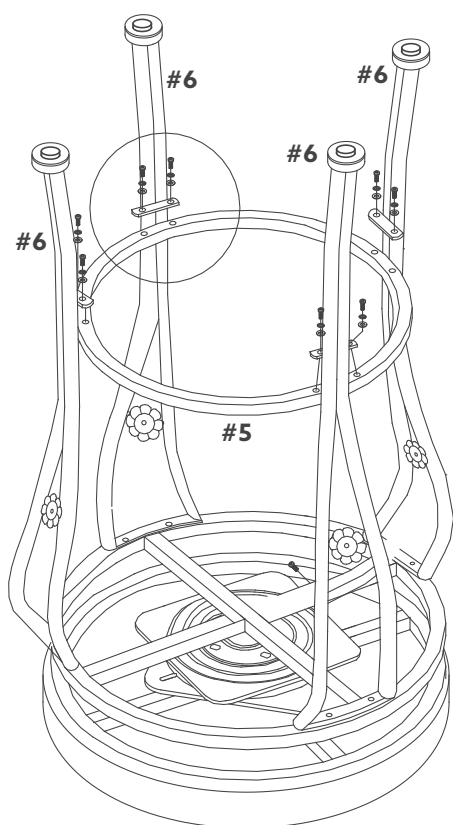


Do not fully tighten the bolts.

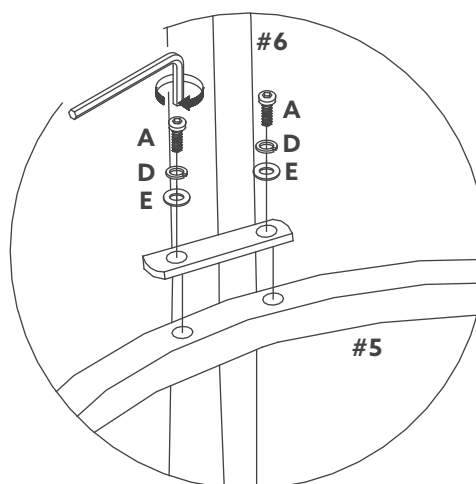




A		08
D		08
E		08

3.



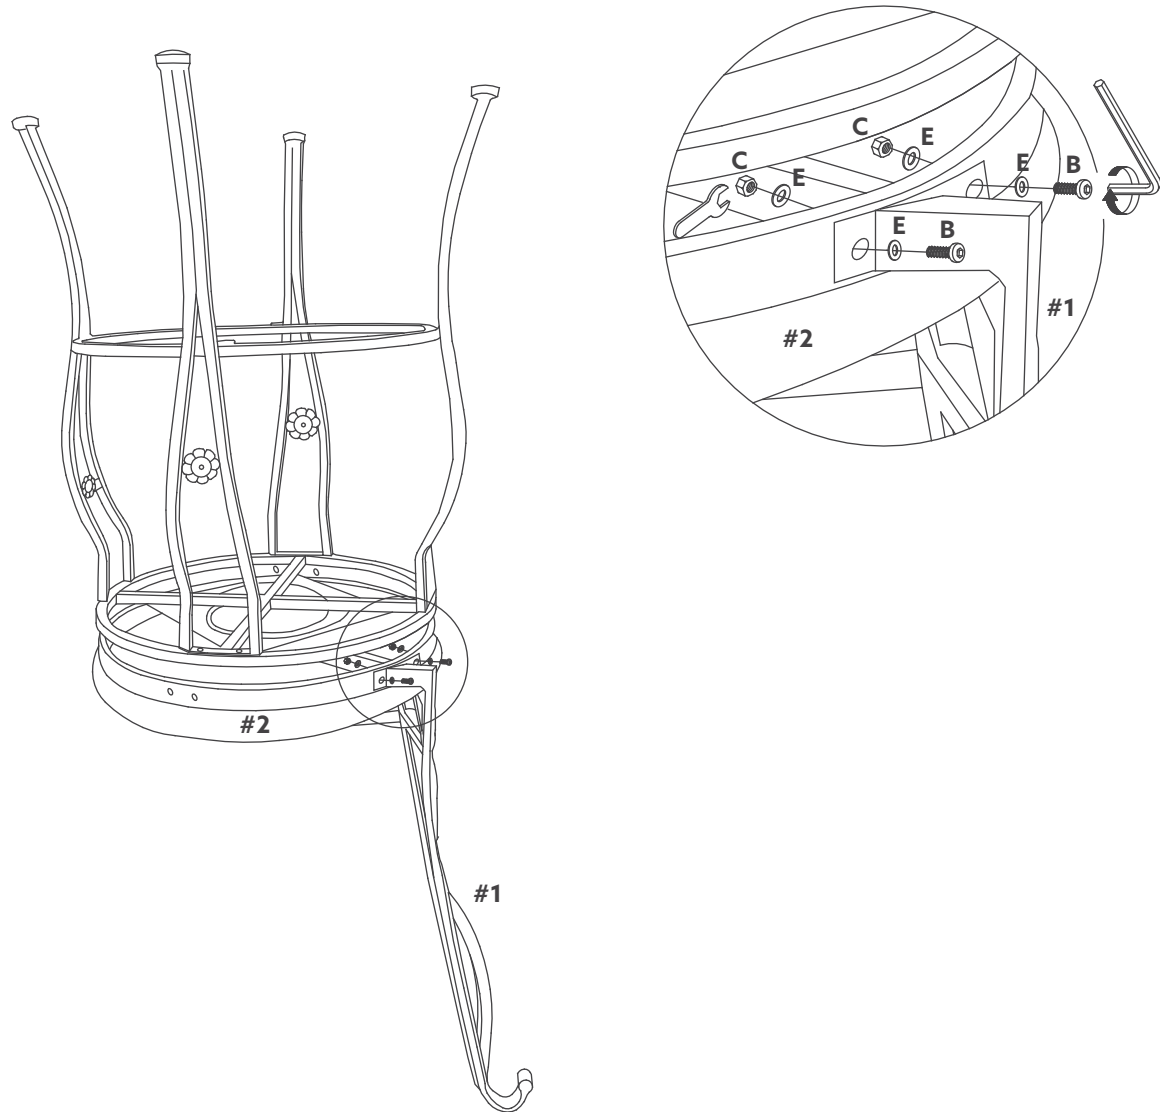
Do not fully tighten the bolts.








B		04
C		04
E		08


4.

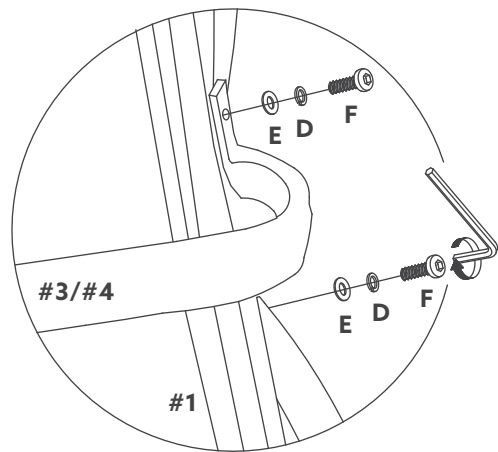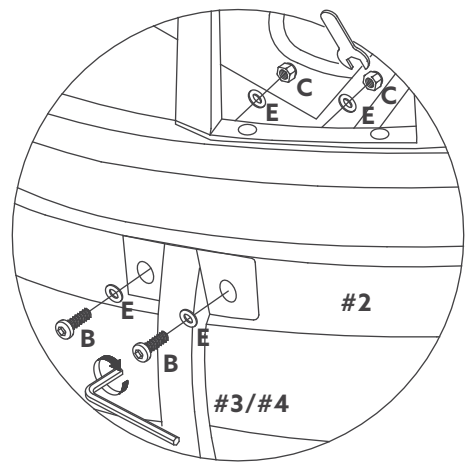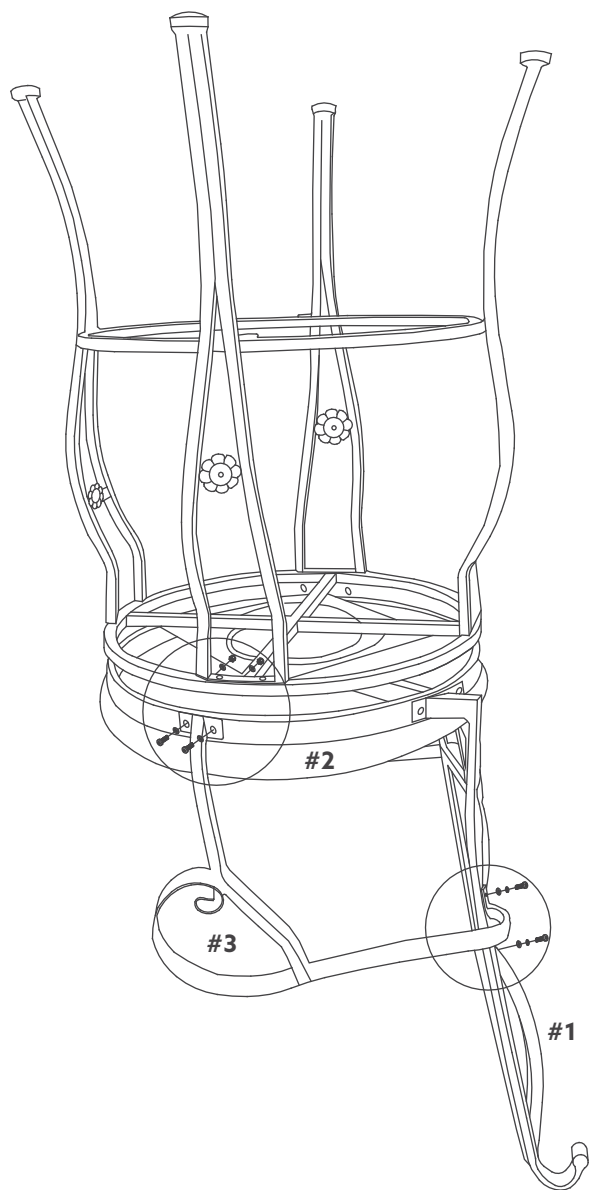Do not fully tighten the bolts.



B		04
C		04
D		04
E		12
F		04

5.

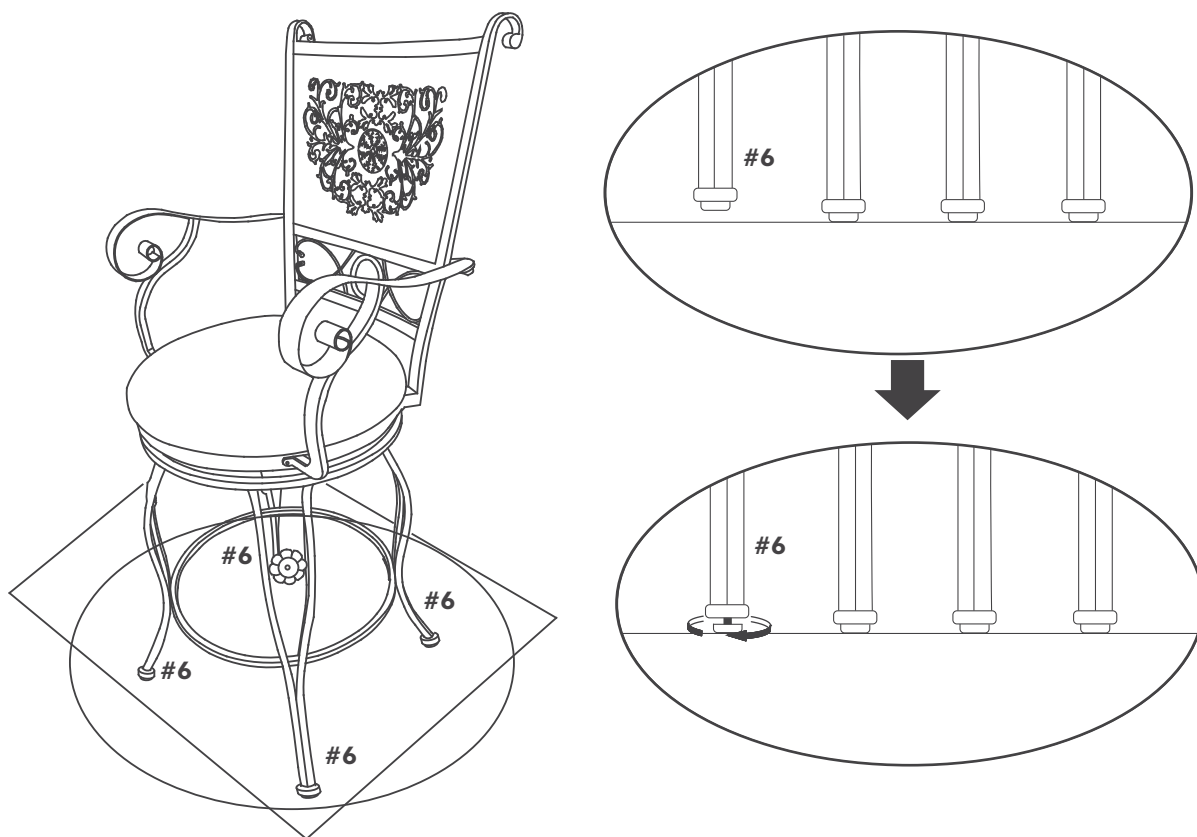

6. Tighten all bolts firmly.

Tested to 400 pounds

