


# COUNTER STOOL

SKU # 2153010001

SKU # 2153010002

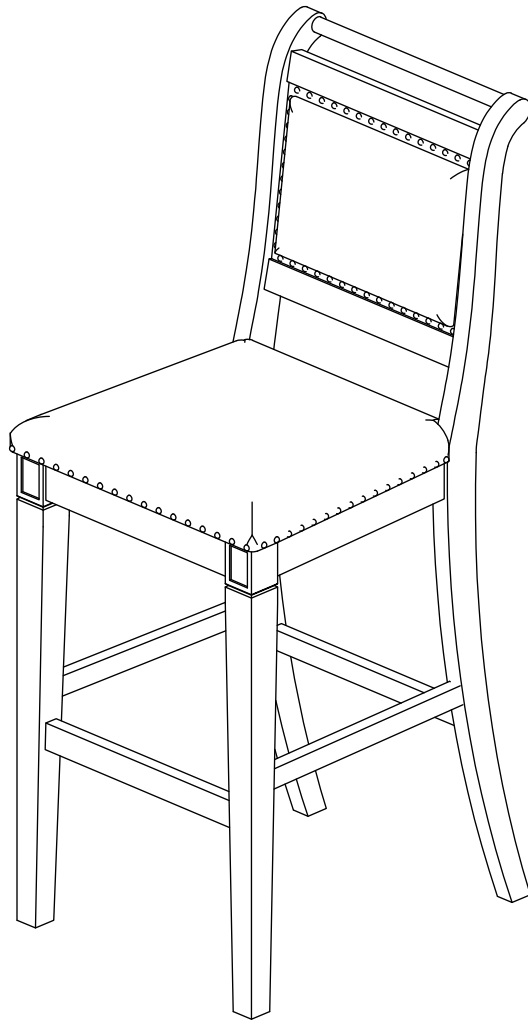


HOA-20146

---

MADE IN VIETNAM

PART LIST

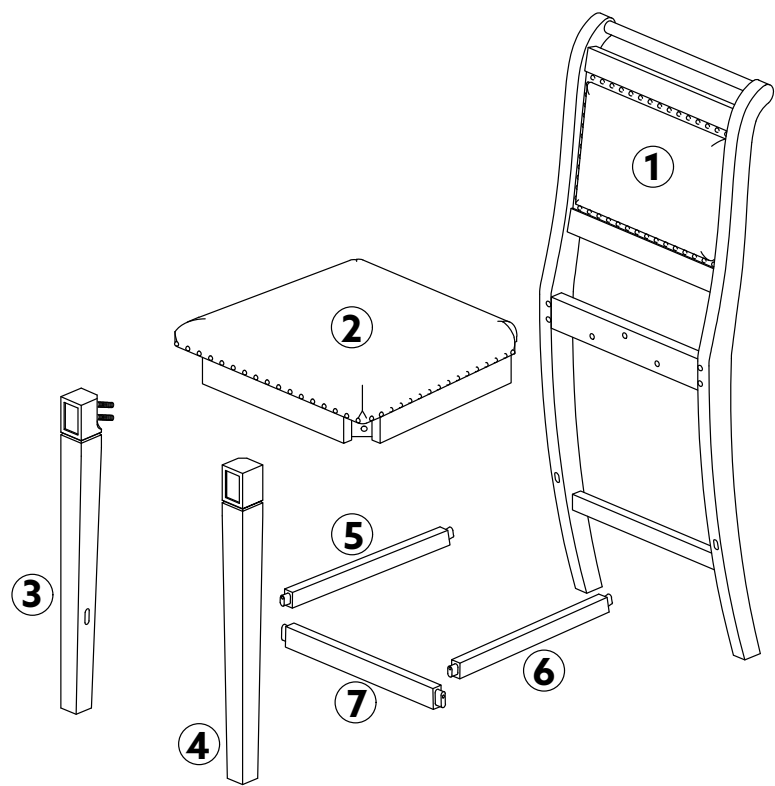







SPARE PARTS - AVAILABLE FOR REPLACEMENT

#3	LEFT FRONT LEG	01
#4	RIGHT FRONT LEG	01
#5	LEFT - SIDE STRETCHER	01
#6	RIGHT - SIDE STRETCHER	01
#7	FOOTREST	01
#0	HARDWARE PACK	01

SPARE PARTS - NOT AVAILABLE FOR REPLACEMENT




#1	BACK FRAME	01
#2	SEAT FRAME	01

## HARDWARE LIST

A		BOLT (Ø5/16" X 3 1/8")	04
B		BOLT (Ø5/16" X 1 1/2")	03
C		SPRING WASHER (Ø5/16")	11
D		FLAT WASHER (Ø5/16")	11
E		NUT	04
F		SCREW (Ø4MMX1-3/4")	06

**NOTE:** Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


## TOOLS REQUIRED




ALLEN KEY		SUPPLIED
WRENCH		SUPPLIED
PHILLIPS SCREWDRIVER		NOT SUPPLIED

### IMPORTANT:


1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. For ease of assembly, two adults are recommended.

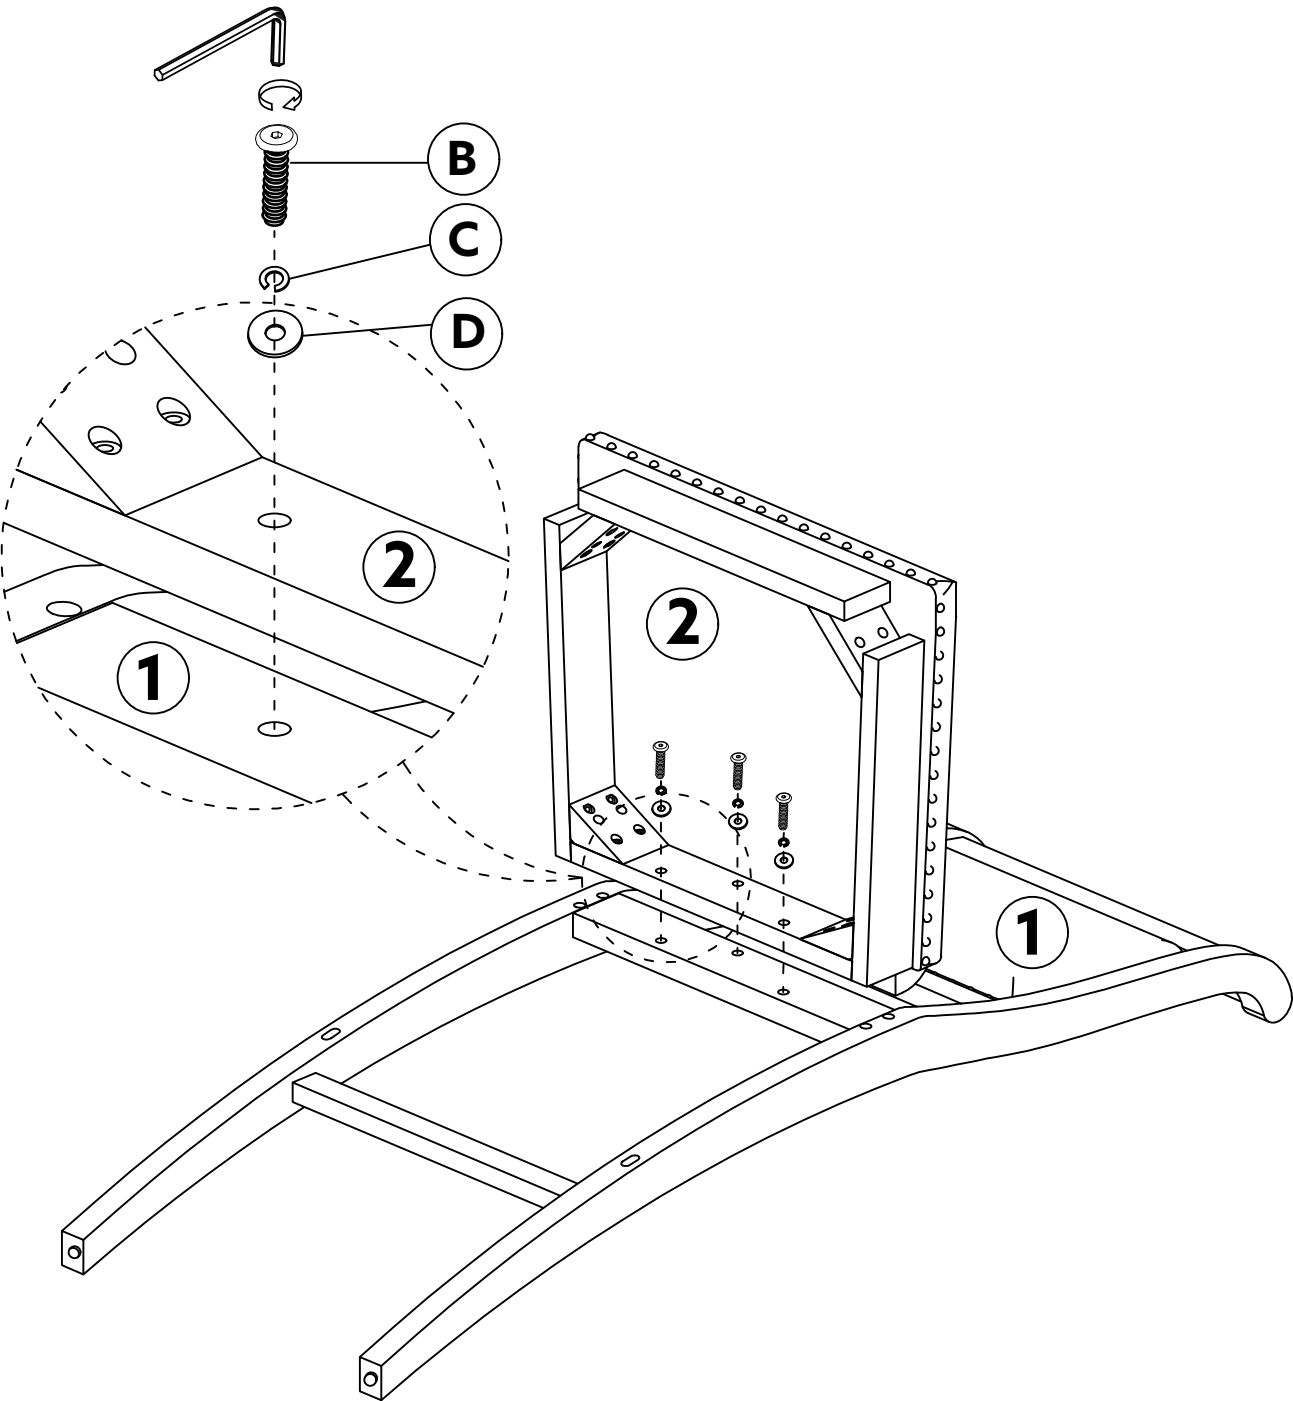


1.




<b>B</b>		<b>03</b>
<b>C</b>		<b>03</b>
<b>D</b>		<b>03</b>

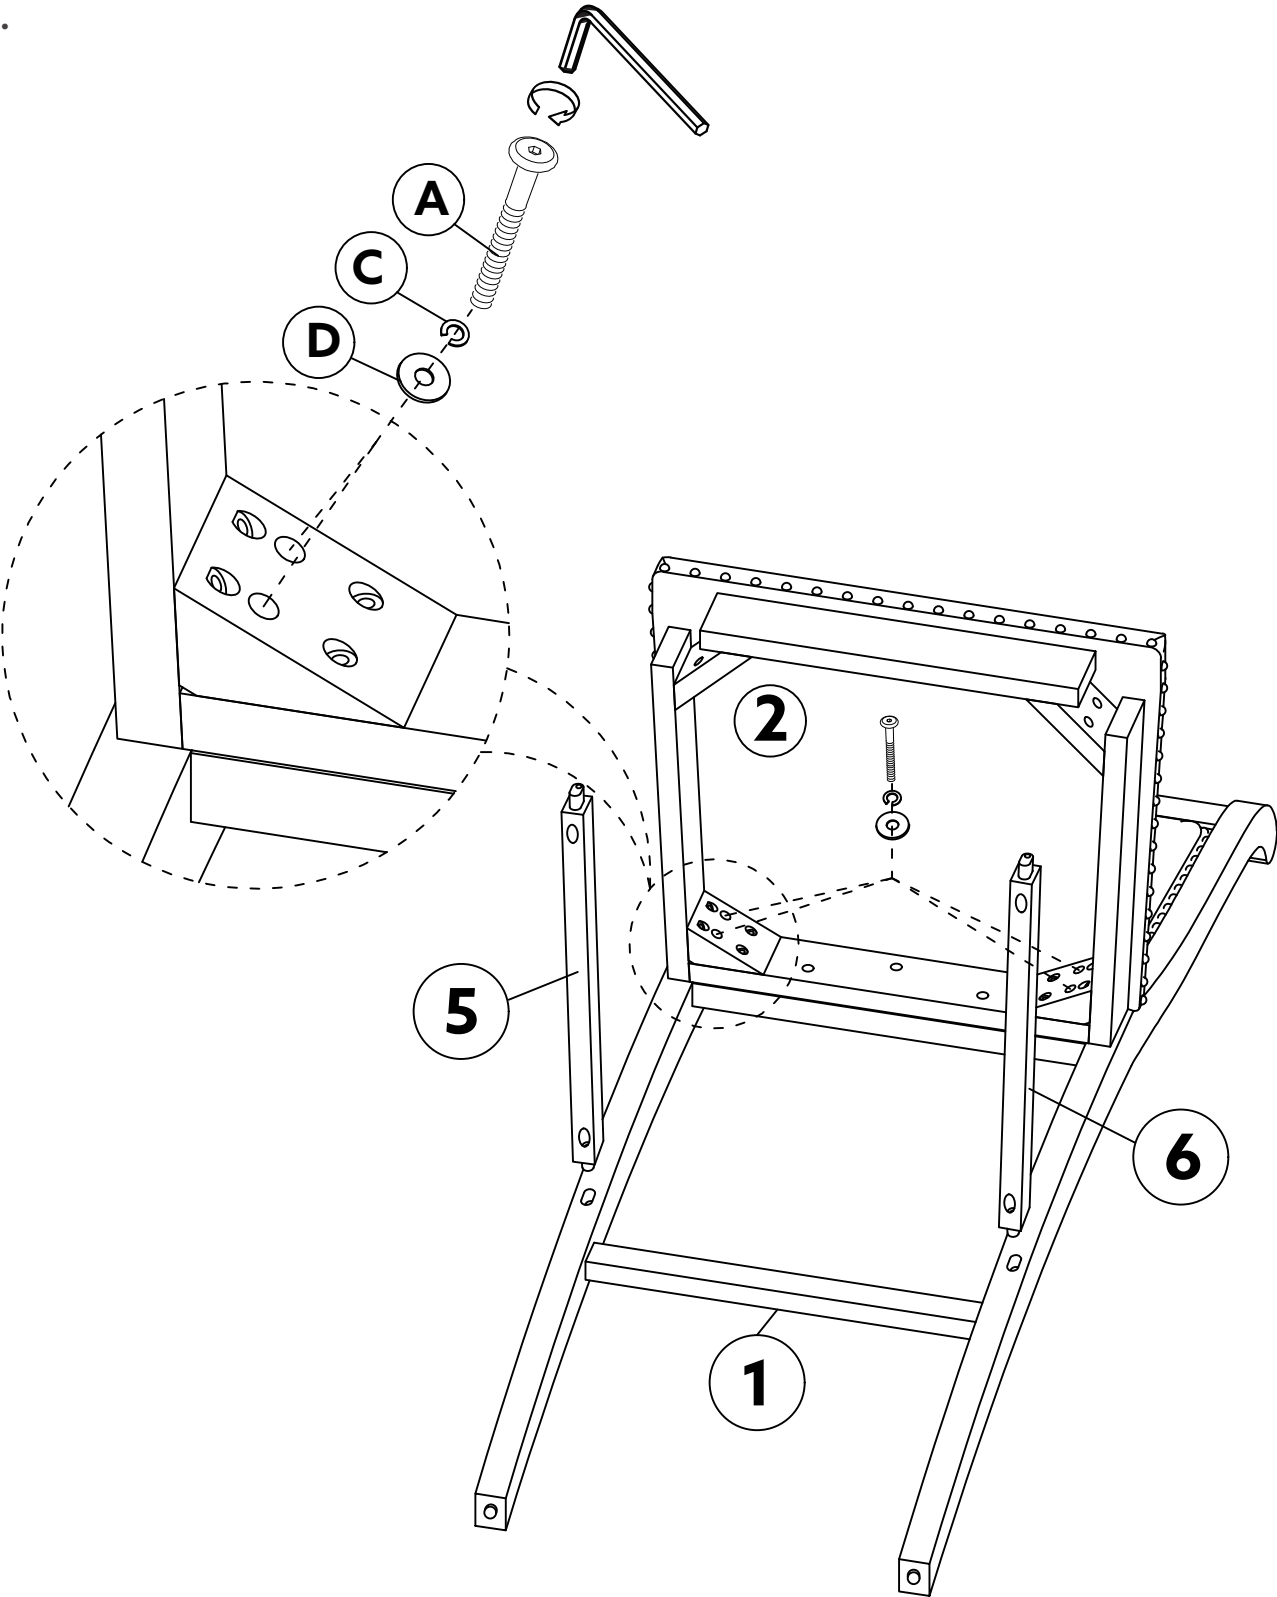


2.




<b>A</b>		<b>04</b>
<b>C</b>		<b>04</b>
<b>D</b>		<b>04</b>

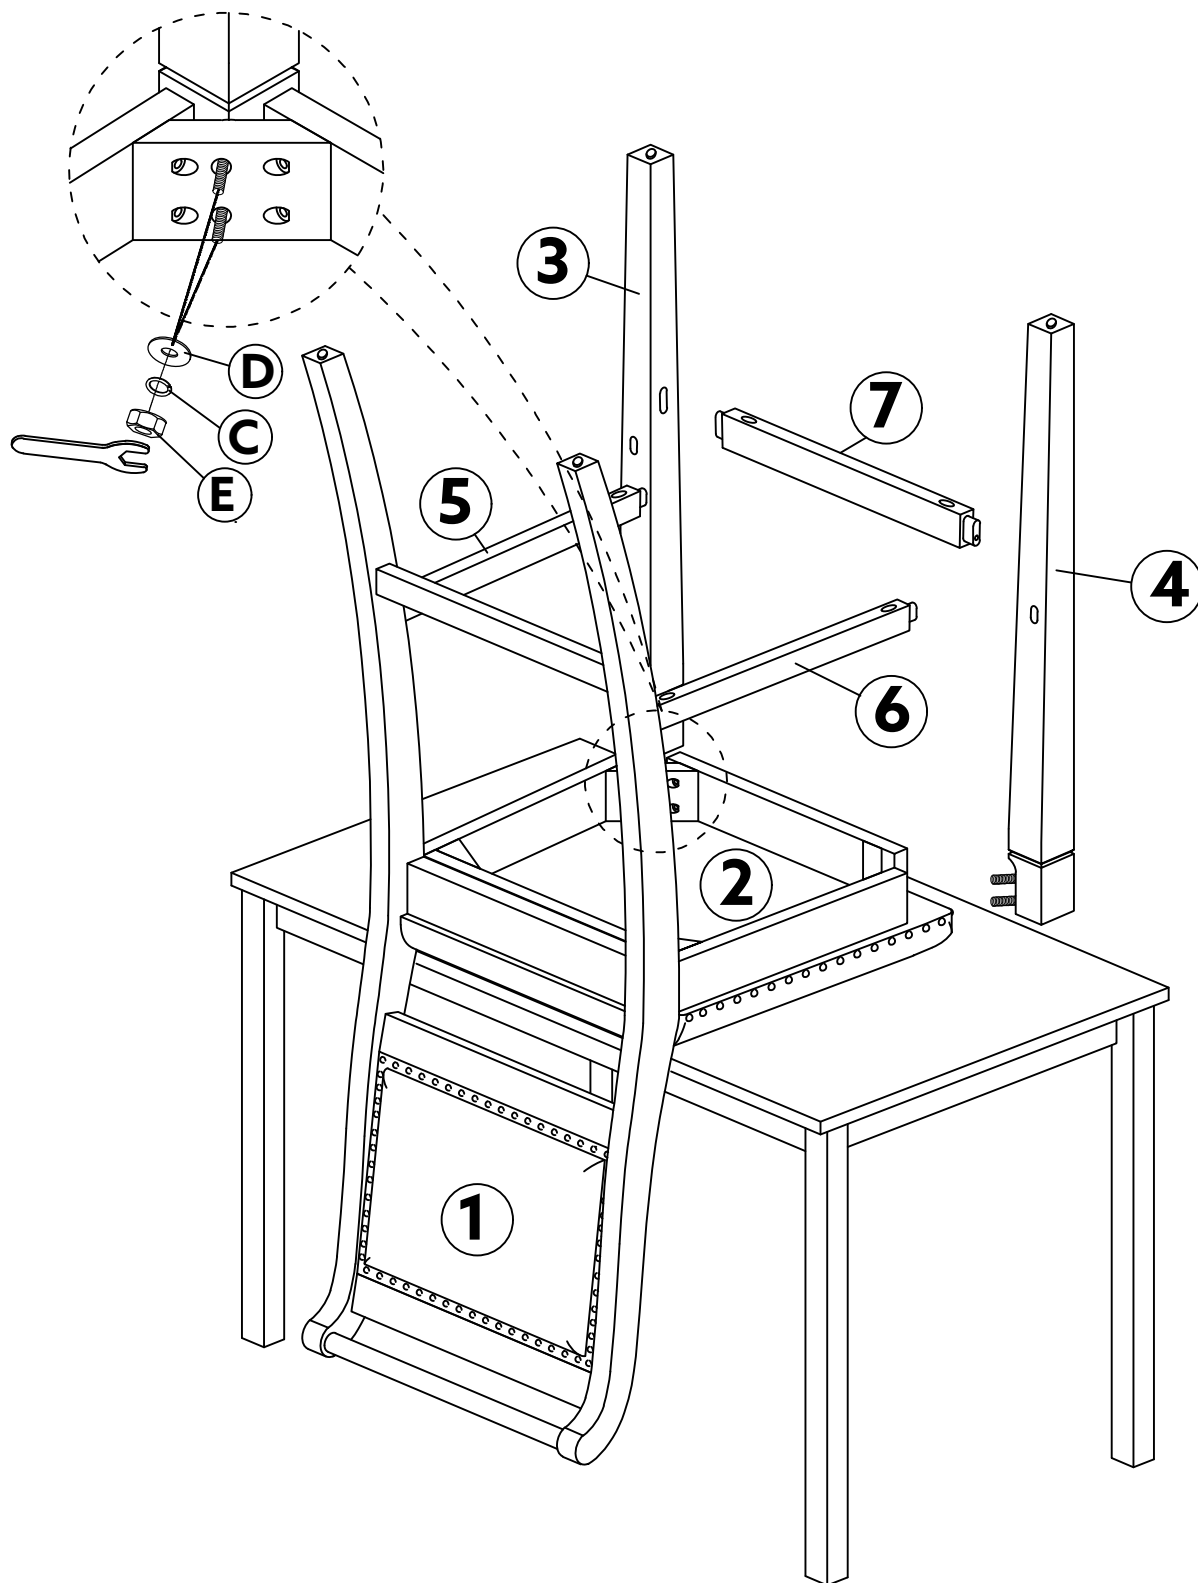3.



<b>C</b>		<b>04</b>
<b>D</b>		<b>04</b>
<b>E</b>		<b>04</b>


4.

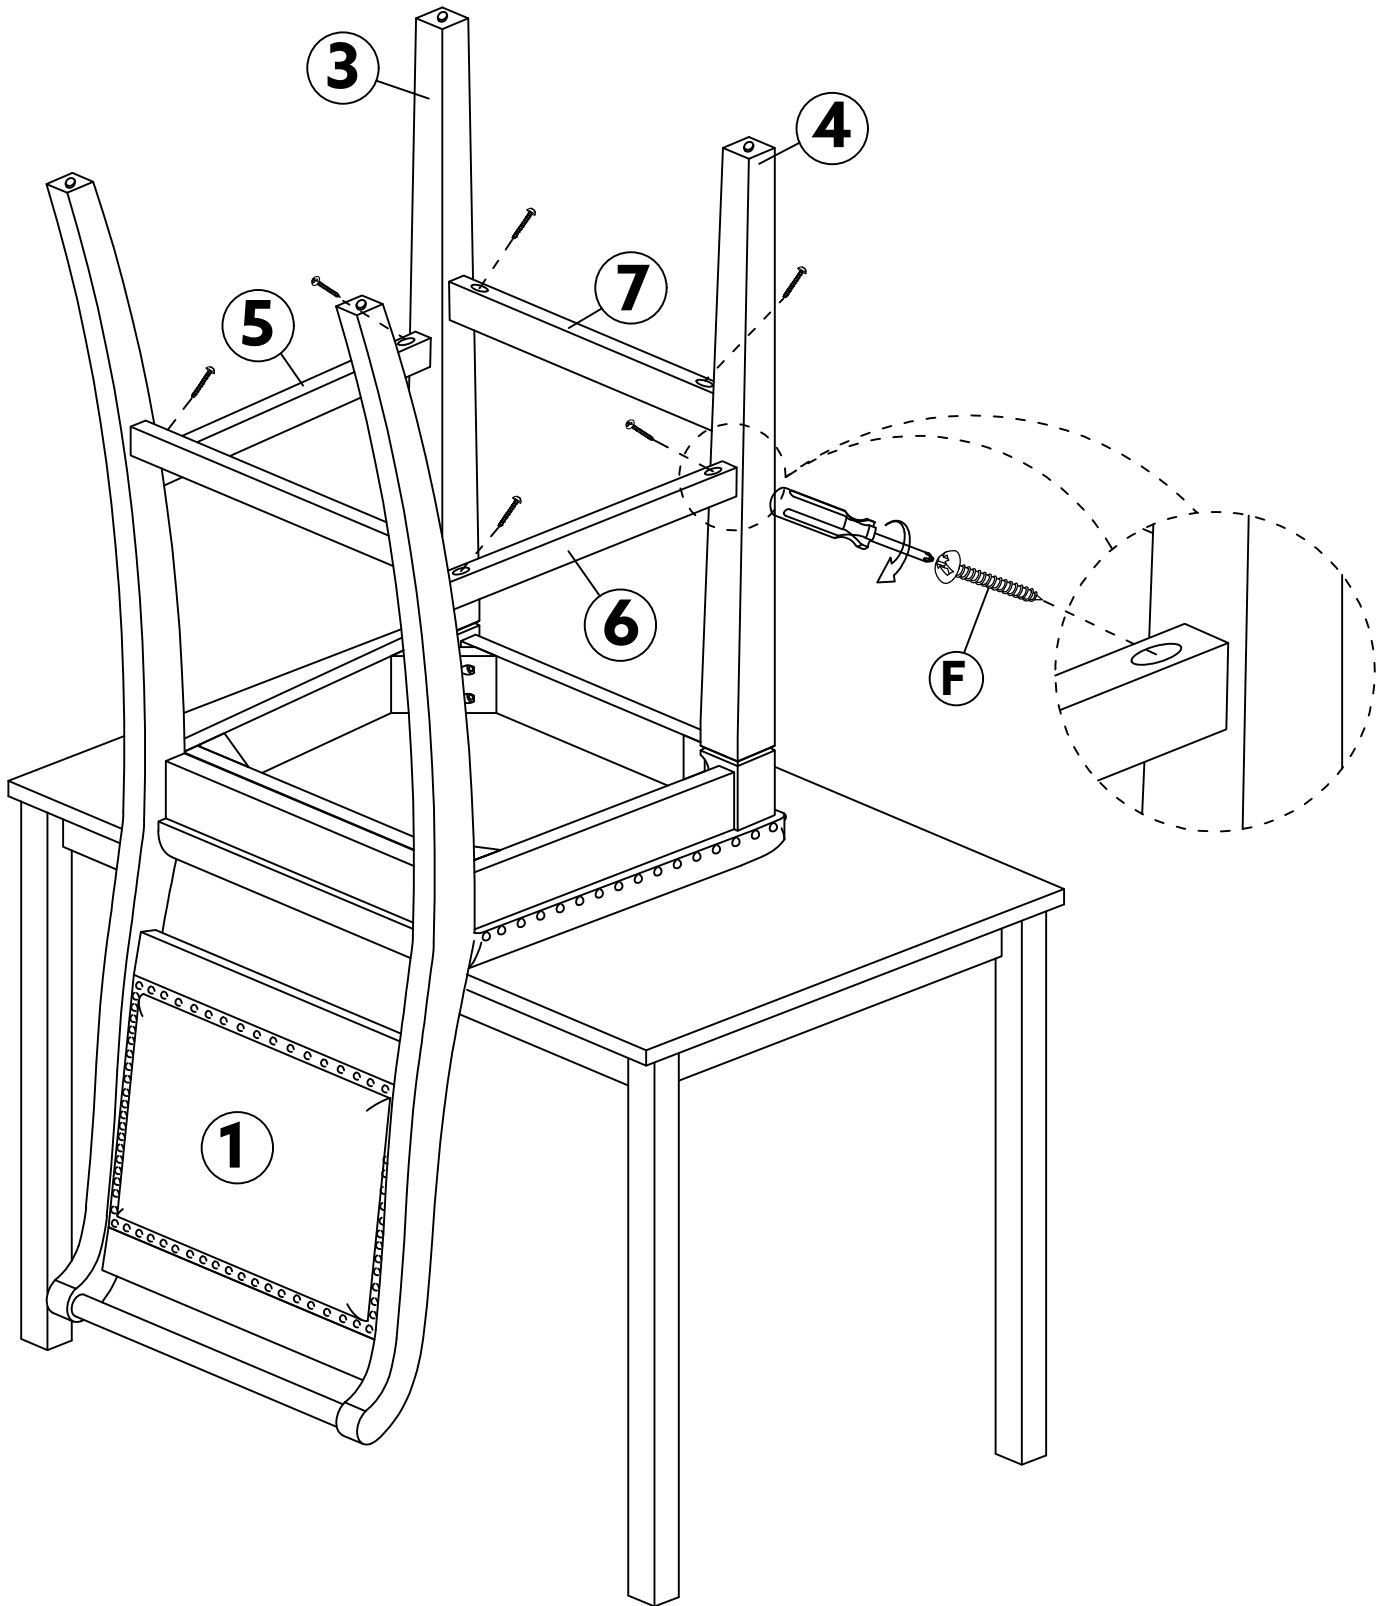

---

5.

## ASSEMBLY COMPLETED

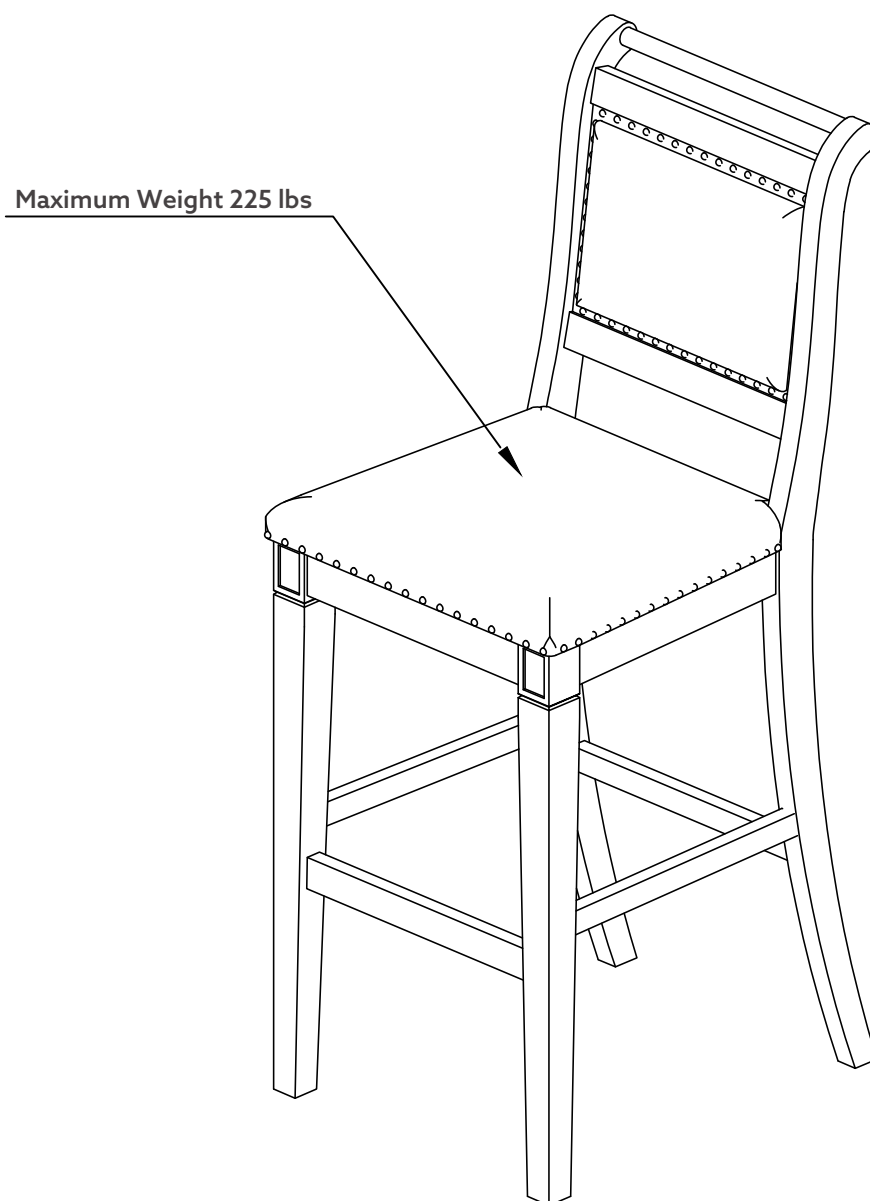

Tighten bolts firmly.

Level the unit before fully tighten all bolts.