


Ruiseal Barstool White


SKU# 2140006004

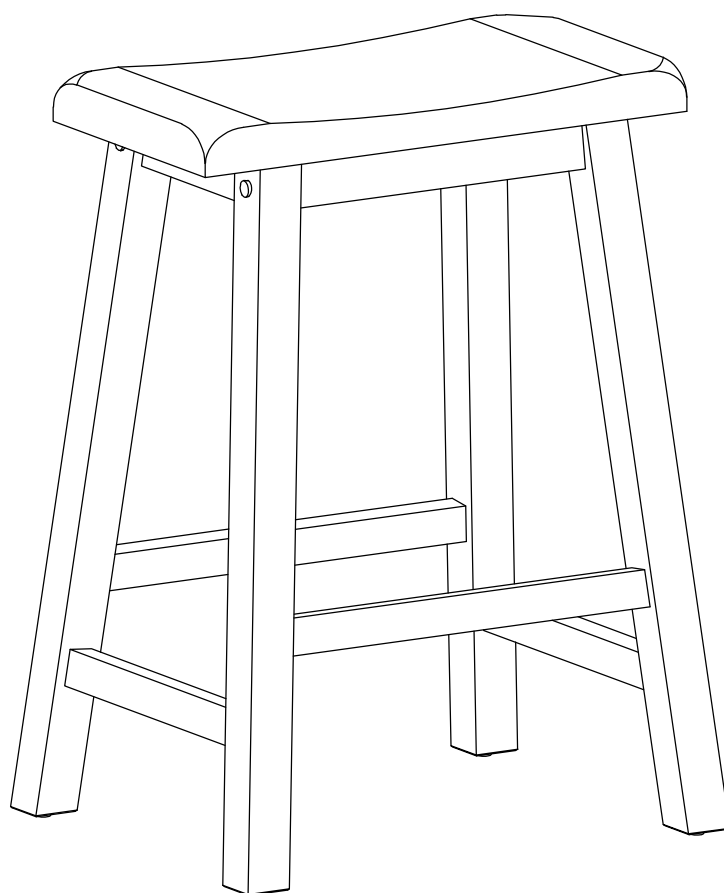

HPC-20260-VN





MADE IN VIETNAM

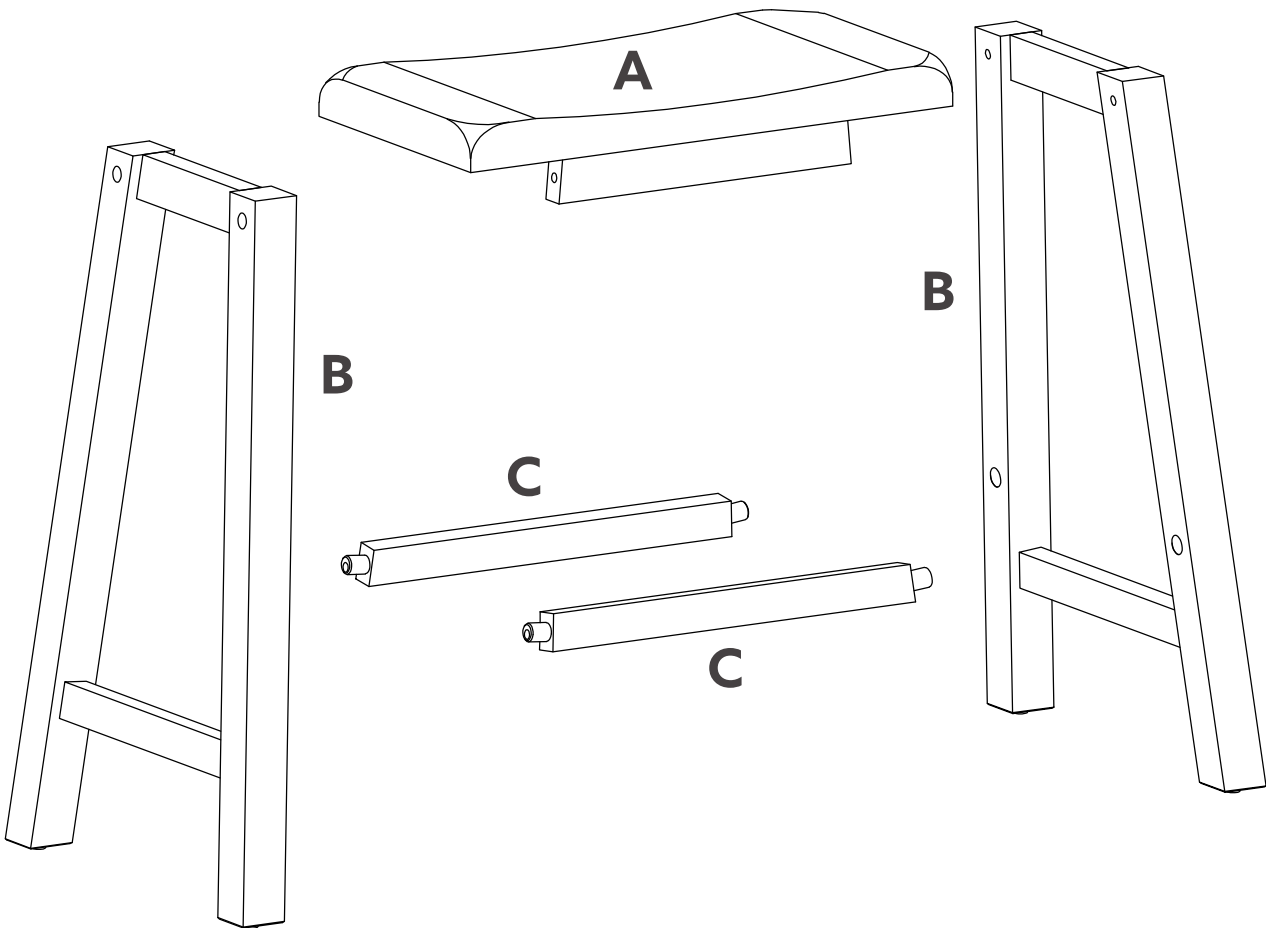PART LIST





A	SEAT	01
B	SIDE FRAME	02
C	STRETCHERS	02

HARDWARE LIST

H1		BOLT / BOULON / PERNO (Ø1/4"x2-3/8")	04
H2		BARREL NUT / ÉCROU À PORTÉE CYLINDRIQUE / TUERCA CILÍNDRICA (Ø1/4")	04
H3		WOOD PLUG / BOUCHON DE BOIS / TAPÓN DE MADERA	04
H4		SCREW / VIS / TORNILLO (Ø4/ 1-3/4")	04

NOTE: Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


TOOLS REQUIRED / OUTILS REQUIS / HERRAMIENTAS REQUERIDAS

ALLEN KEY		SUPPLIED
PHILLIPS SCREWDRIVER		NOT SUPPLIED



IMPORTANT:

1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. For ease of assembly, two adults are recommended

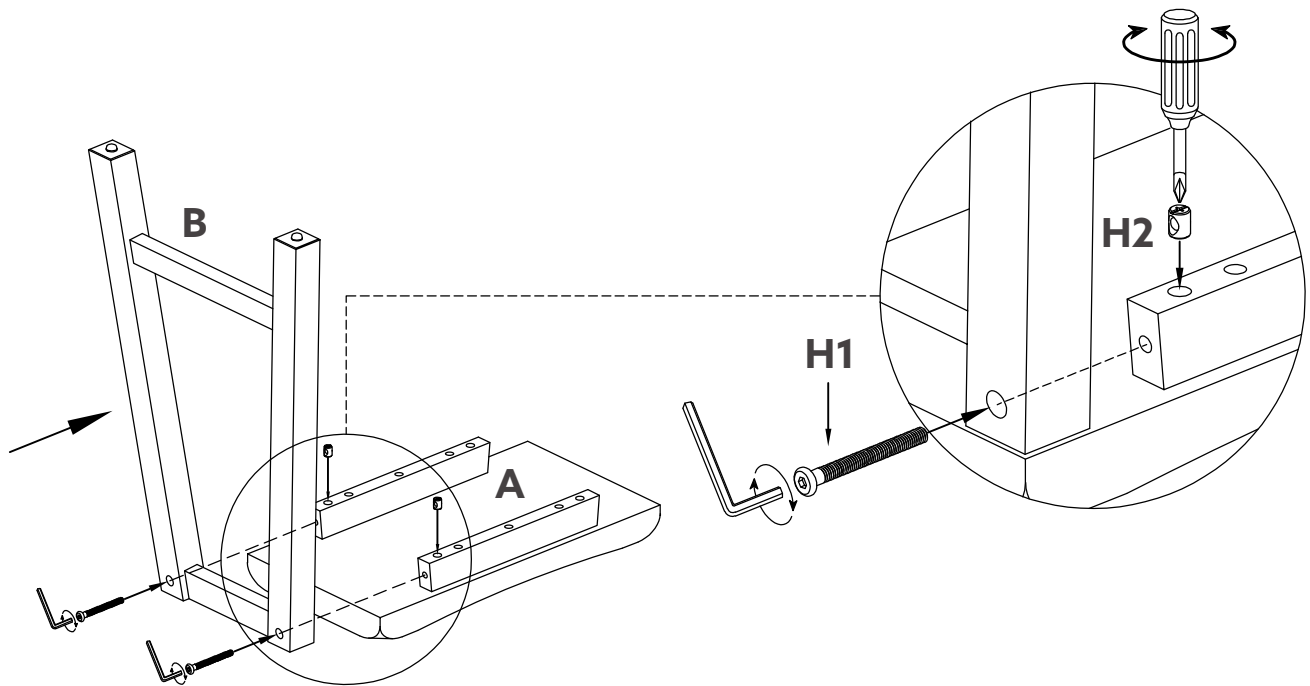
1.




Do not tighten bolts completely until all bolts are completely lined up and inserted into holes.

H1		02
H2		02

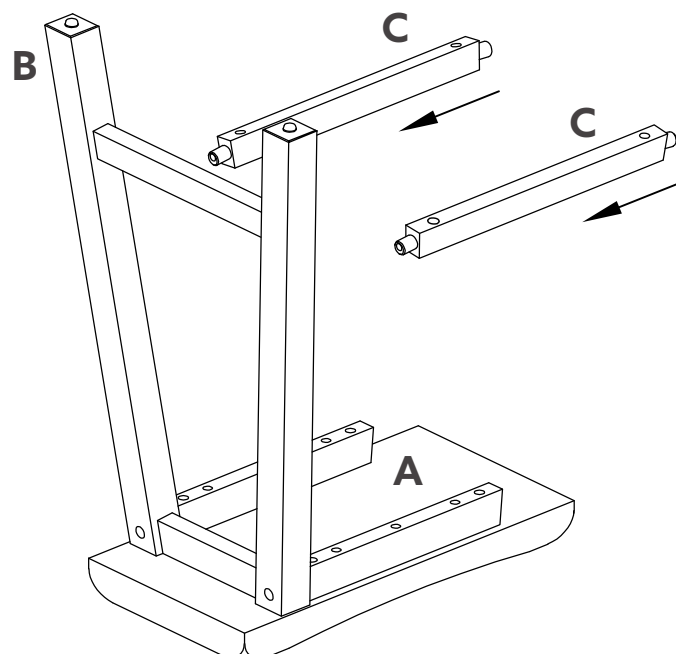

2.

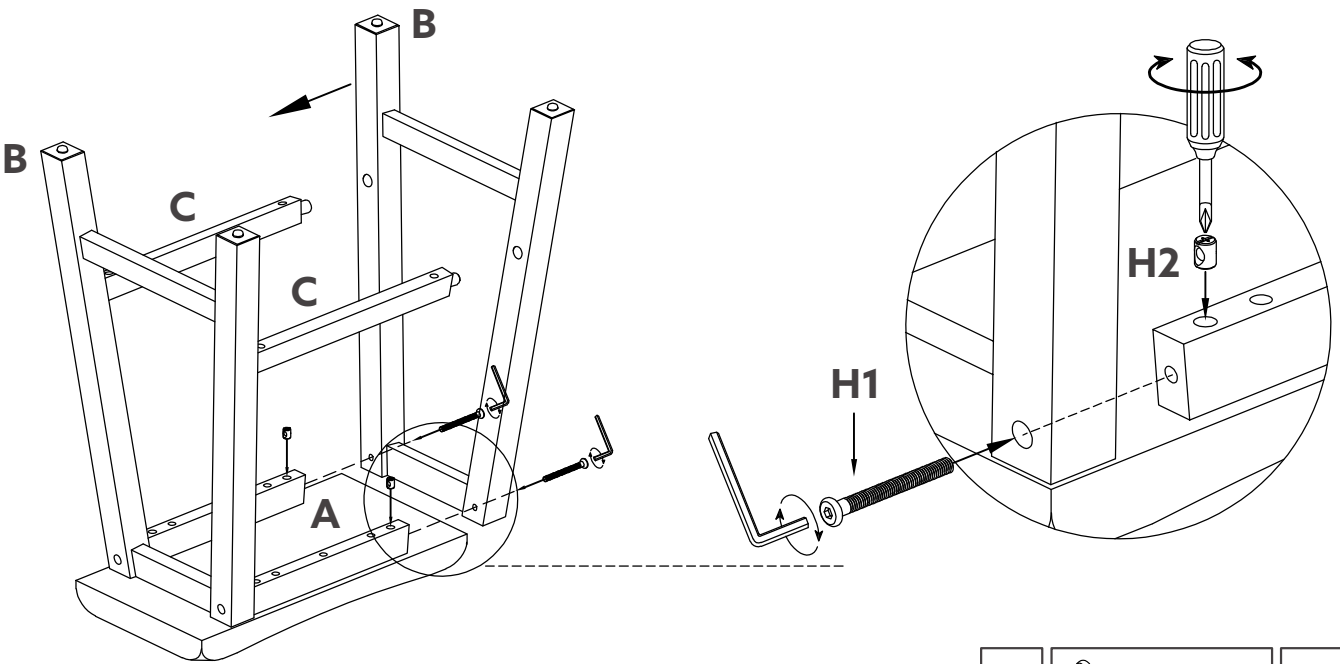


3.




Be sure the legs are level then fully tighten the leg bolts



H1		02
H2		02

4.

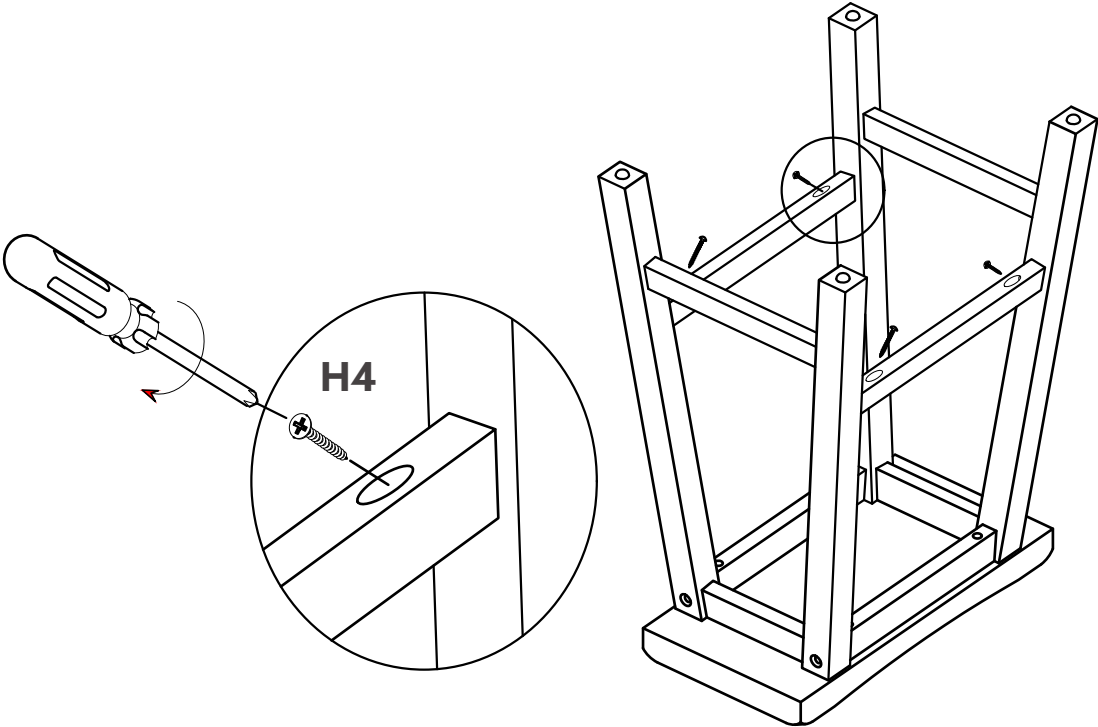

H4		04
----	---	----

5.

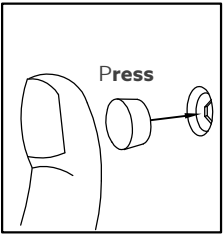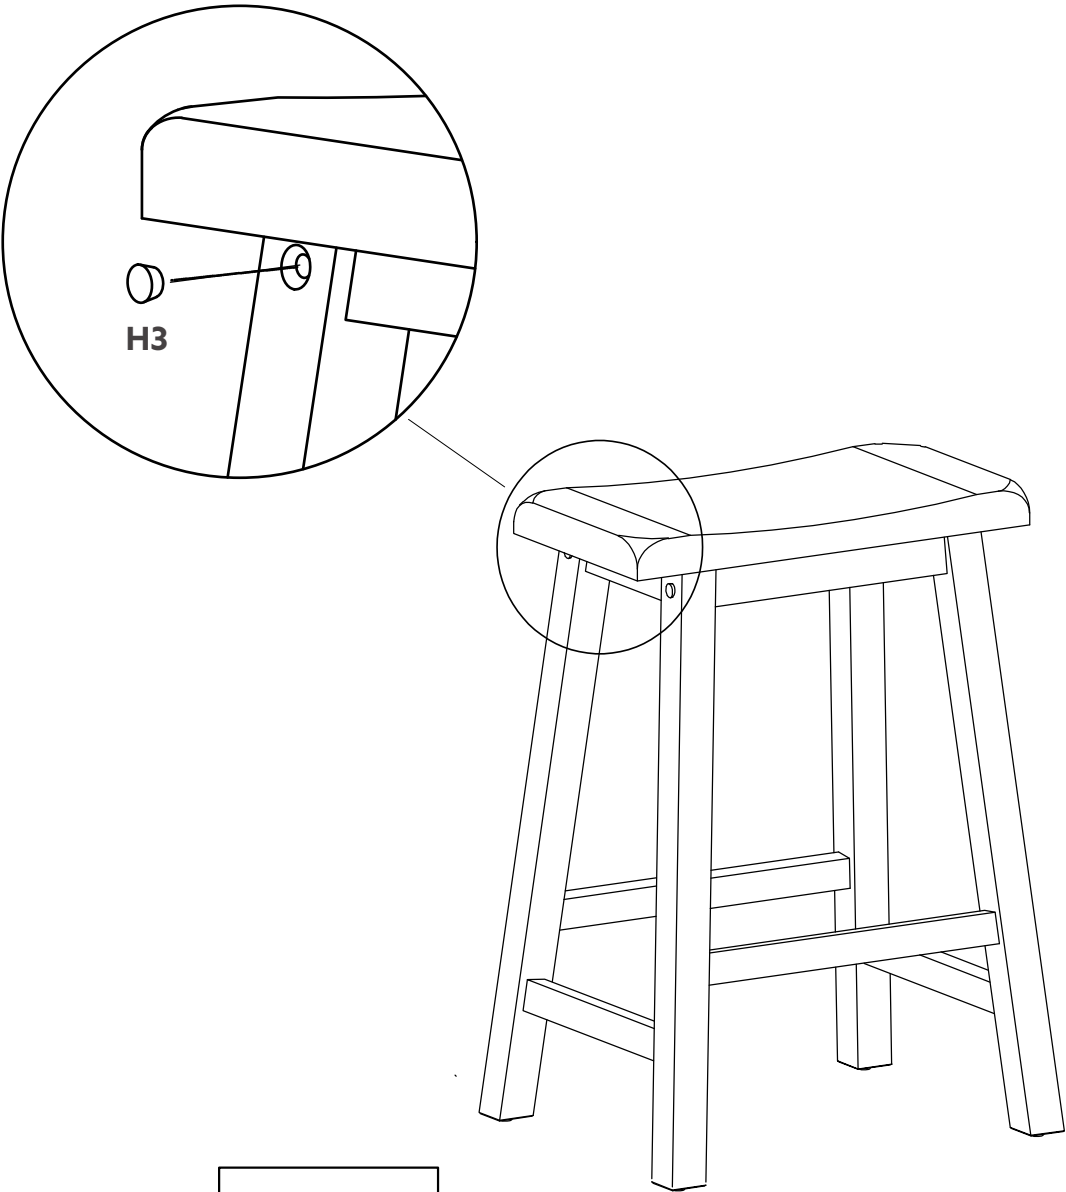

ASSEMBLY COMPLETED

