
VIDA BLACK 2 DRAWER VANITY SET


#2258057001

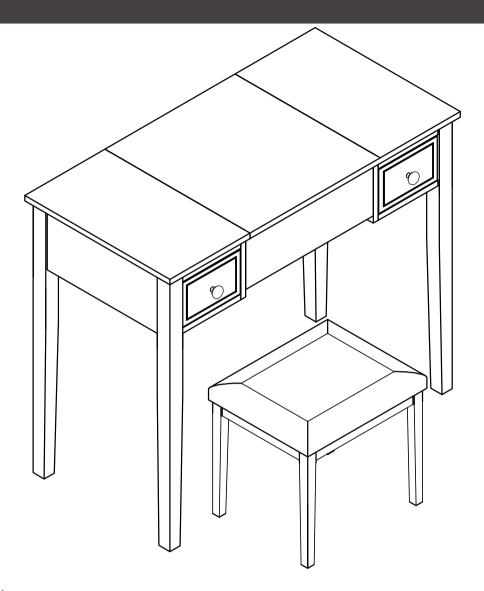

MARNING: To avoid serious personal injury:

- · Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

PART LIST

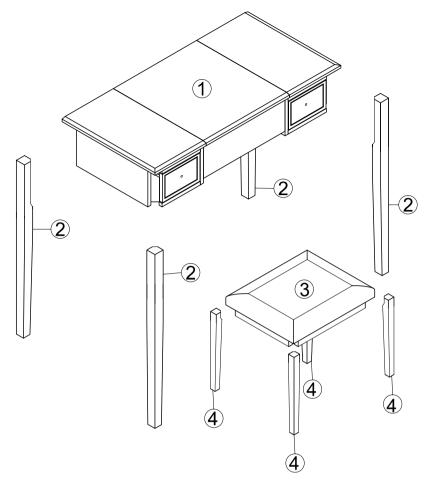

SPARE PARTS

02	TABLE - LEG	04
03	STOOL - CUSHION FRAME	01
04	STOOL - LEG	04
00	HARDWARE PACK	01

SPARE PARTS

01 TABLE - TOP

HARDWARE LIST

Α	(IIII)	BOLT (⊘1 /4"X2-1/2")	08
В	(IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	BOLT (⊘1 /4"X2-1/4") PERNO	
С	Ø	SPRING WASHER	
D		FLAT WASHER	16
Е		KNOB SCREW (Ø4X3/4	
F		METAL KNOB	
G	" "	MIRROR	01
Н	<u> </u>	MIRROR HOLDER	02
I	()mmmmm-	ROUND HEAD SCREW (Ø3X1/2")	04

NOTE: Find the label of "Hardware Enclosed" on one of the carton corner then follow the red ribbon to get the hardware bag.


TOOLS REQUIRED

ALLEN KEY	SUPPLIED
PHILLIPS SCREWDRIVER	NOT SUPPLIED


IMPORTANT:

- 1. Do not tighten bolts completely until all bolts are completely lined up and inserted into holes / nuts.
- 2. Do not over tighten screws and bolts to avoid stripping.
- 3. Please use hand tools to assemble this product. Do not use power tools.
- 4. For ease of assembly, two adults are recommended.


1.

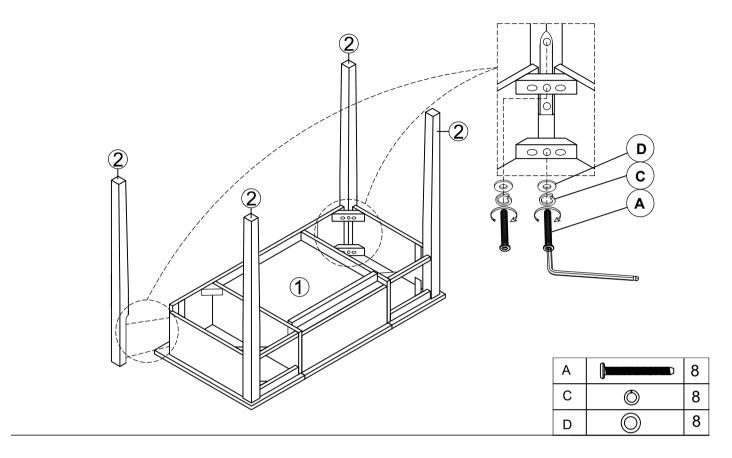


2.

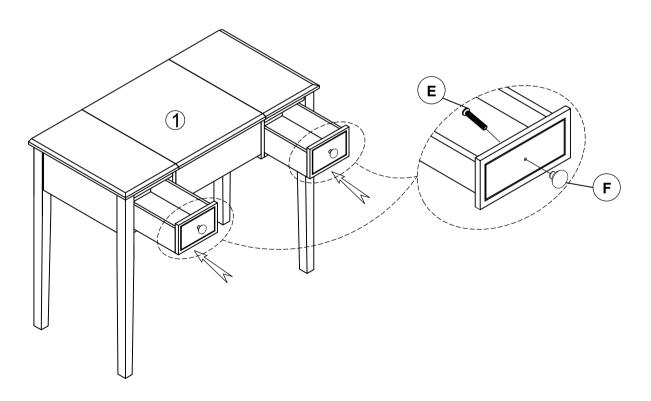

Е		2
F	0	2

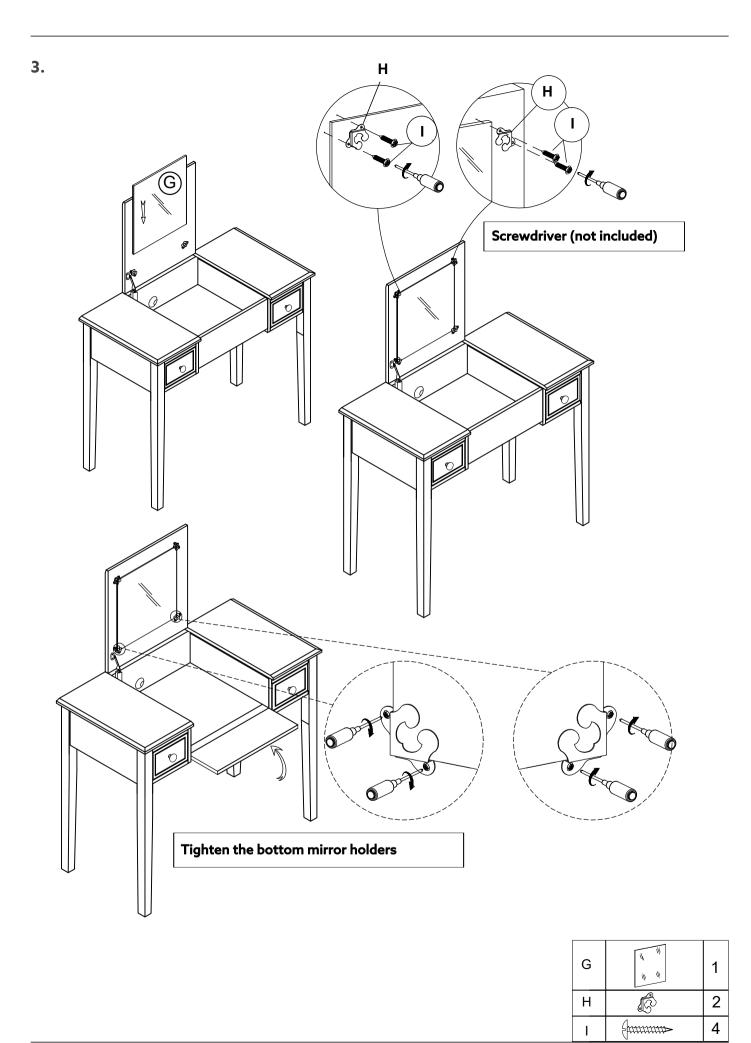


4.

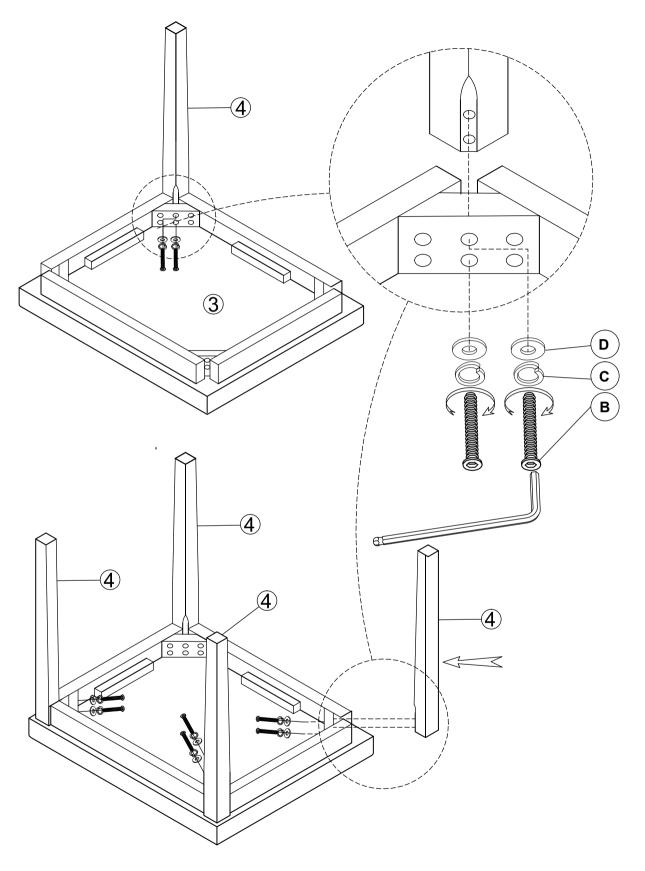

В		8
С	0	8
D	0	8

COMPLETED ASSEMBLY


Maximum Weight 275 lbs

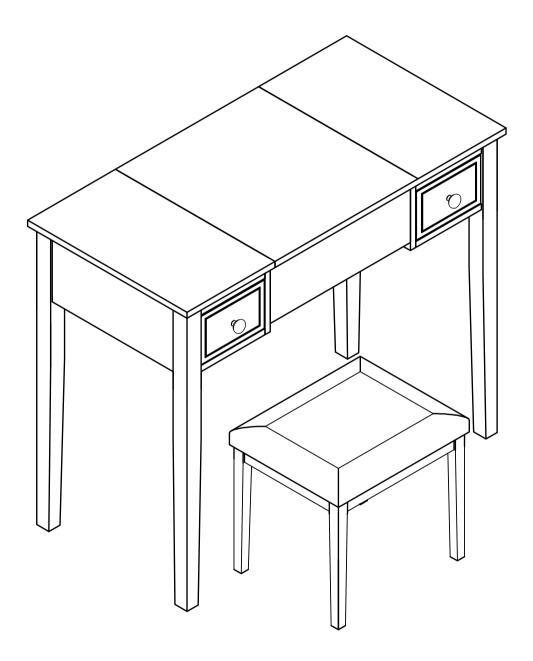

Tighten bolts firmly.


Do not overtighten the bolts and screws.



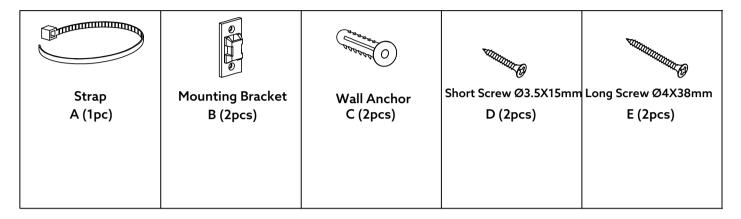


Step 1: Put wall anchor (C) into the wall and attach mounting bracket (B) to the wall with long screw (E).


PLEASE NOTE: For your safety, to prevent the danger of this unit tipping over, it is important that the wall anchors are properly attached.

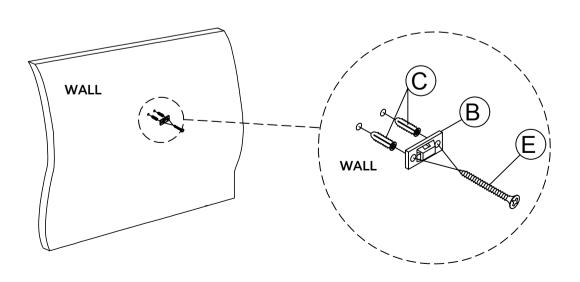

Step 2: Attach mounting bracket (B) to the back of the product with short screw (D).

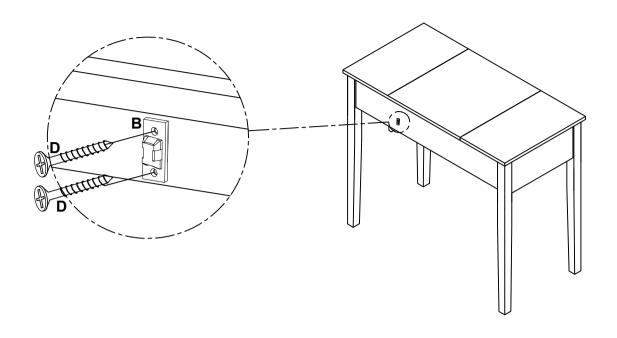

Step 3: Slide the strap (A) through the mounting brackets and pull to tighten the product snug against the wall

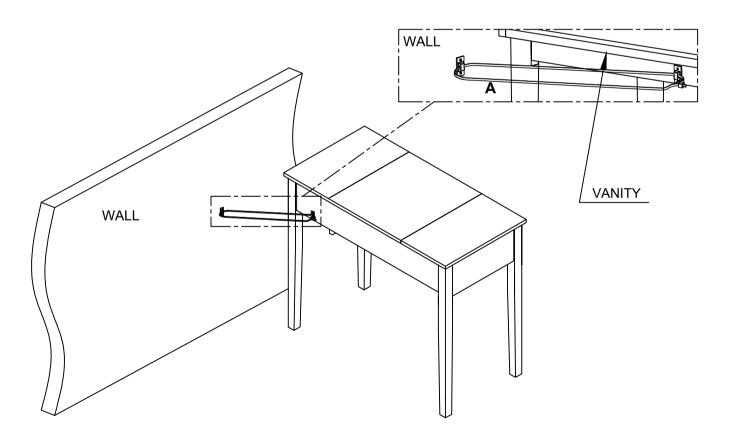

Anchor Manufacture: Kim Thanh Phu CO.., Ltd Address: 10/9 Nhi Dong Quarter, Di An Town, Binh Duong Province. Date of production: 06/2025

ASSEMBLY COMPLETED

