




WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.

DR-503

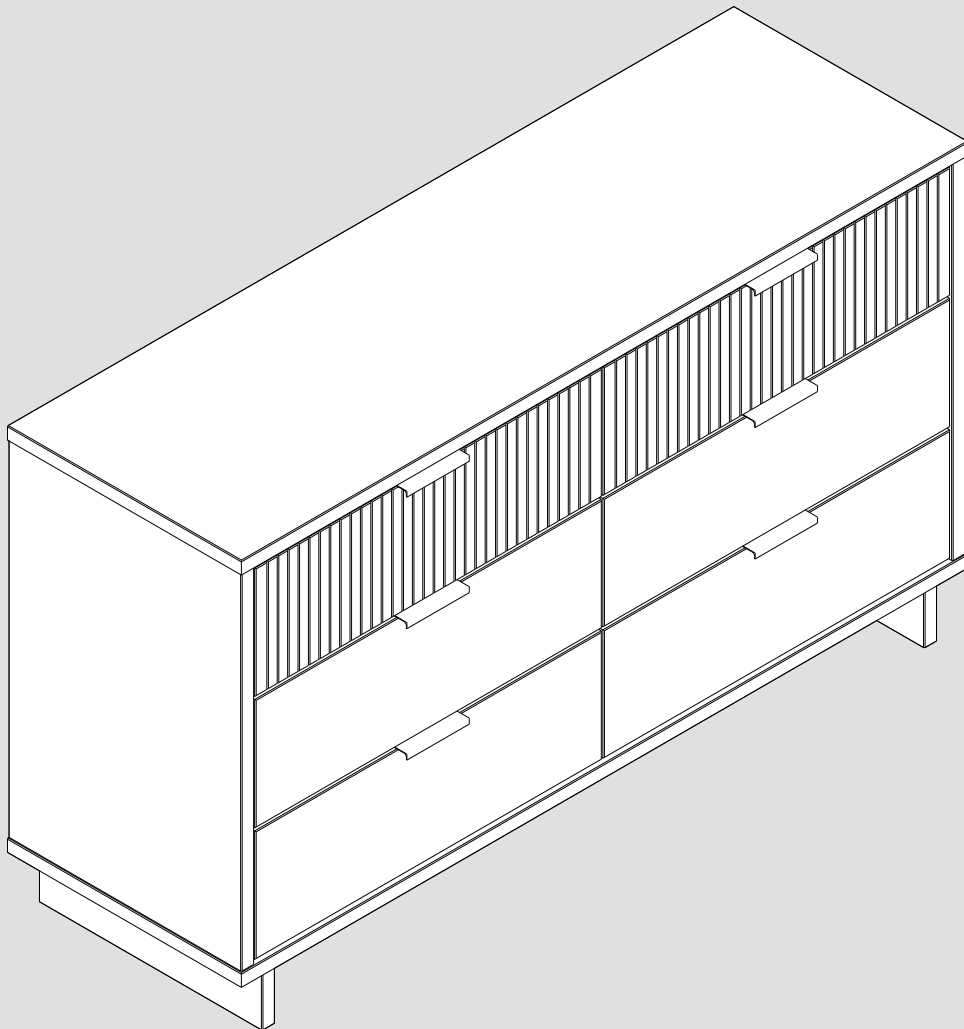




STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

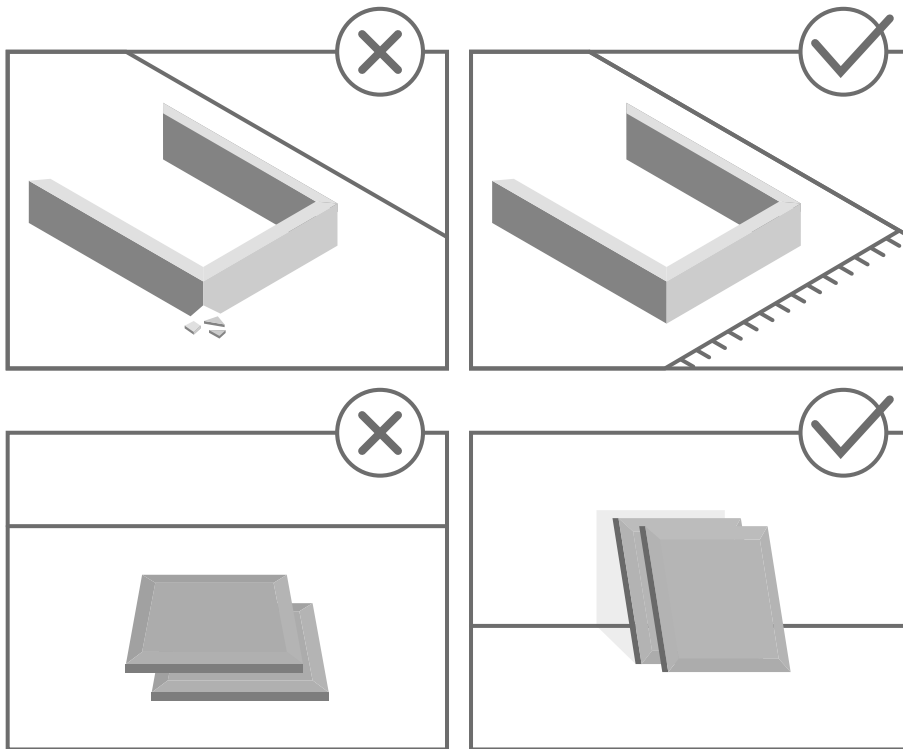

TOOLS REQUIRED

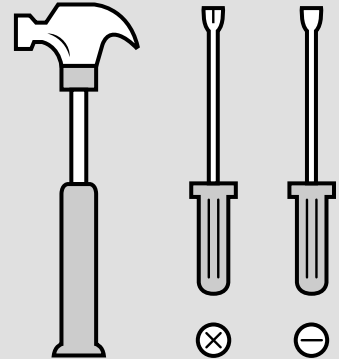

SUPPORT SITE




View our assembly video online:
WWW.MANHATTANCOMFORT.COM





Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail: help@manhattancomfort.com



Included in this package:

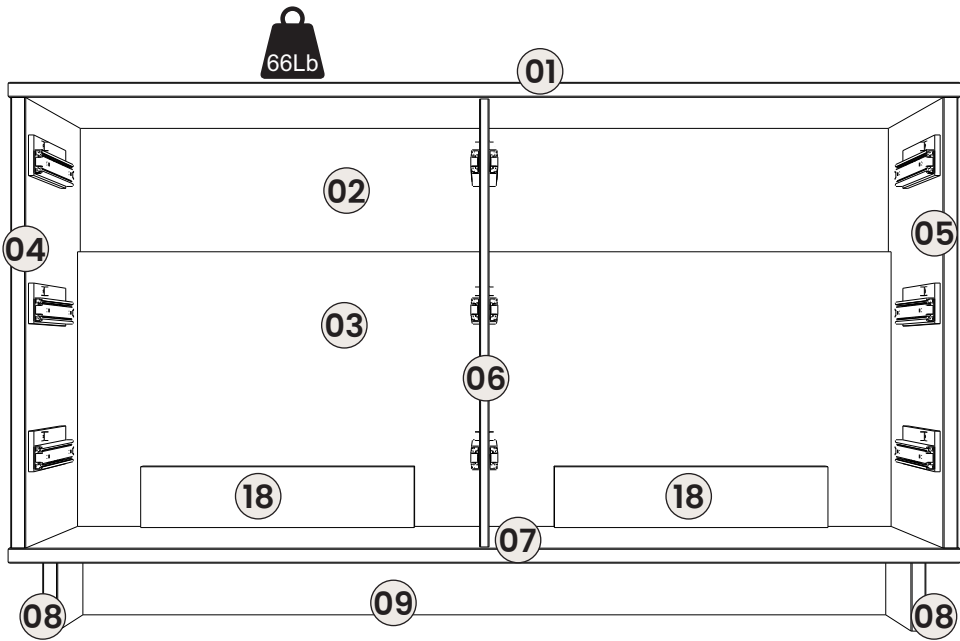


- 01. Top Panel x1
- 02. Back Panel x1
- 03. Lower Back Panel x1
- 04. Left Side Panel x1
- 05. Right Side Panel x1
- 06. Division Panel x1
- 07. Bottom Panel x1
- 08. Foot x2
- 09. Feet Crossbar x1
- 10. Top Drawer Front x2
- 11. Drawer Back x6
- 12. Drawer Right Side x6
- 13. Drawer Left Side x6
- 14. Drawer Bottom x6
- 15. Drawer Support x6
- 16. Top Drawer Support x2
- 17. Drawer Front x4
- 18. Back Rail x2

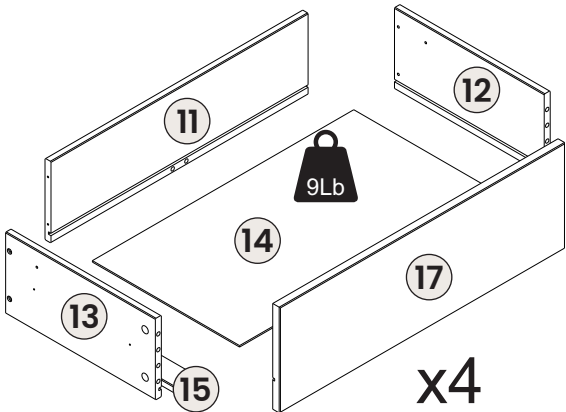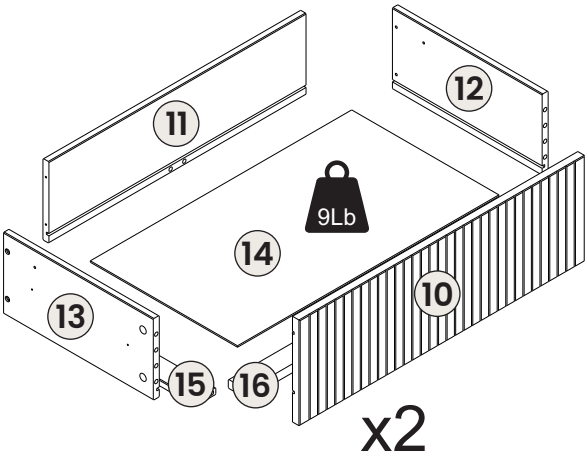

Included in this package:




A x 24
#69




B x 68
#23857




C x 12
#259

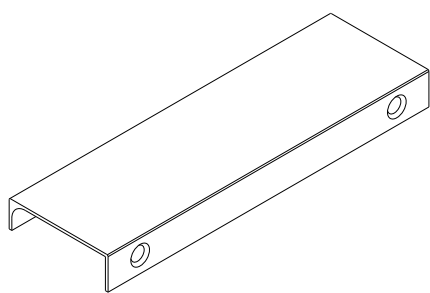


D x 6
#PX.017




E x 33
#10385

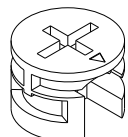


F x 33
#10386



G x 8
#284



H x 14
#11169



I x 6
#292




J x 1
#KT.002




K x 40
#1616




L x 24
#393

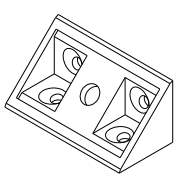

M x 4
#CA.002

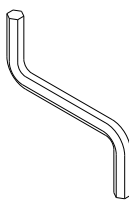

N x 1
#2196



O x 12
#PA.010

Where to find the itens


Box 1				
04	12	69	10386	1616
05	13	23857	284	393
06	15	259	11169	CA.002
11	16	PX.017	292	2196
	18	10385	KT.002	PA.010




Box 2	
01	09
02	10
03	14
07	17
08	

01

Fix the hardware M to part 09 with screw K.
Then, attach the parts 08-09 with the hardware B.

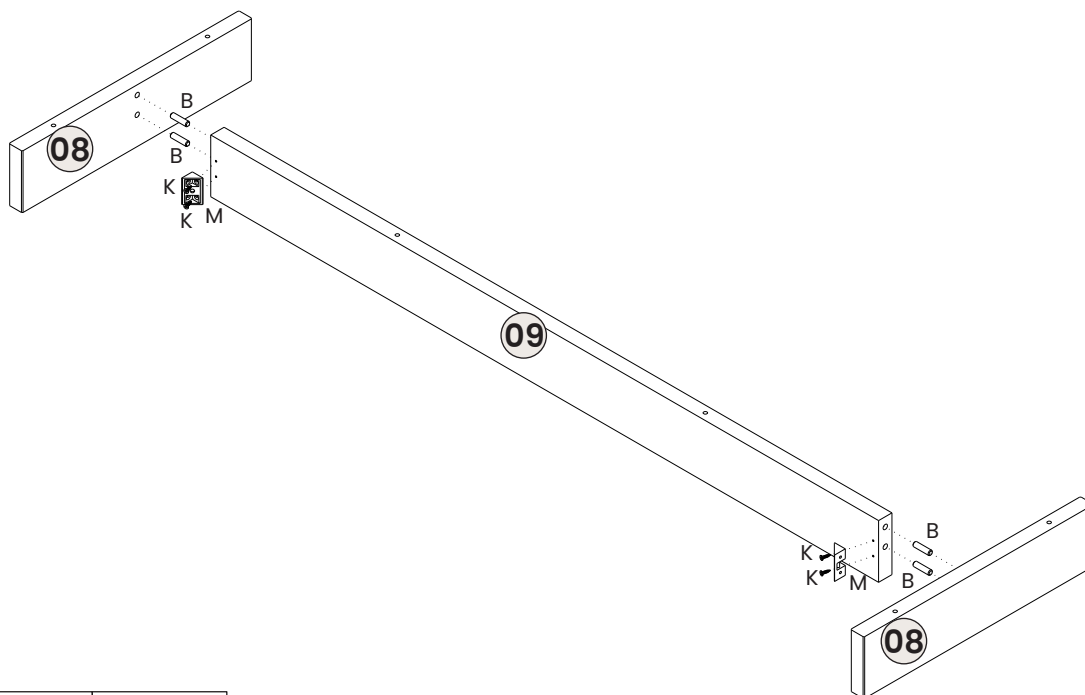
05



B x 4	M x 2	K x 4
		

02

Fix the part 09 to part 08 with screw K.

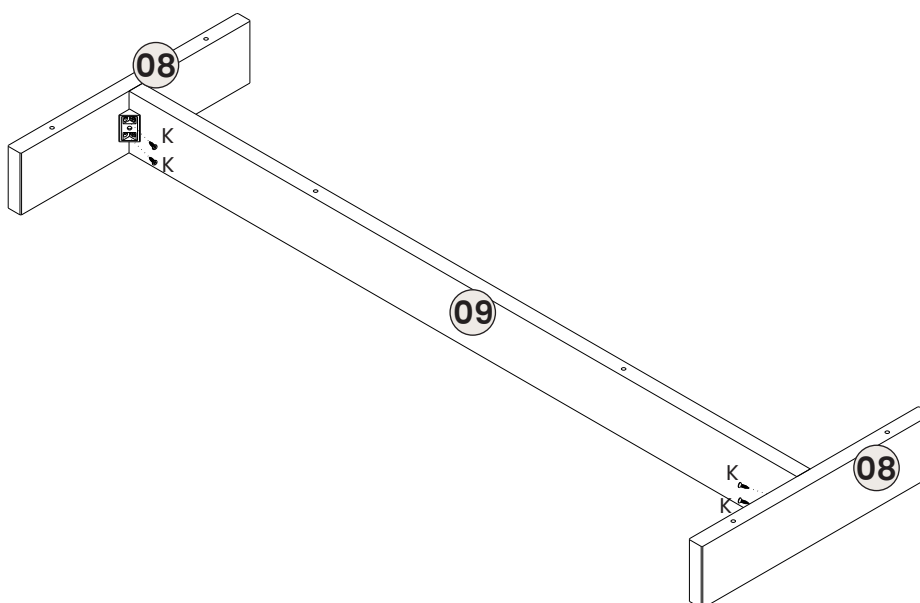



K x 4



03



Fix the part 07 to parts 08-09 with screw I and tool N.

06

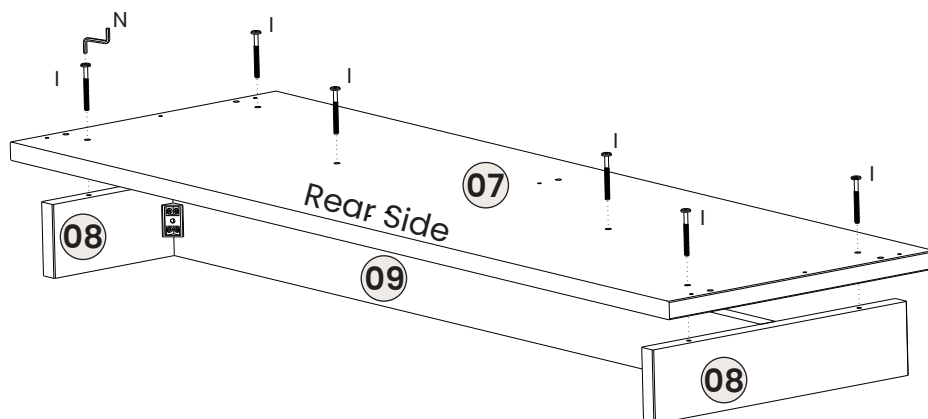

04


Attach part 3 to parts 04-05 with hardware B.

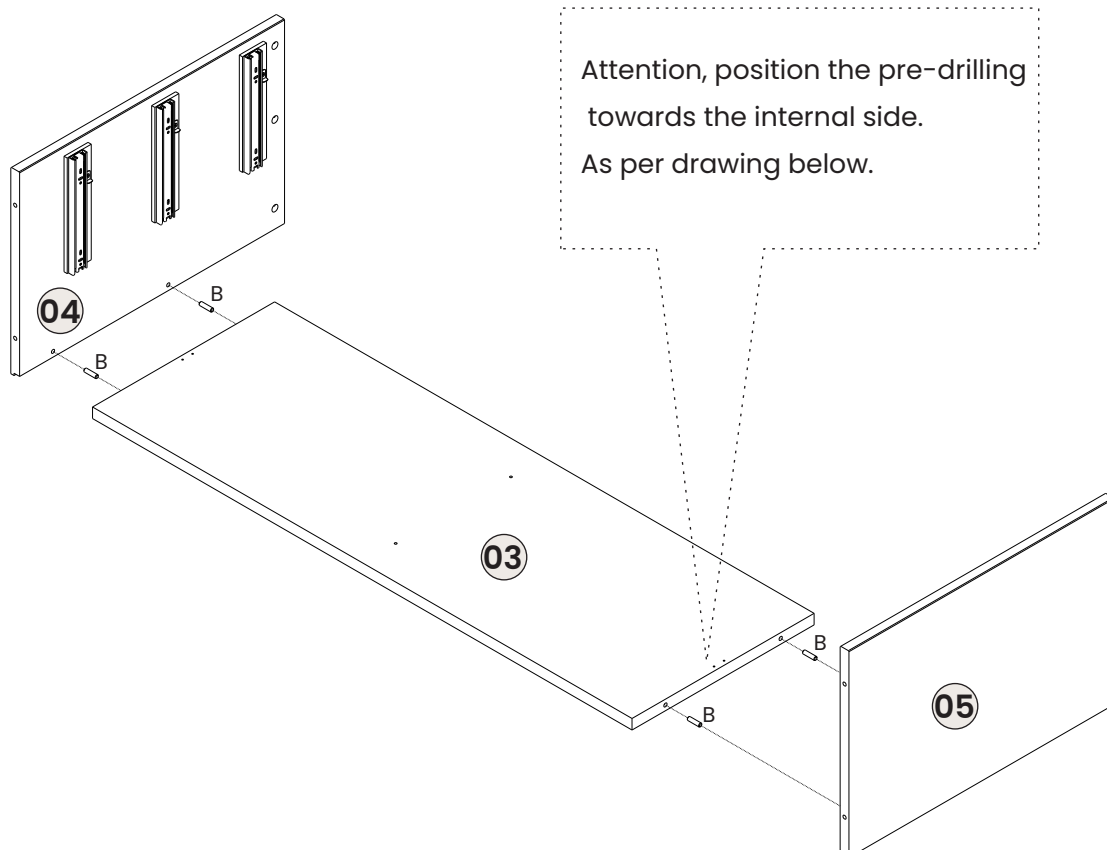

05

Fix the hardware M to part 03 with screw K.

07

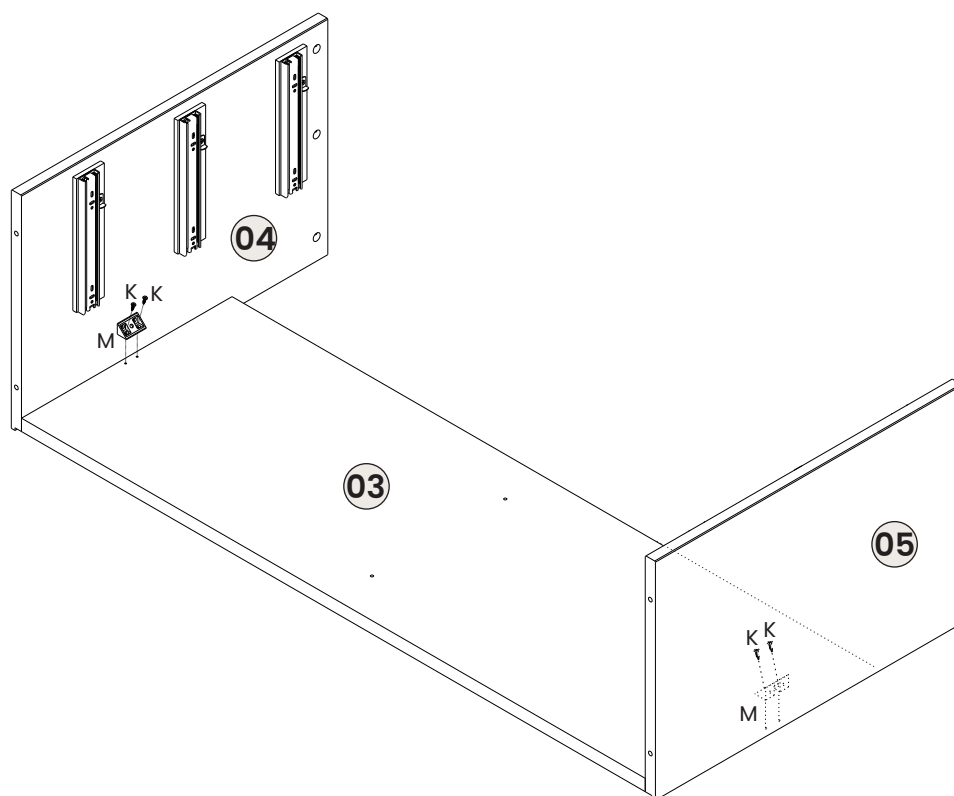

M x 2




K x 4



06

Fix the part 03 to parts 04-05 with screw K.

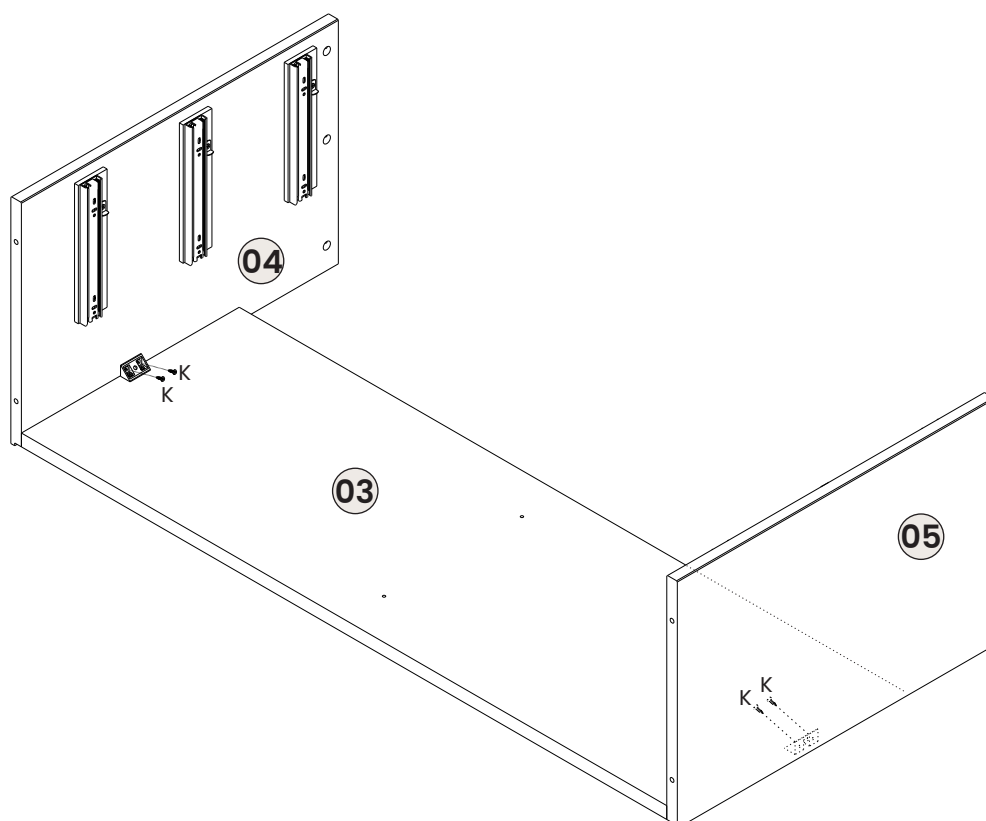


K x 4



07


Attach parts 04-05 to part 07 with hardware B.
Then secure with screw H.


08

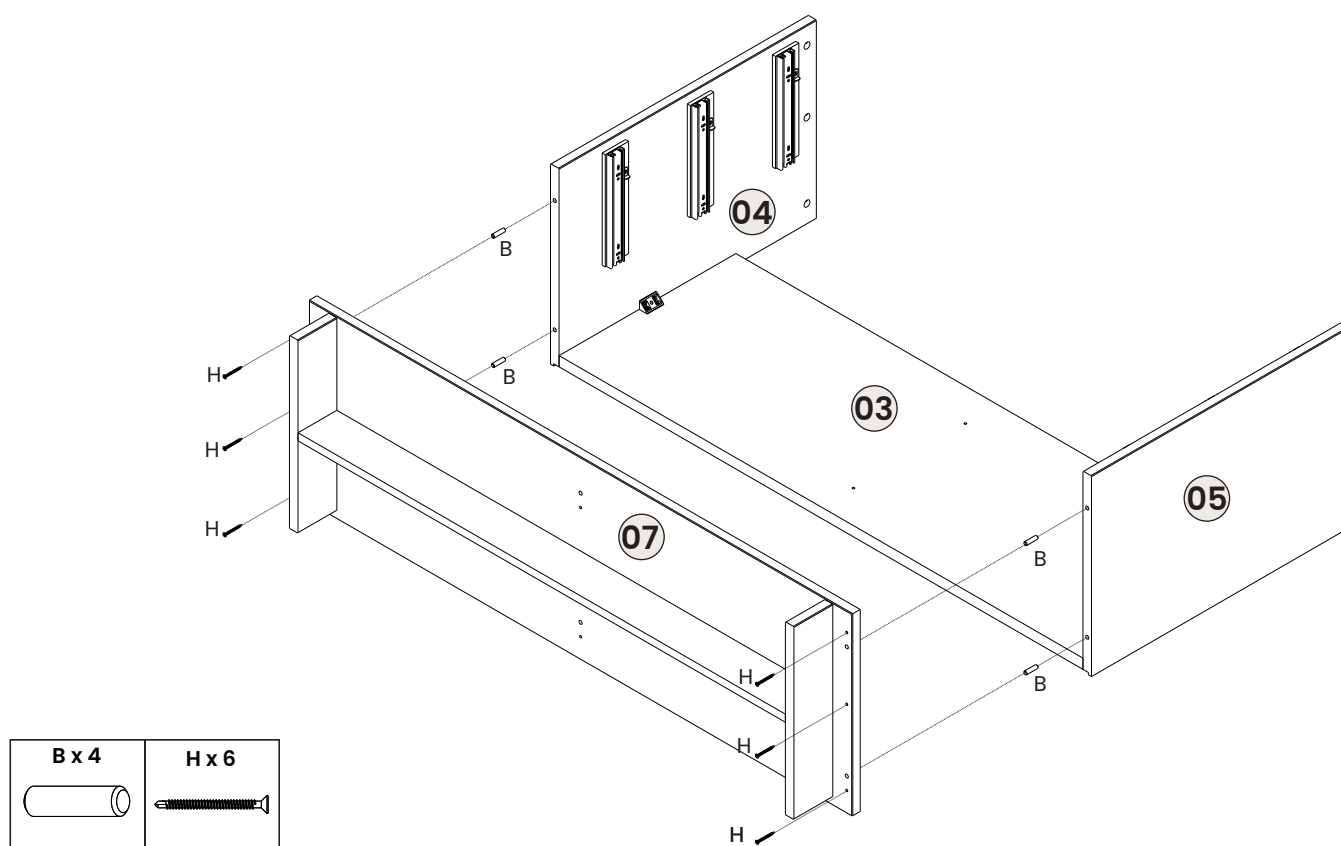

08

Attach part 06 to part 07 with hardware B.
Then secure with screw H.

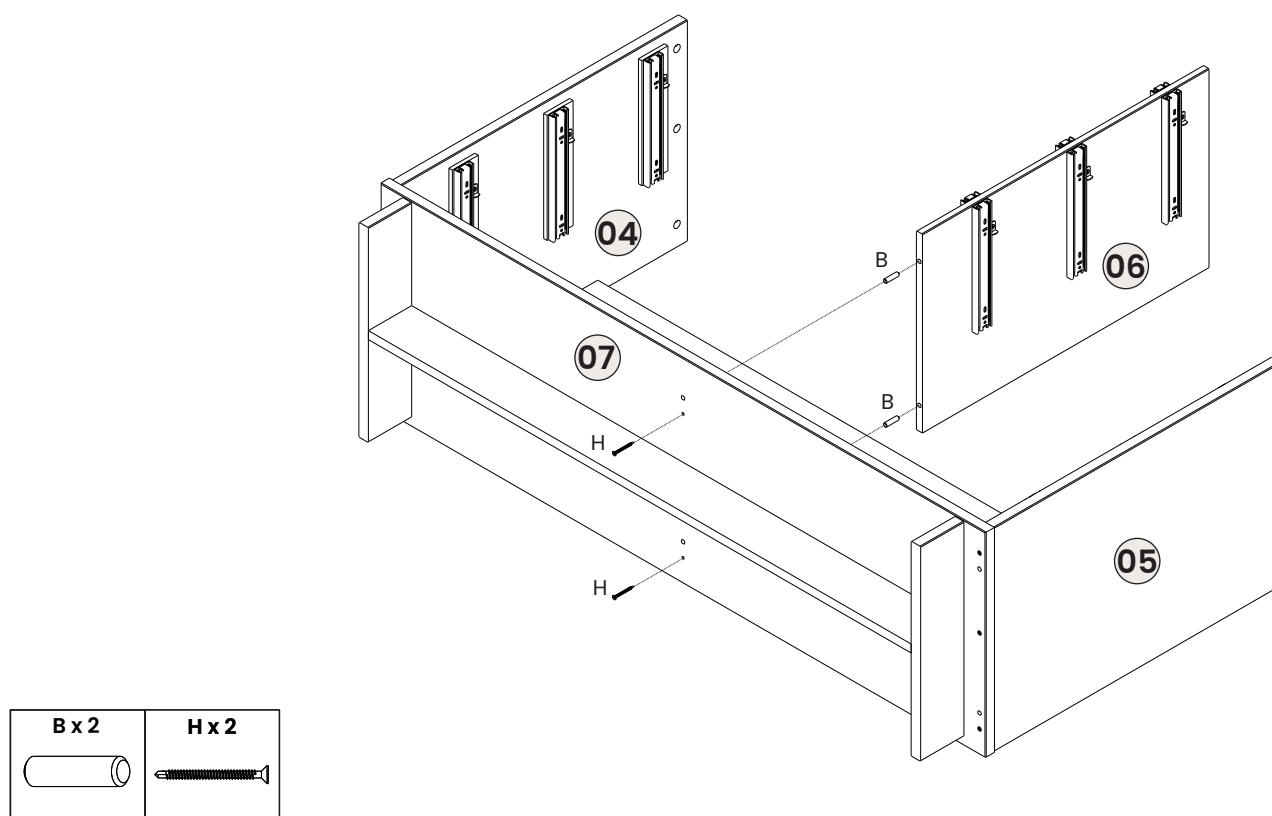

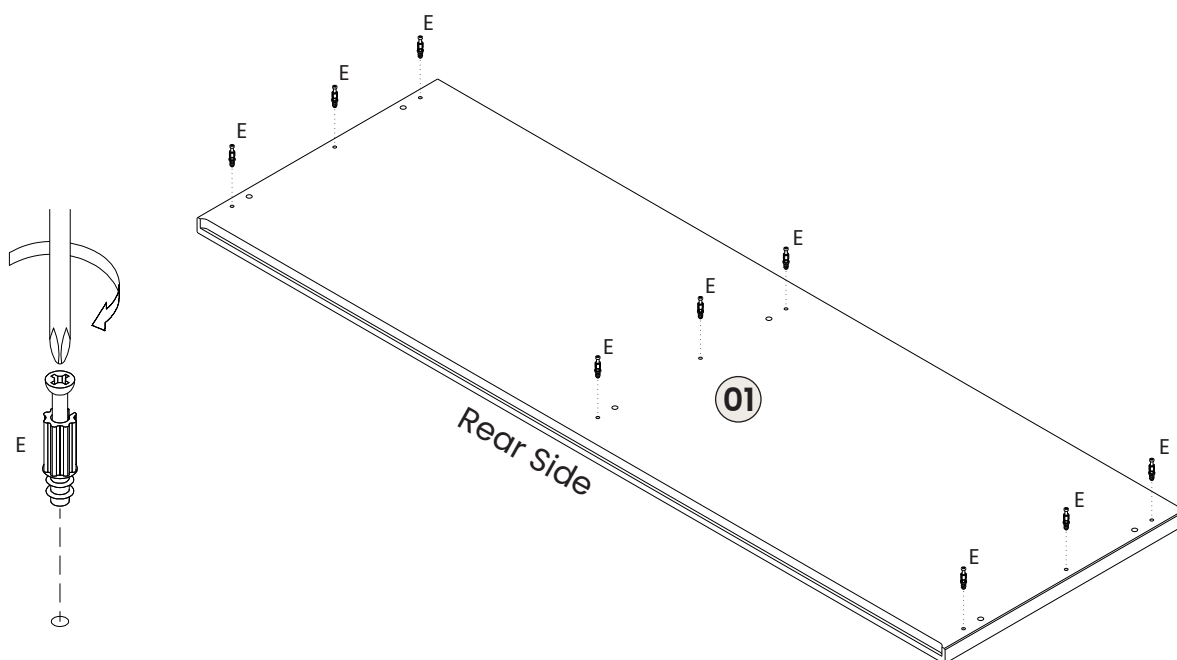



Ex 9




10

Attach the part 01 to parts 04-05-06 with hardware B.

Then, apply the hardware F and lock it according the example below.

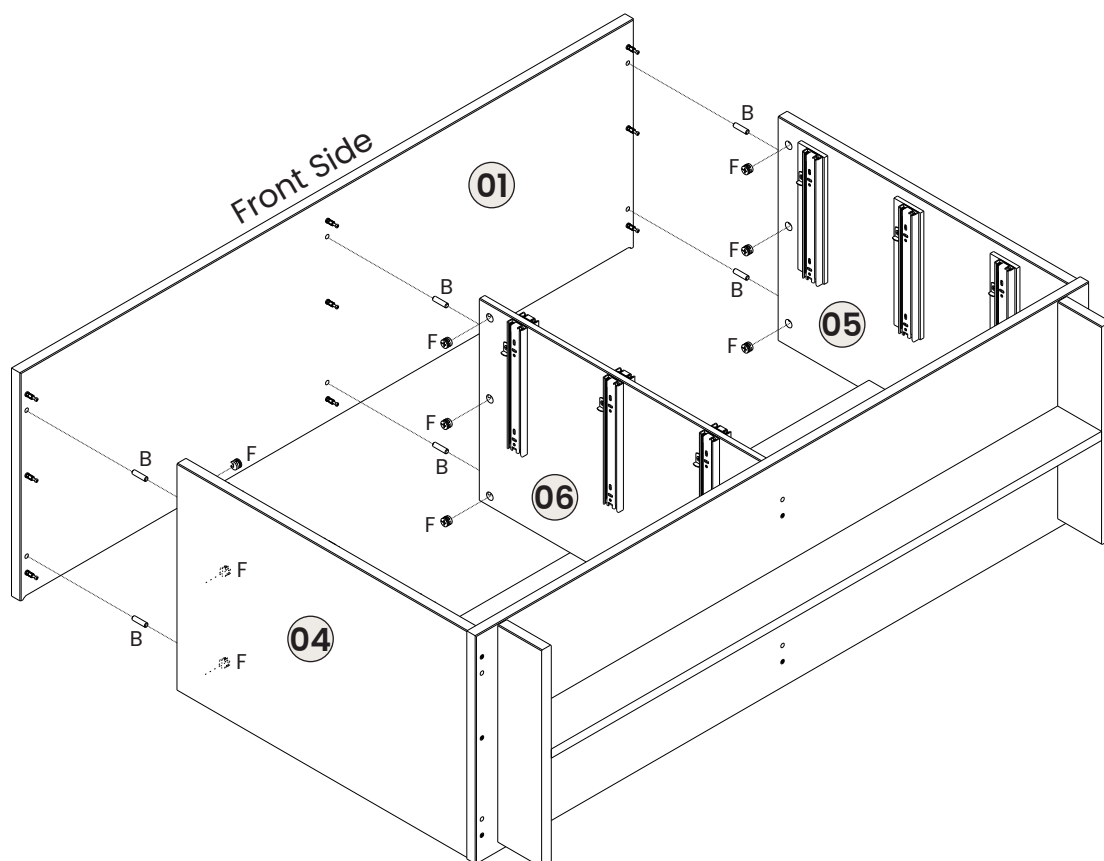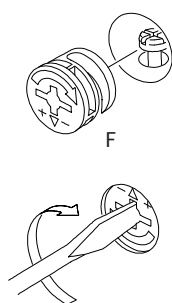Pay attention in detail to ensure correct assembling.

B x 6






F x 9






Pay attention in detail to ensure correct assembling.

- 11 Attach part 02 to parts 01-03-04-05 with hardware L.
Fix part 03 with screw H.

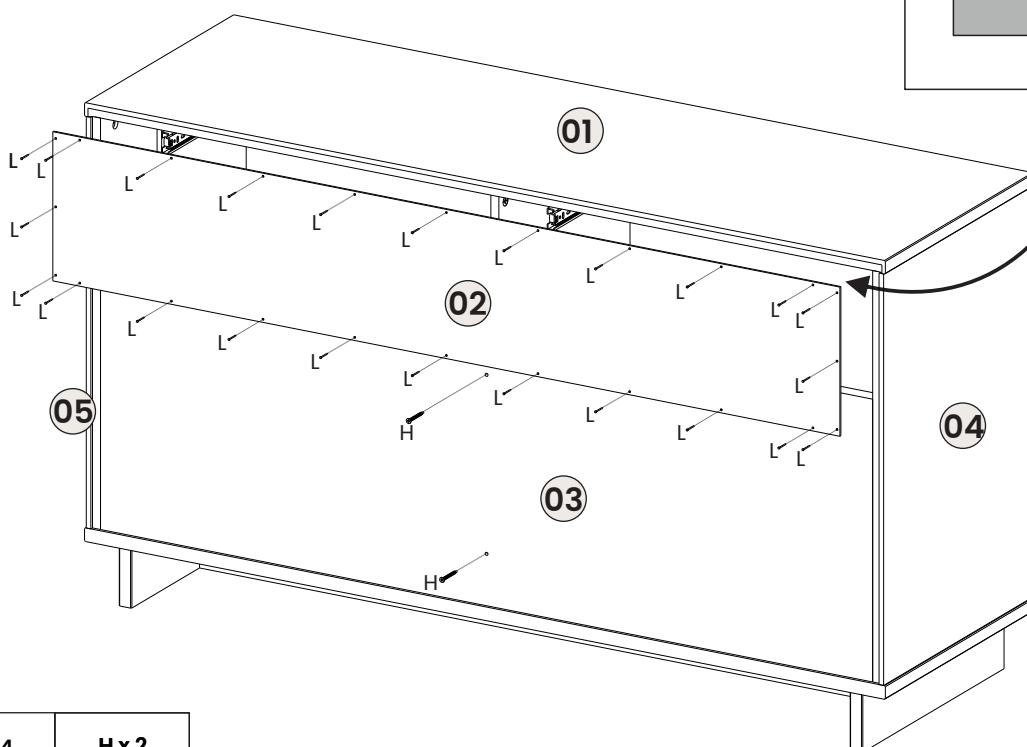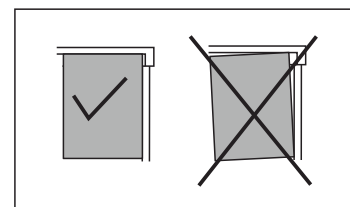


- 12 Fix parts 18 to part 03 with screw H.

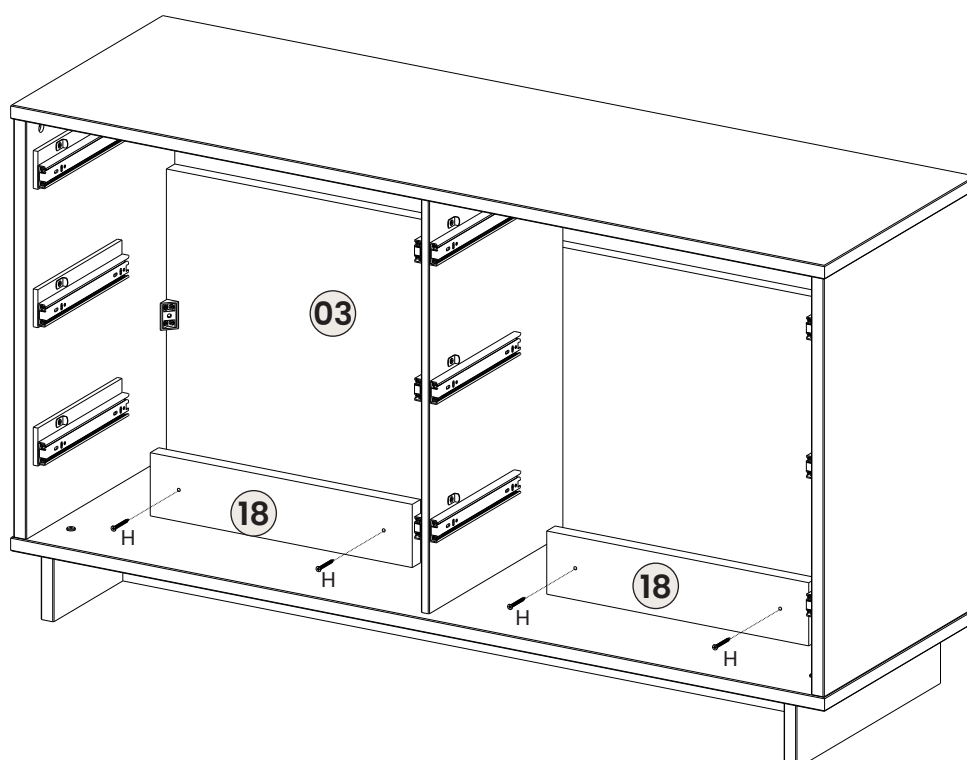


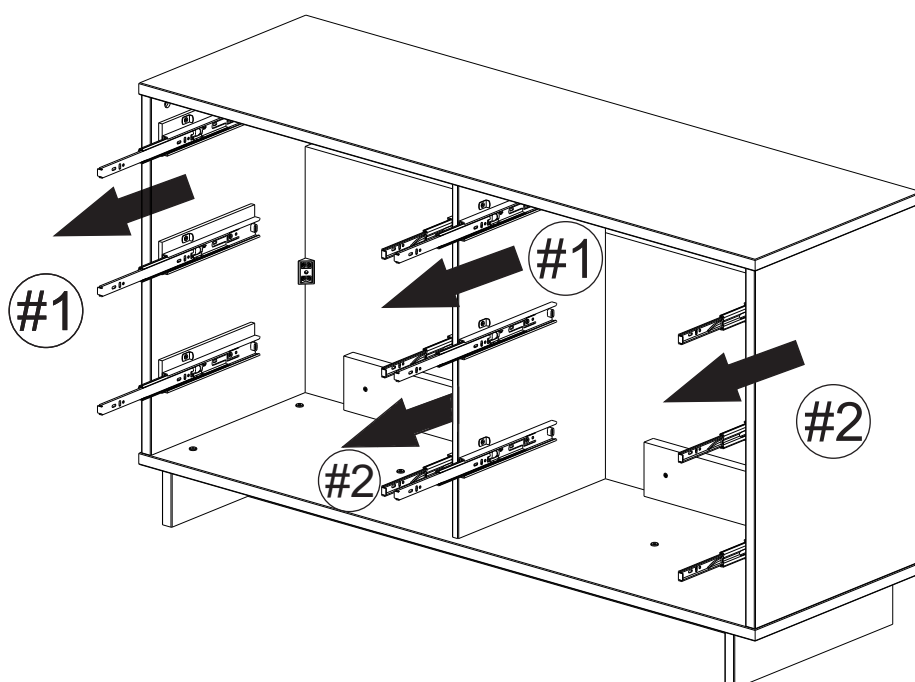

#1 x6

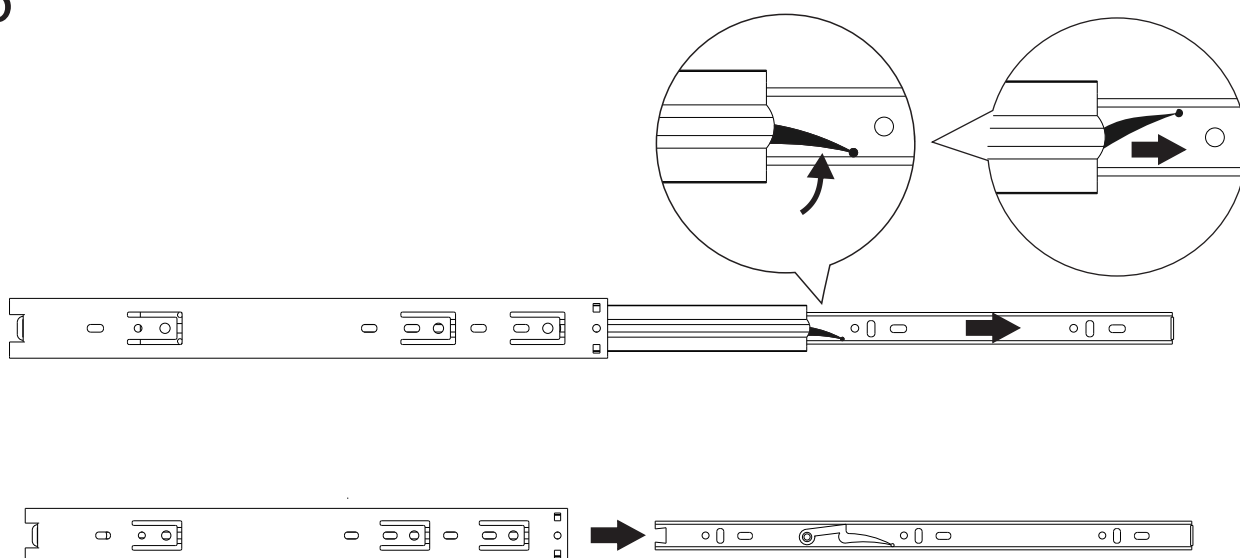



#2 x6

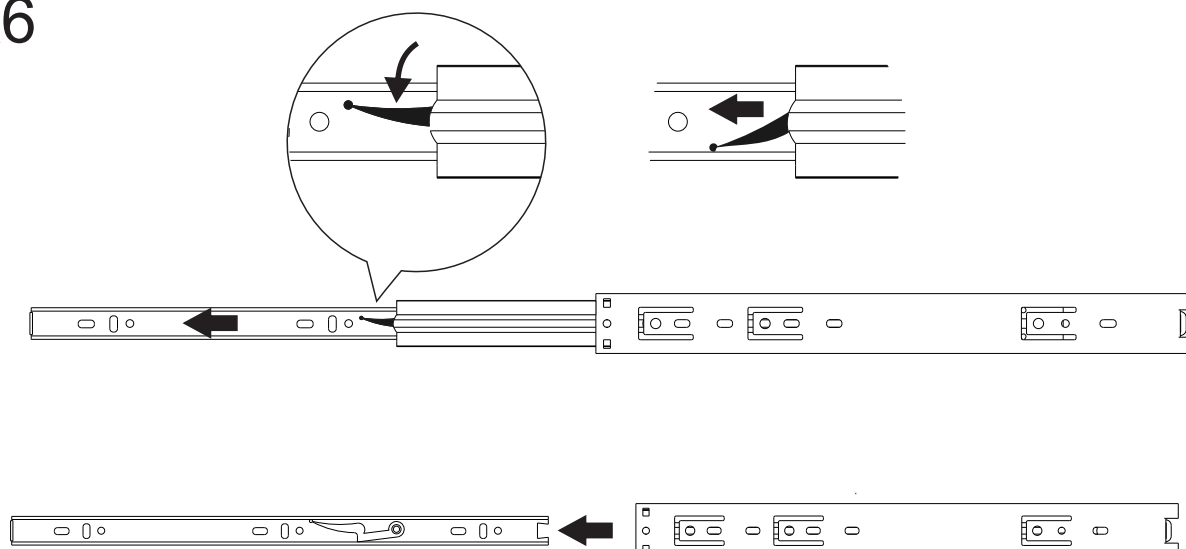

14

Fix hardware E to parts 10 and 17.

12

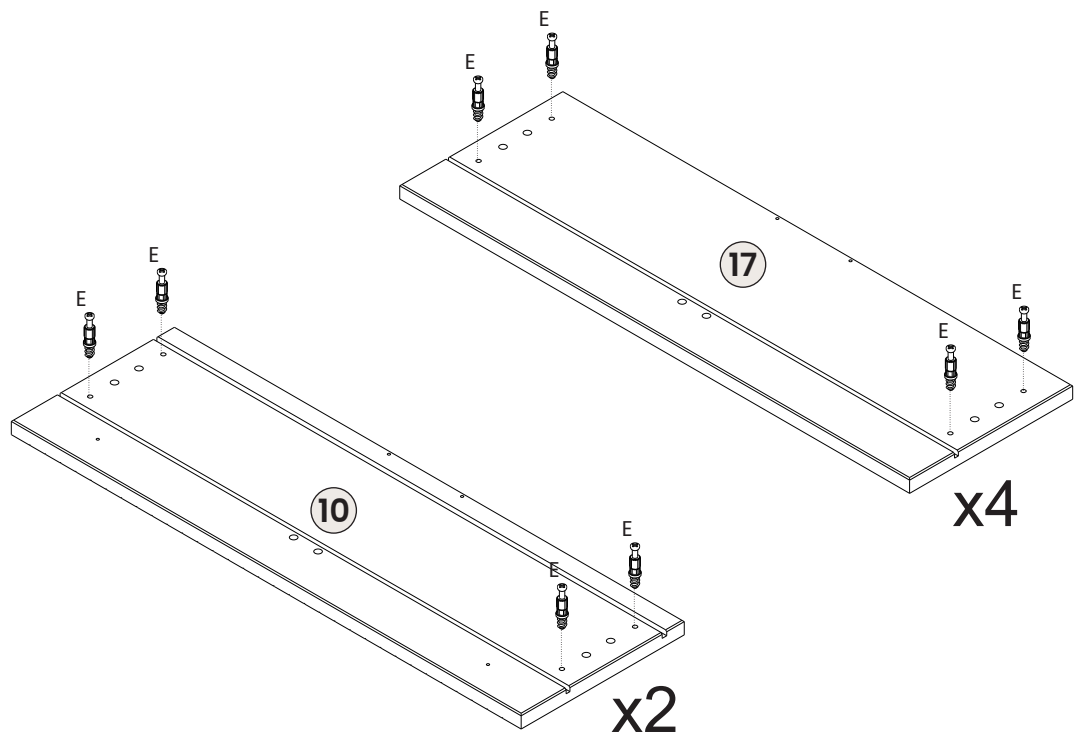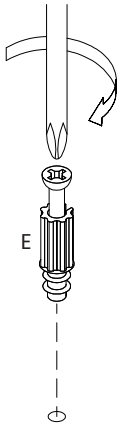


E x 24



15


Specially to part 10, fix the part 16 with screw G.

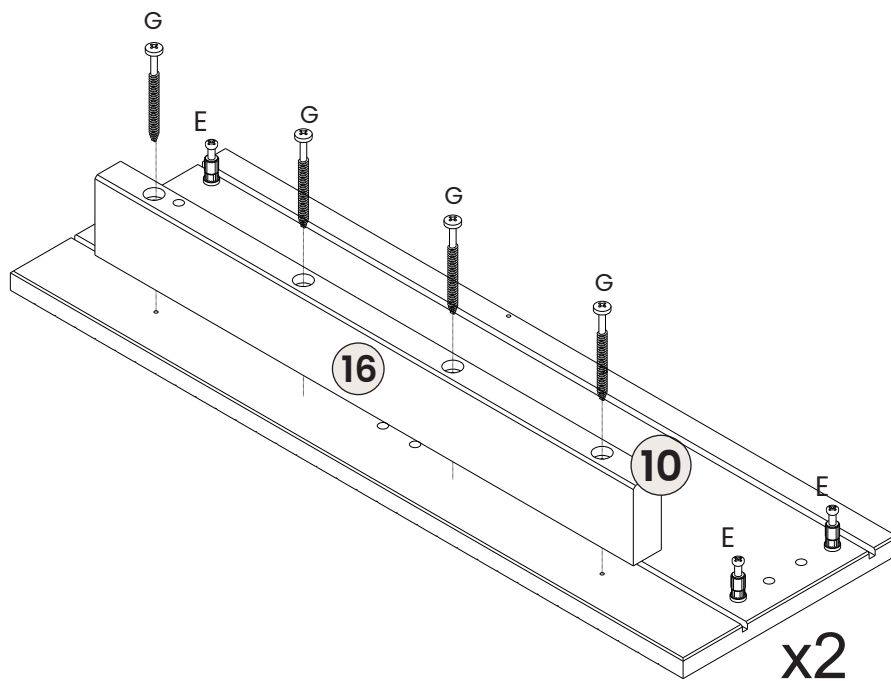Please, start by arranging the ends using the pre-drills.**Then fix the intermediate screws.**



G x 8



Then fix them with screw K.

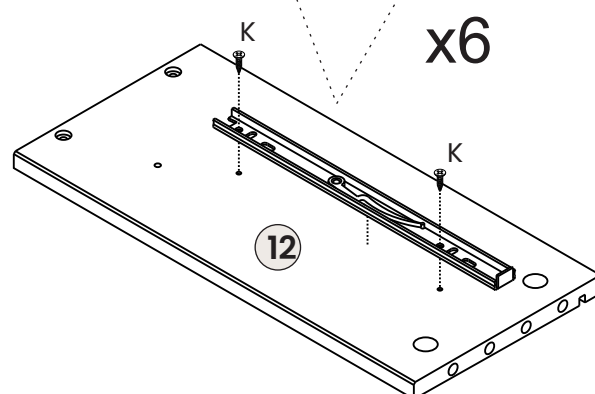


Equally, the same process is applied to parts 12-13-17.

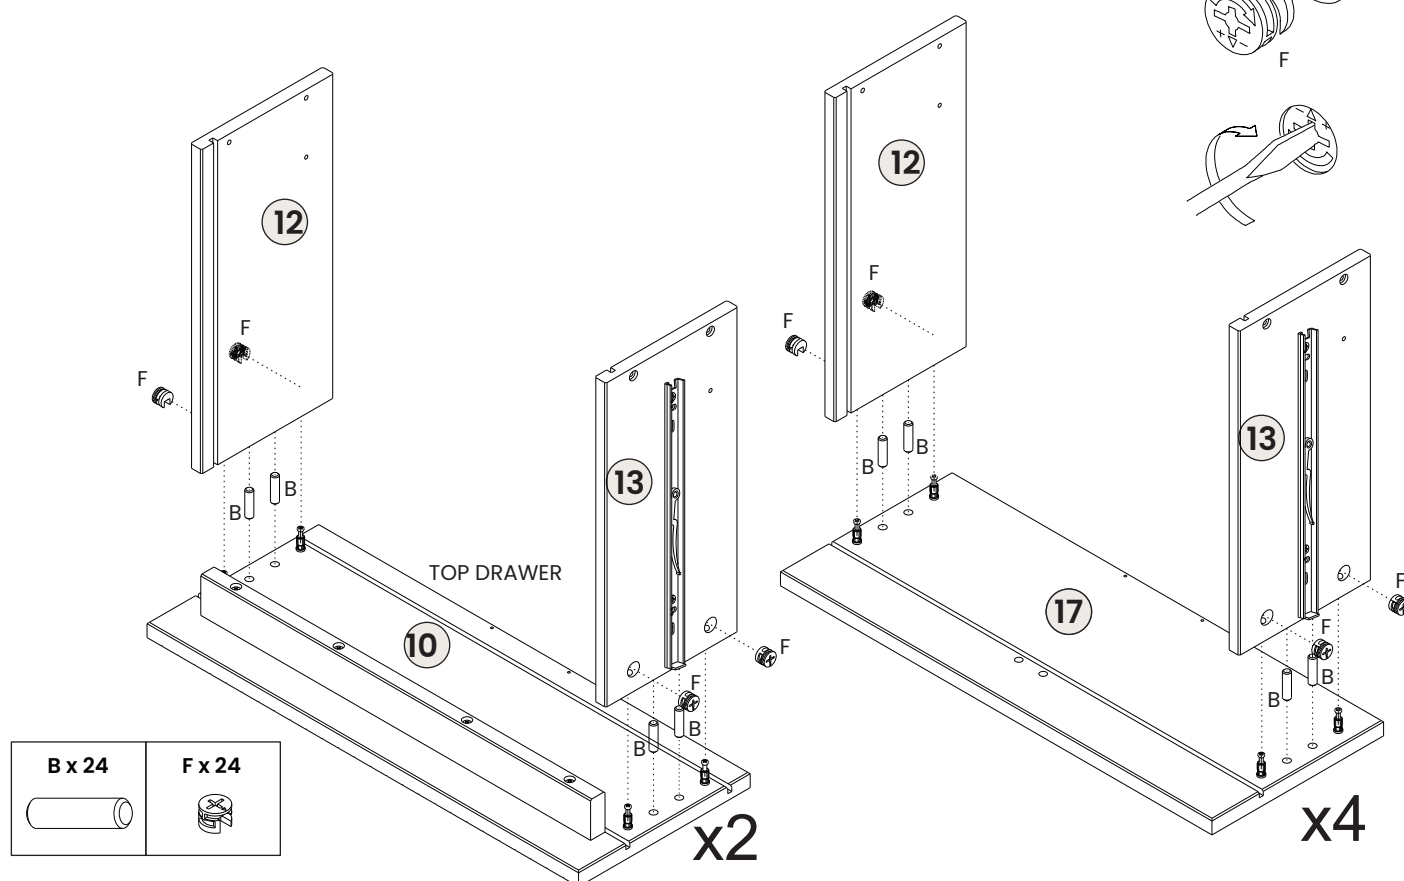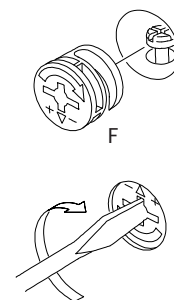

18

Apply the part 14 in the groove of the parts 12-13.
Then, attach the part 15 to parts 10-17 with hardware B.

14

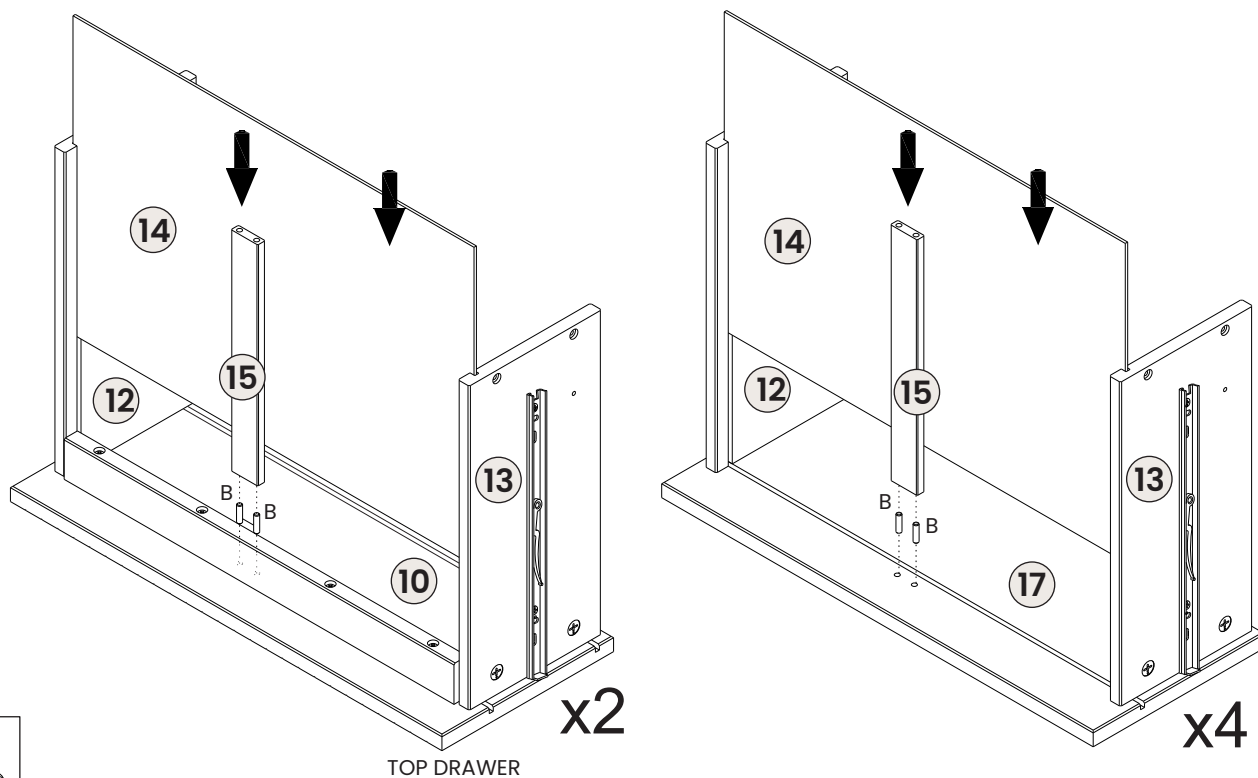


B x 12



19

Attach the part 11 to parts 12-13-15 with the hardware B.
Then, fix the parts 12-13 to part 11 with screw A.

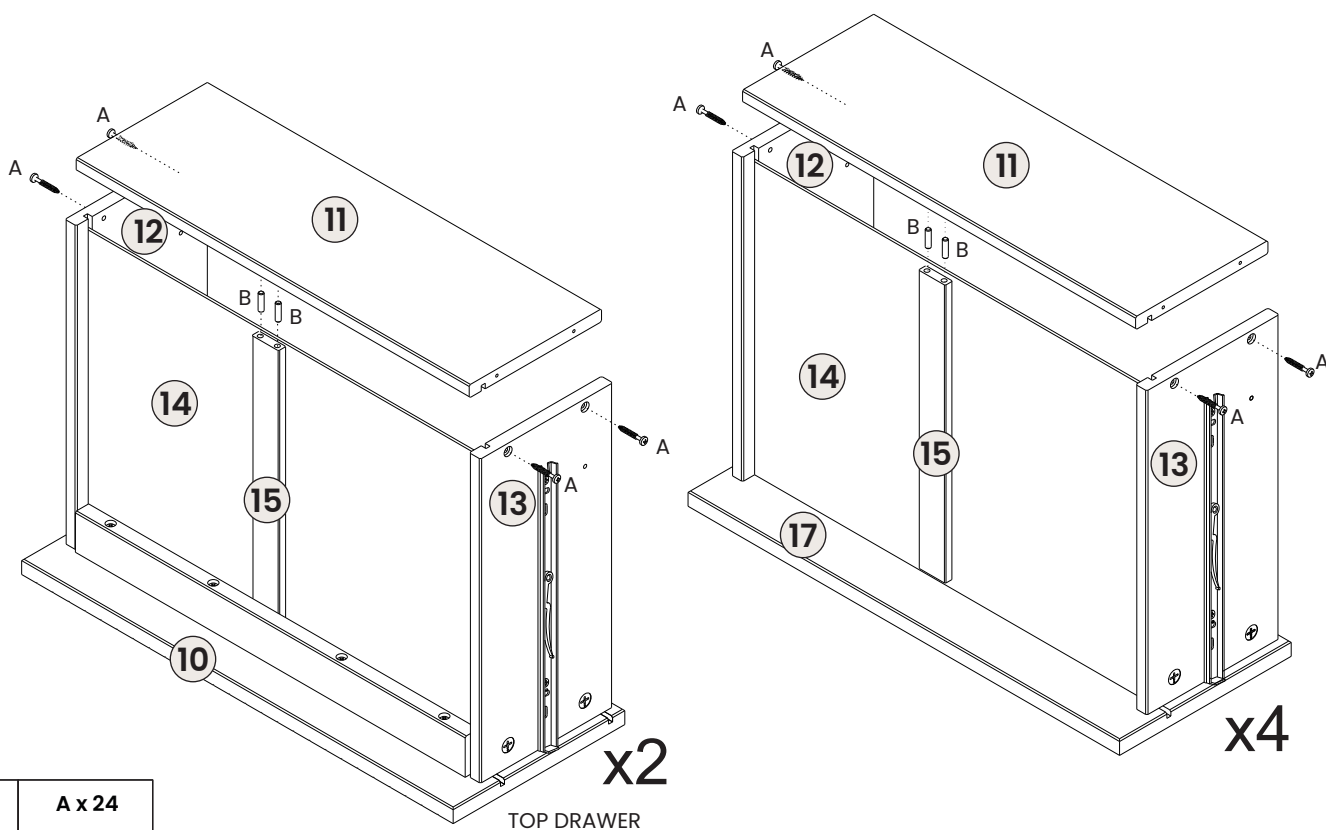

B x 12


A x 24



20

Apply the hardware D to parts 10-17.
Then, fix them with screw C.

15

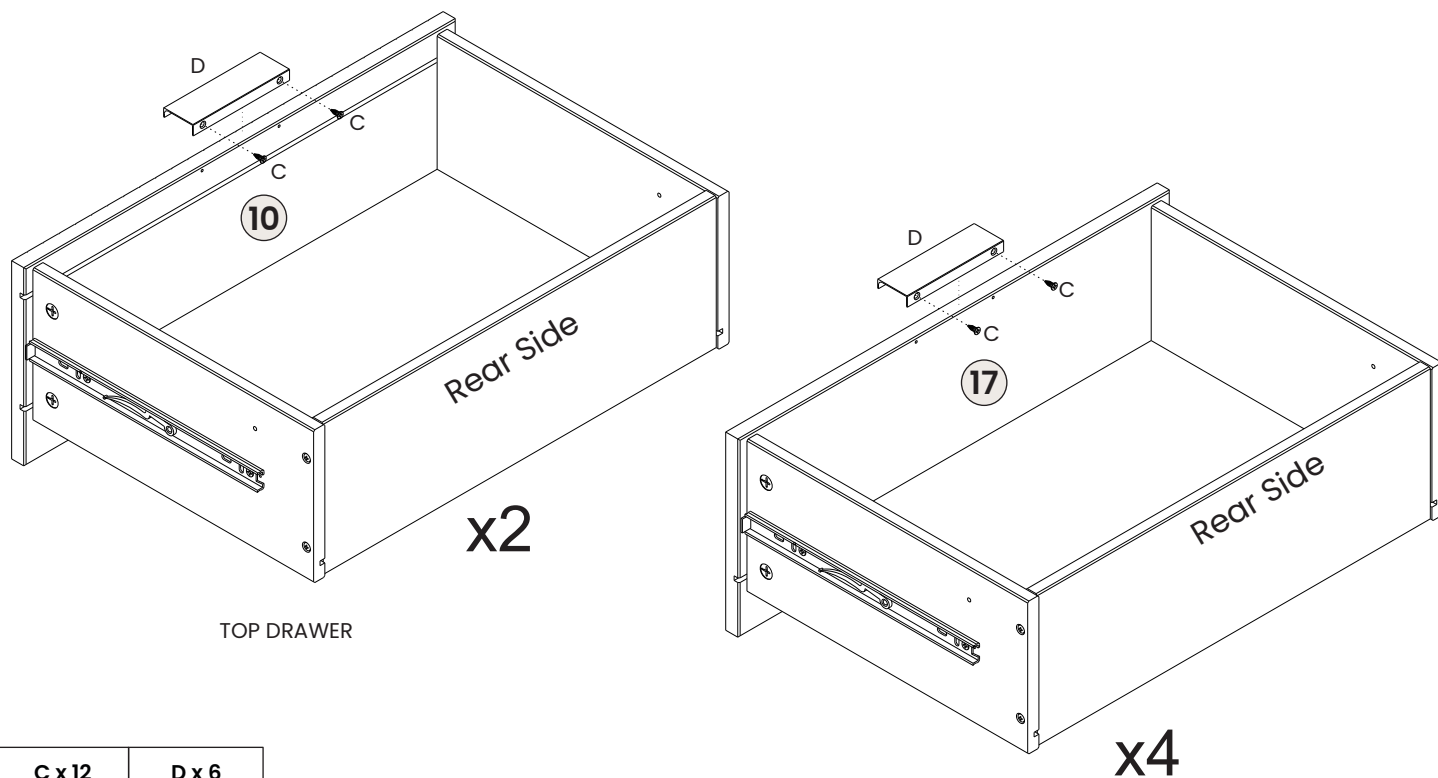

C x 12




D x 6



21

Insert the drawers carefully. You must put a drawer opening limiter screw.

Firstly, keep the drawer partially open so that the limiter screw hole is behind the limiter bracket according to the detail.

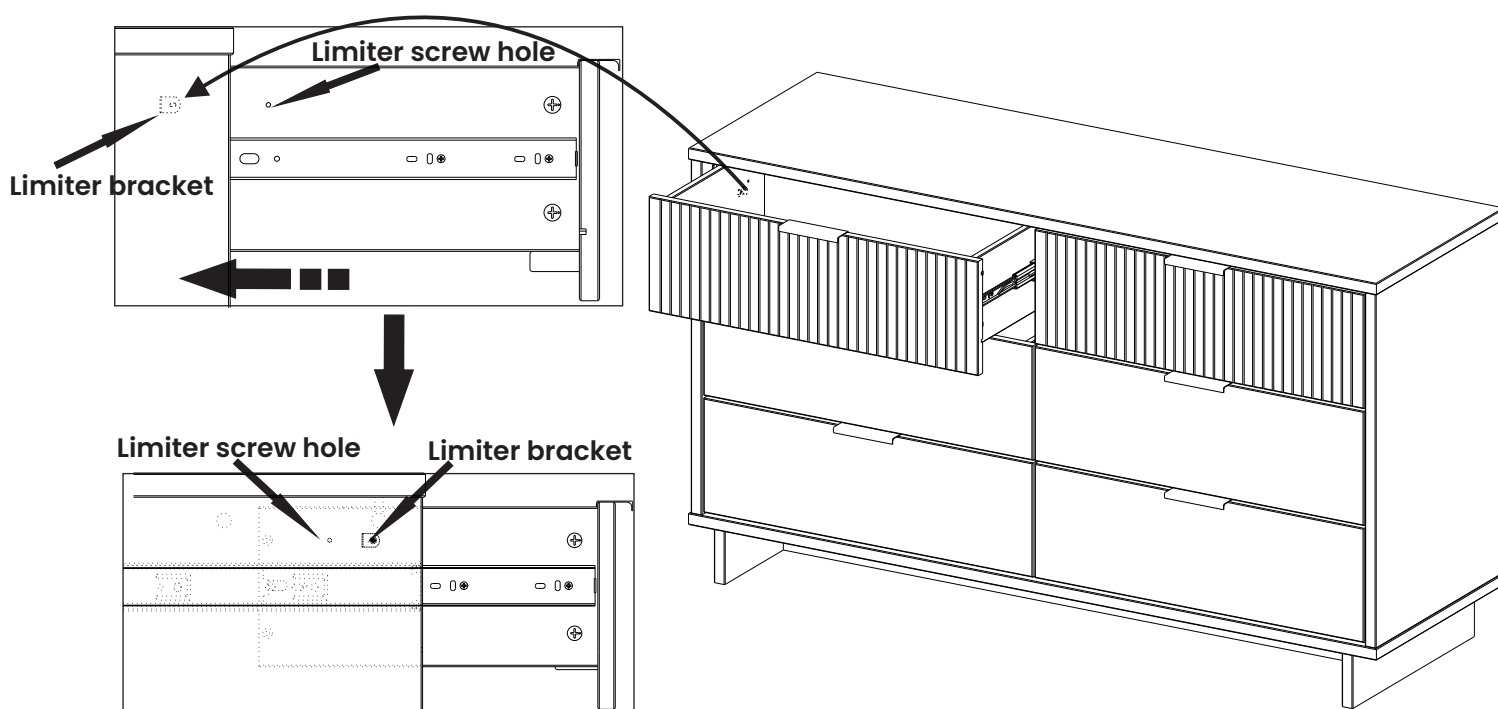


22

ATTENTION: ensure the limiter screw hole is before the limiter bracket.


Then, place the screw O to retain the full opening of the drawer.

16

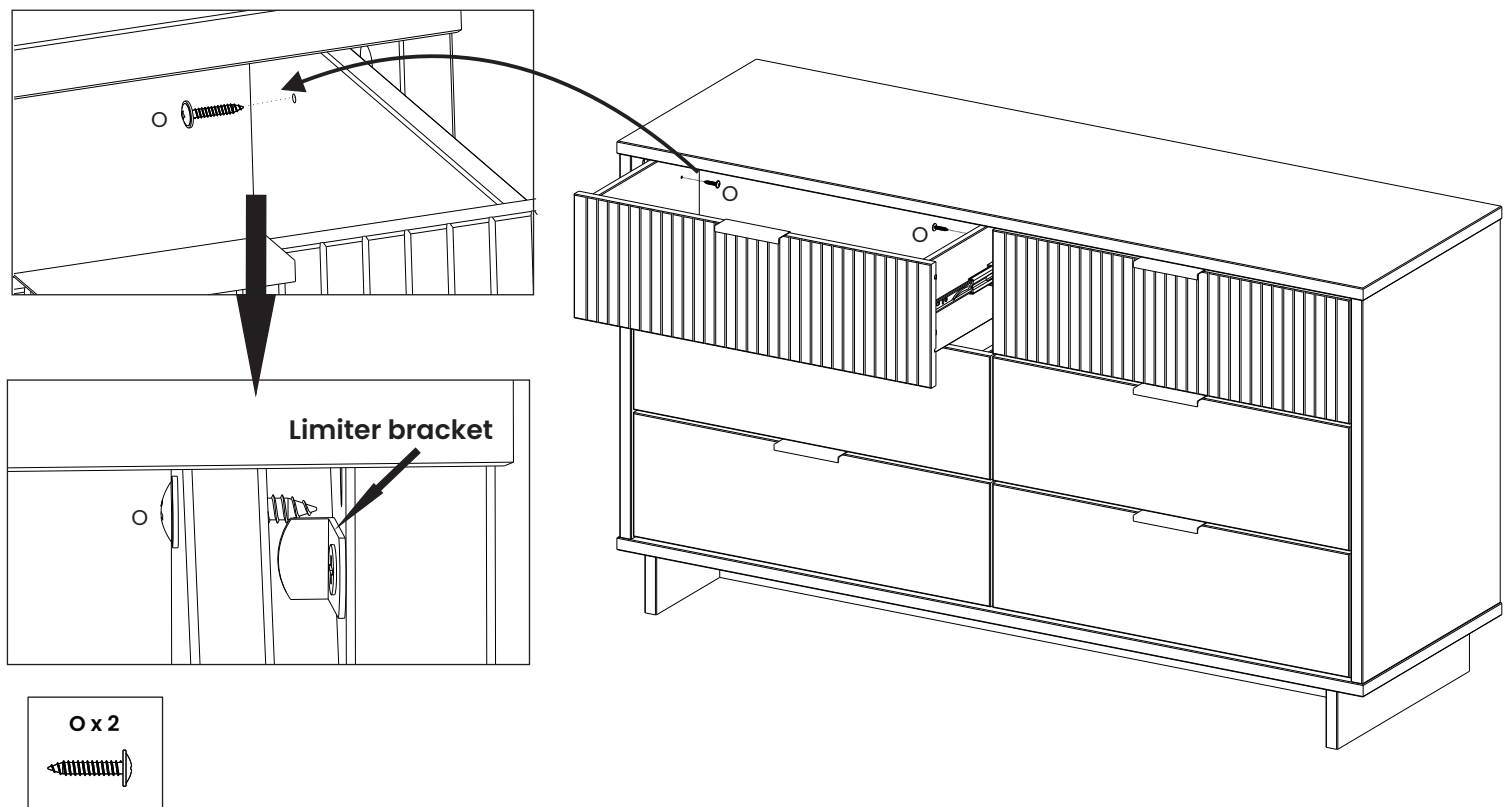

23

Apply the same process to drawer opening limiter to the others drawers.

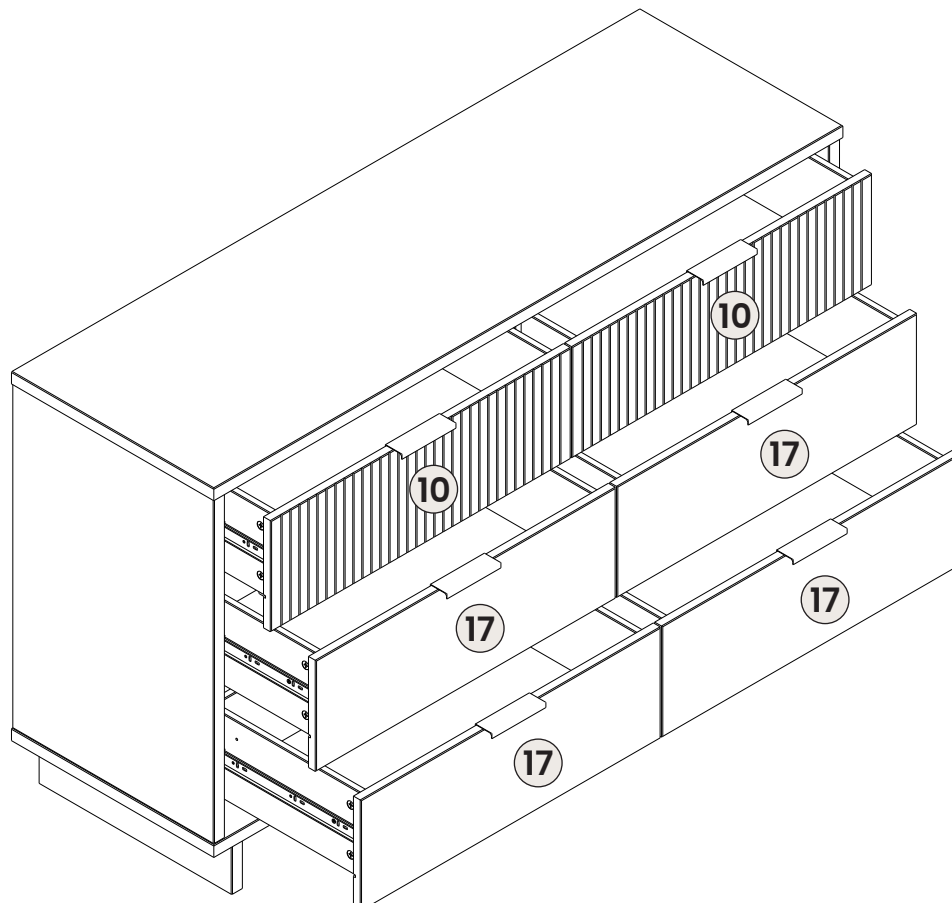



24

You must install the Tipover Restraint Kit (J) provided, in the rear side of the furniture.

Position the hardwares #18256EXP and #20522.

Fix them with screw #11179.


17

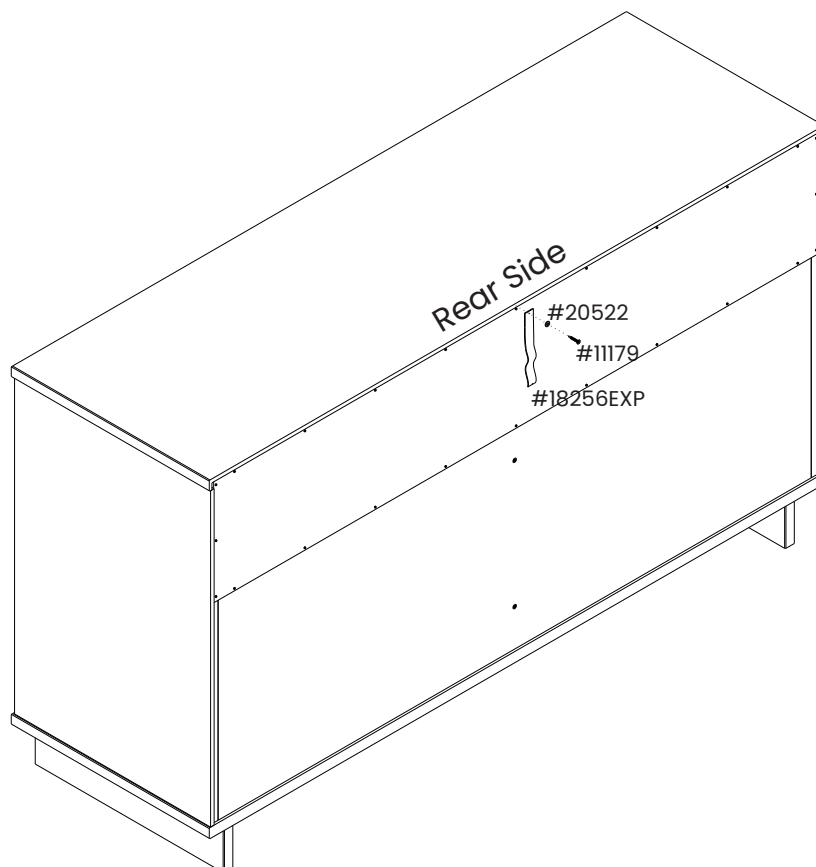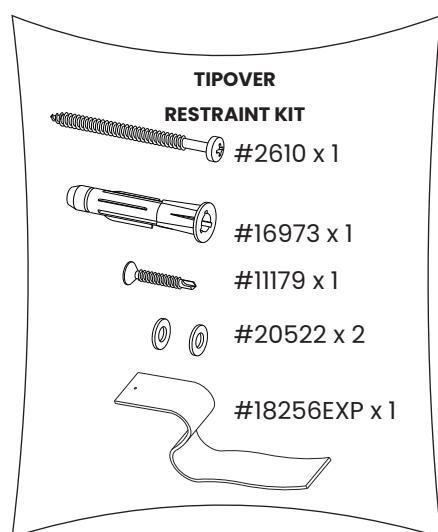

25

Approach the furniture as close as possible to the wall.

Then, mark with a pencil where you should drill the wall to put in the hardware.

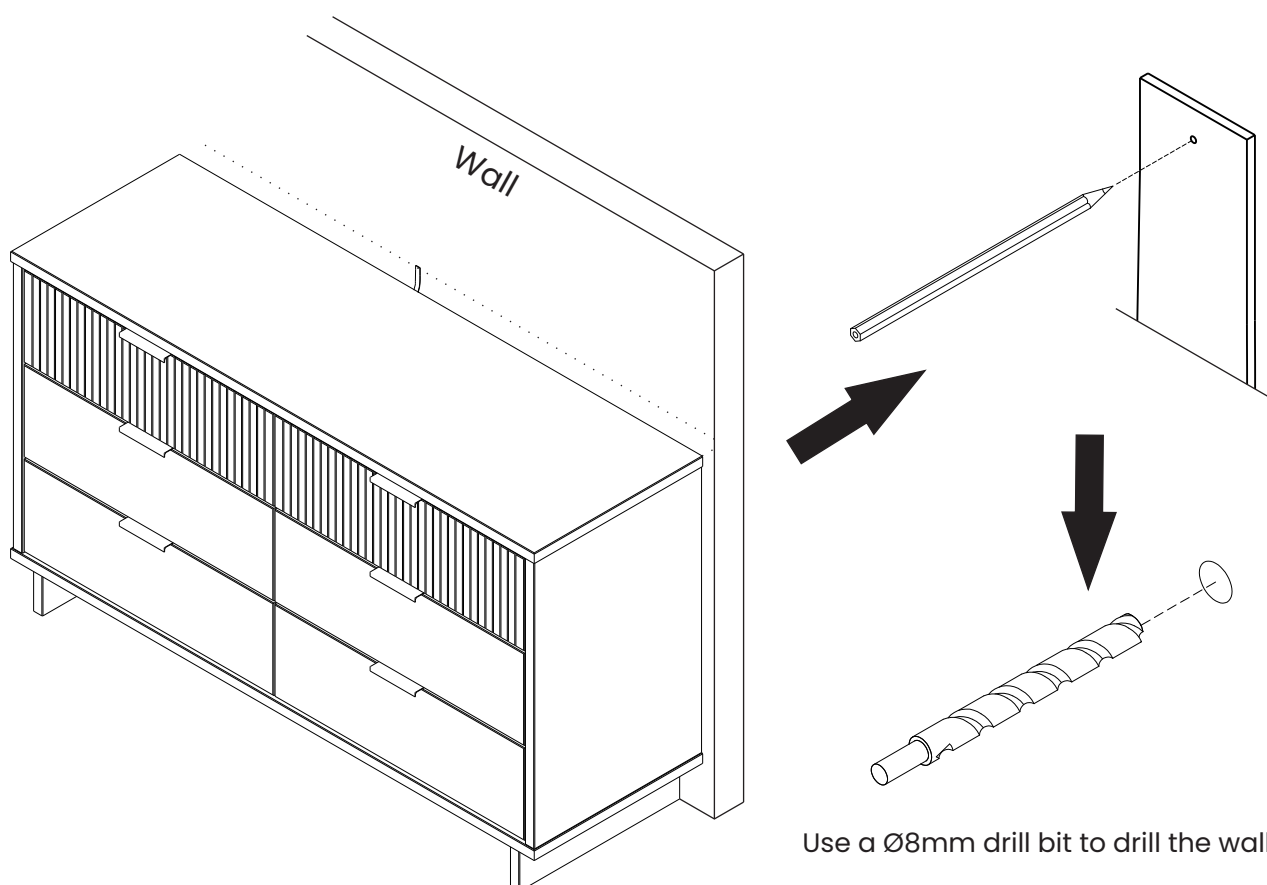


26

Put in the hardware #16973 to the hole that you drilled on the wall.

Then, position the hardware #18256EXP and #20522.

Finally, fix them with screw #2610.

18

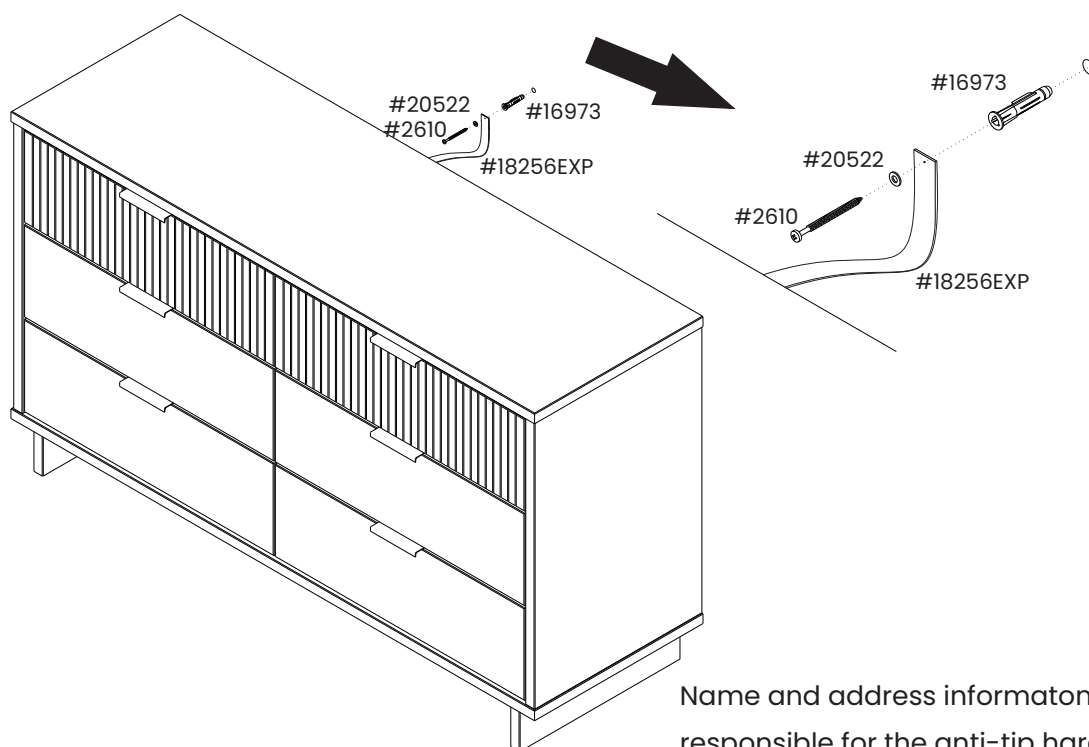

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.

319 Ridge Rd. Dayton, NJ 08810

908-888-0818