


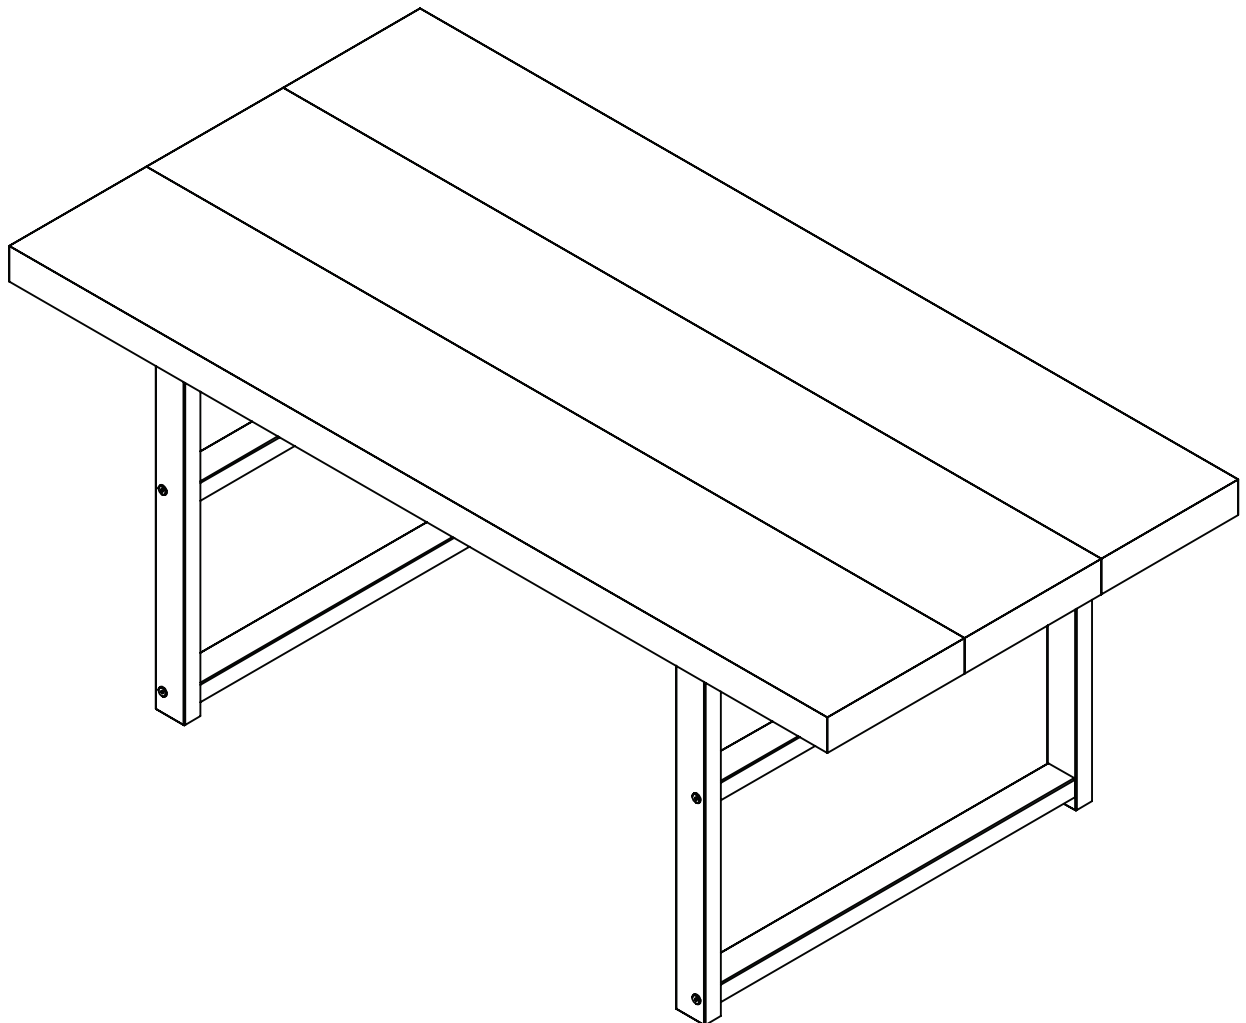


WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.







72" TABLE



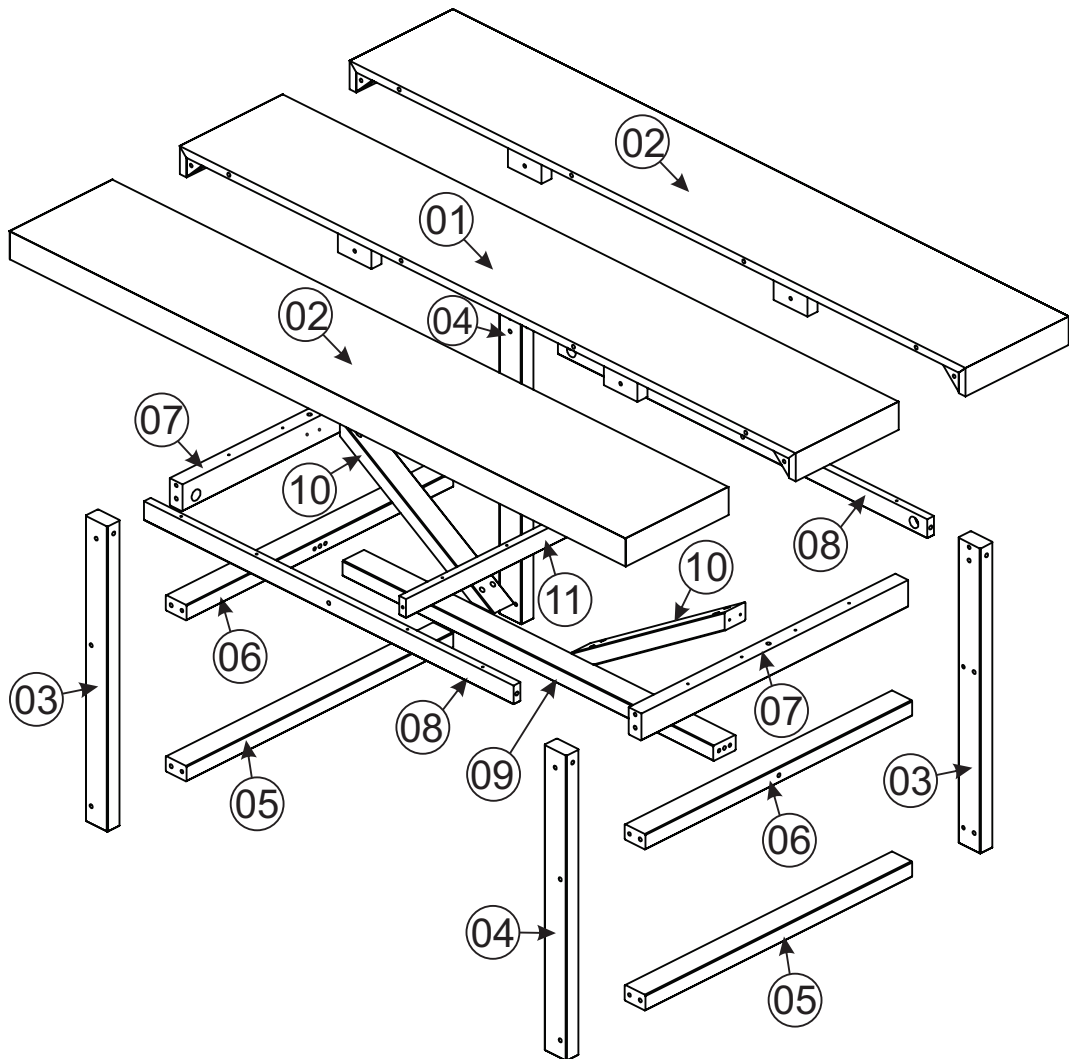




PARTS AND HARDWARE




HARDWARE

| | | |
|----------|---|-----------|
| A |  8X30 | 26 |
| B |  (17*) 1/4X110 | 06 |
| C |  1/4X25 | 18 |
| D |  (17*) 1/4X80 | 12 |
| E |  | 02 |
| F |  (11) 1/4X70 | 10 |

| | | |
|----------|--|-----------|
| G |  1/4 | 10 |
| H |  1/4 | 20 |
| J |  15X40X4 | 01 |
| K |  (17*) 7X50 | 02 |
| L |  CF 4,5X50 | 28 |



STEP 1

INSERT DOWELS (A) TO SHOWN COMPONENTS

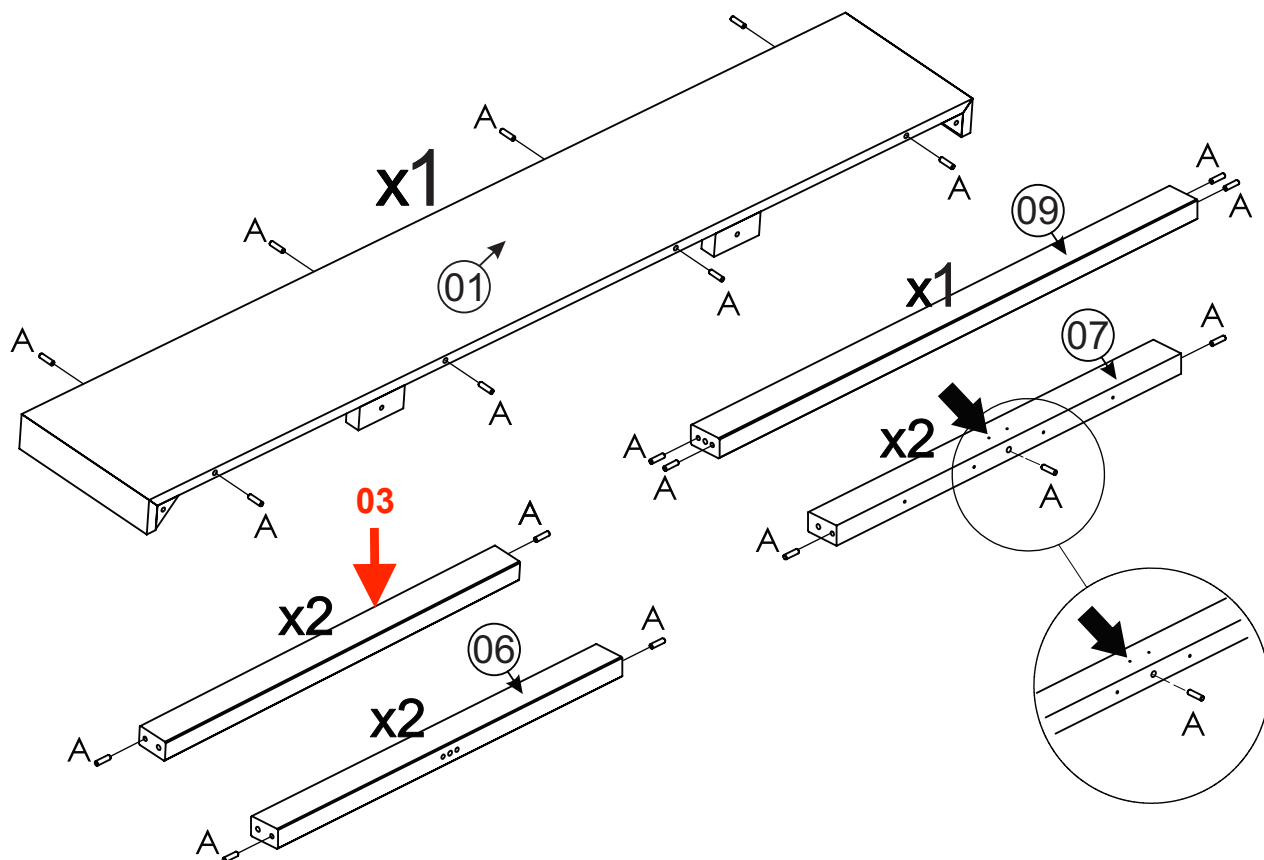

| | | | |
|----------|--|------|-----------|
| A | | 8X30 | 26 |
|----------|--|------|-----------|


STEP 2 ATTACH LEGS (03 & 04) TO CROSSBOARDS (05, 06, & 07) TIGHTEN WITH BOLTS (D) AND NUTS (C)

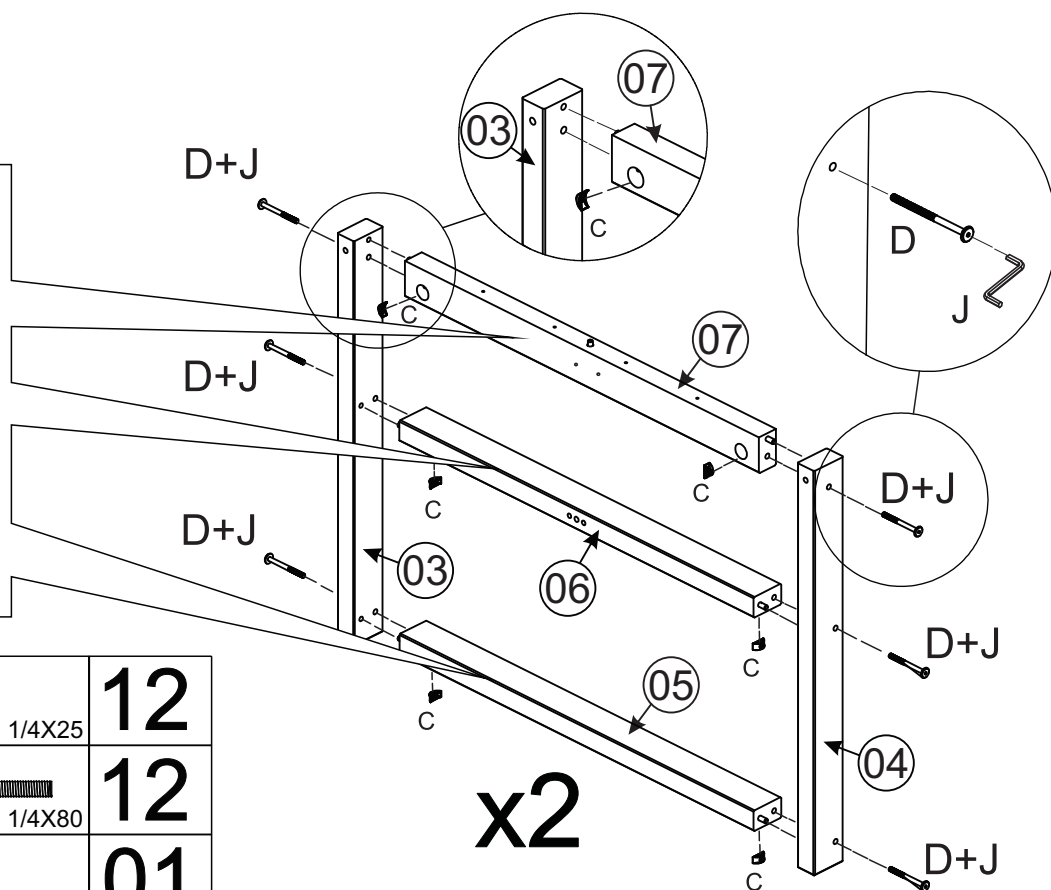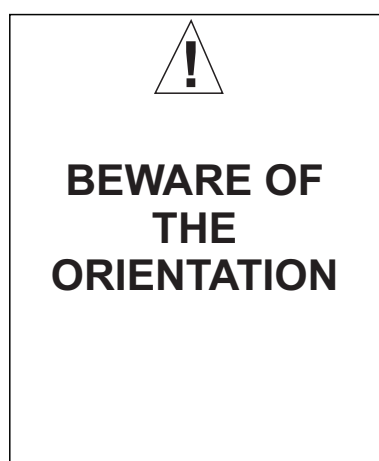

| | | | |
|----------|--|--------------|-----------|
| C | | 1/4X25 | 12 |
| D | | (17*) 1/4X80 | 12 |
| J | | 15X40X4 | 01 |


STEP 3

ATTACH RUNNERS (08x2) TO CROSSBOARD (11)
TIGHTEN WITH BOLTS (K)

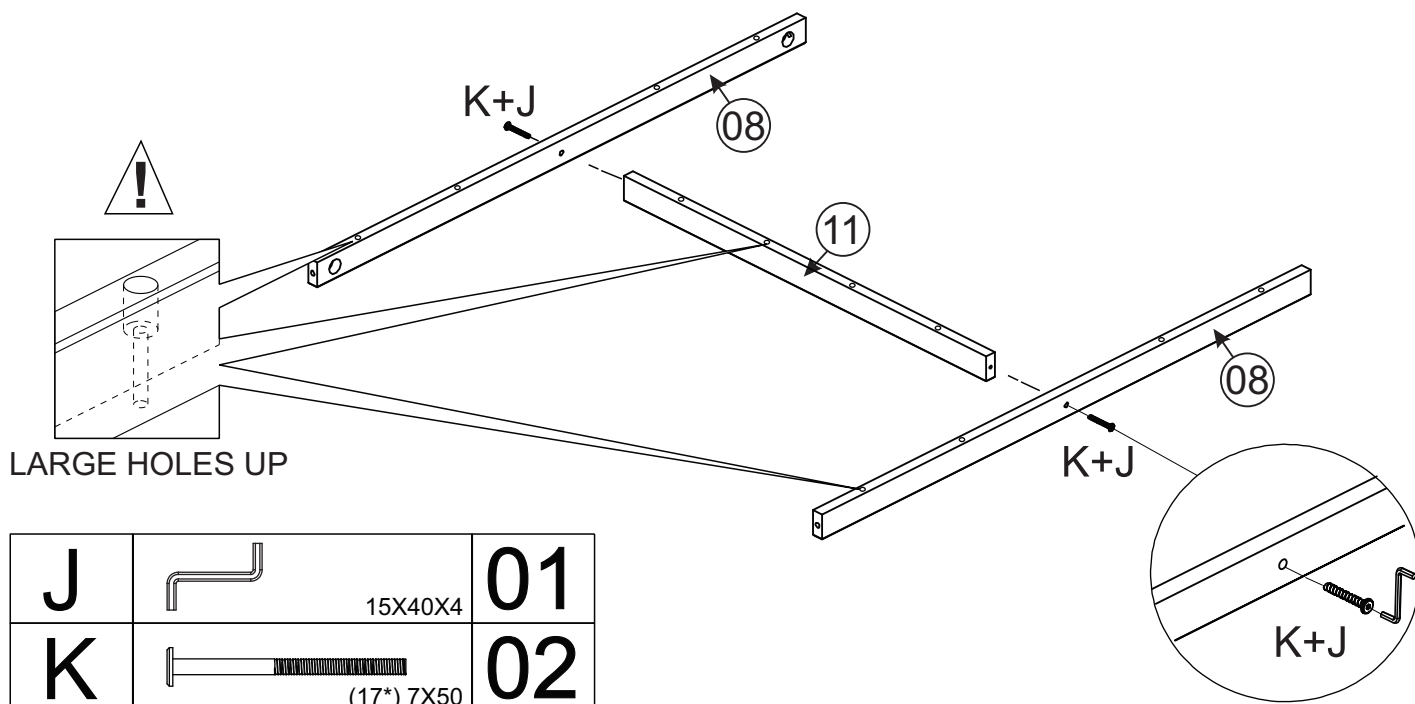

STEP 4

ATTACH RUNNERS & CENTER BRACE (09) TO LEGS
TIGHTEN WITH BOLTS (B) AND NUTS (C)

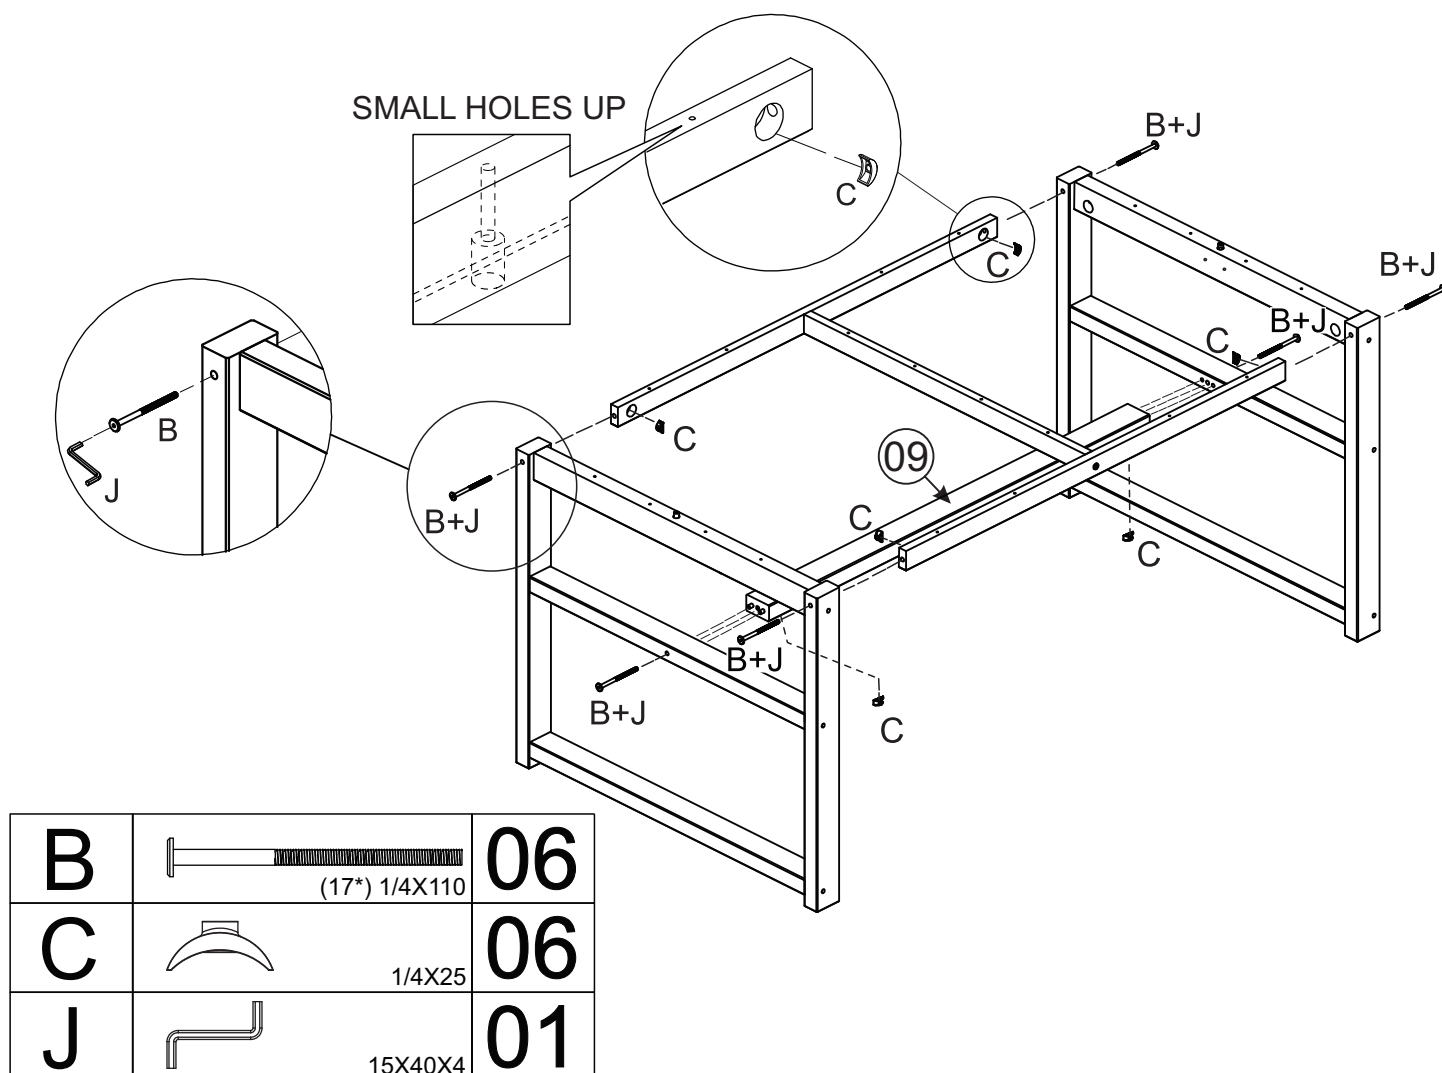


STEP 5

ATTACH ANGLE BRACES (10) TO CENTER BRACE (09) AND CROSSBOARD (07) TIGHTEN WITH SCREWS (L)



ATTACH SIDE
WITH
STICKER TO
(07)

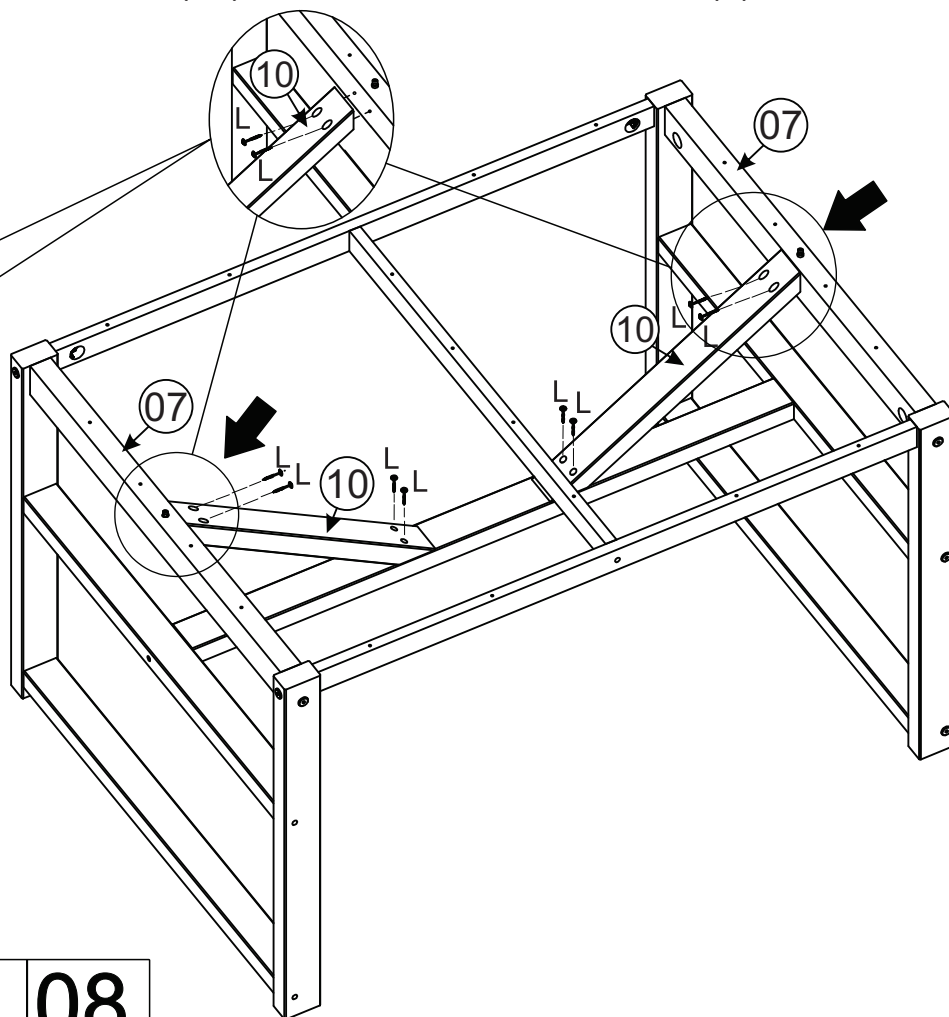

L




CF 4,5X50

08


STEP 6

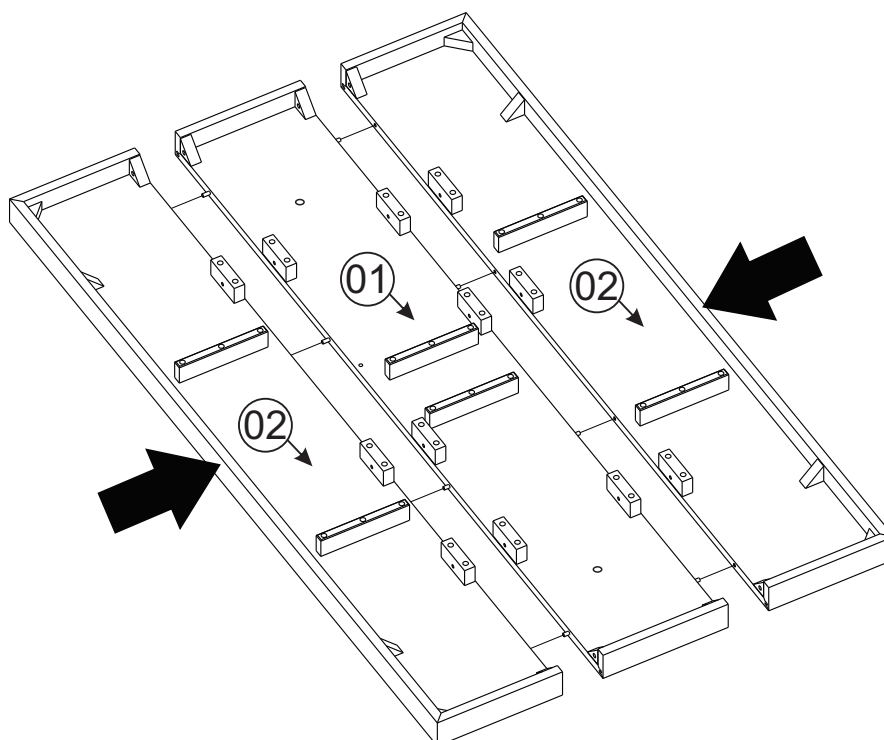



ATTACH TOPS (01 & 02x2) TOGETHER



STEP 7



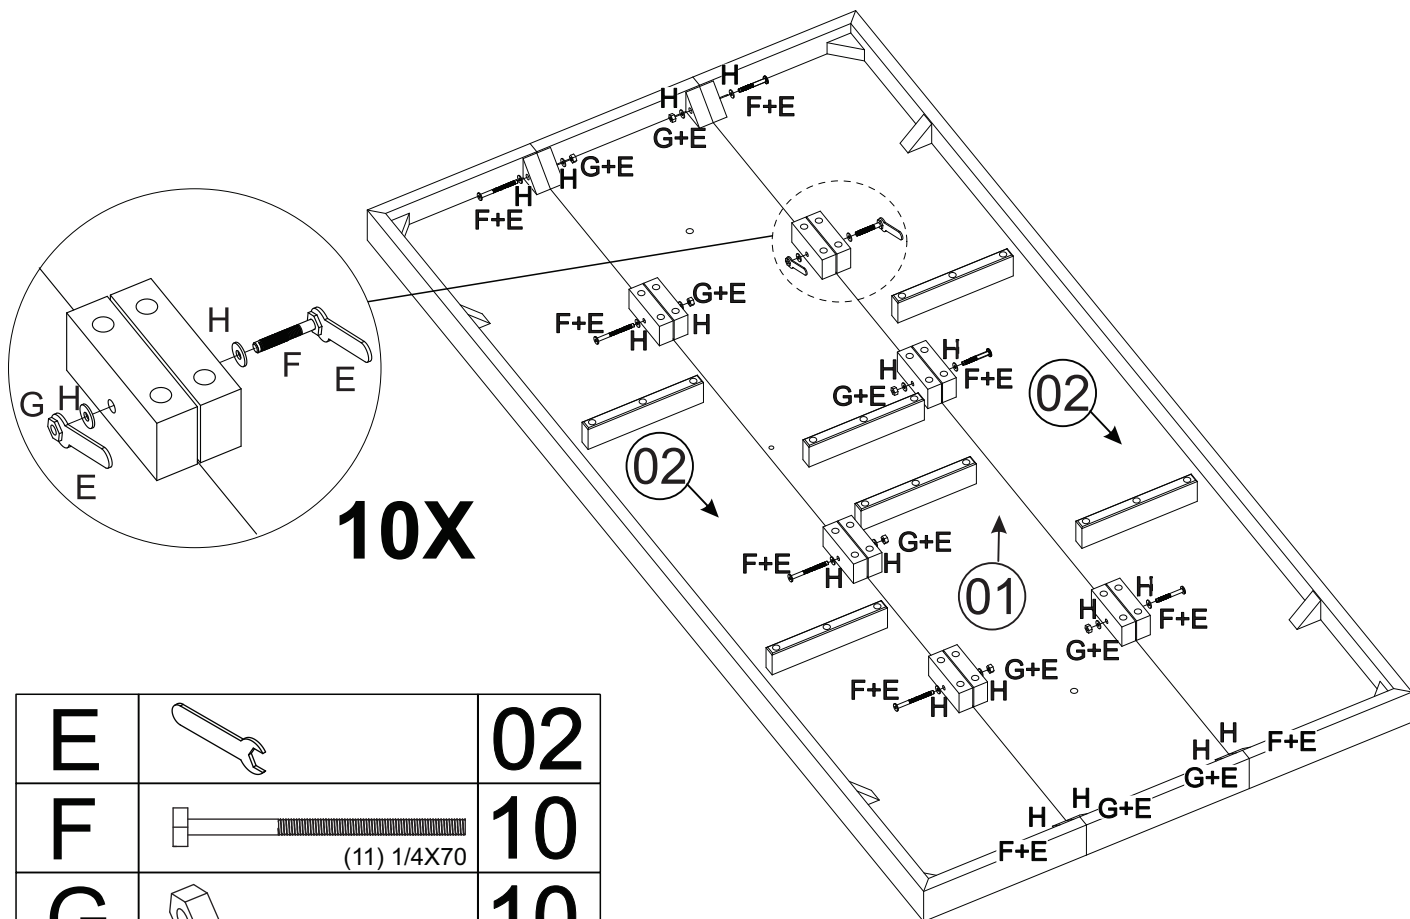
TIGHTEN WITH BOLTS (F), WASHERS (H), AND NUTS (G)




| | | |
|---|--|----|
| E |  | 02 |
| F |  (11) 1/4X70 | 10 |
| G |  1/4 | 10 |
| H |  1/4 | 20 |


STEP 8

ATTACH TABLE BASE TO TABLE TOP TIGHTEN
WITH SCREWS (L) DO NOT OVER TIGHTEN

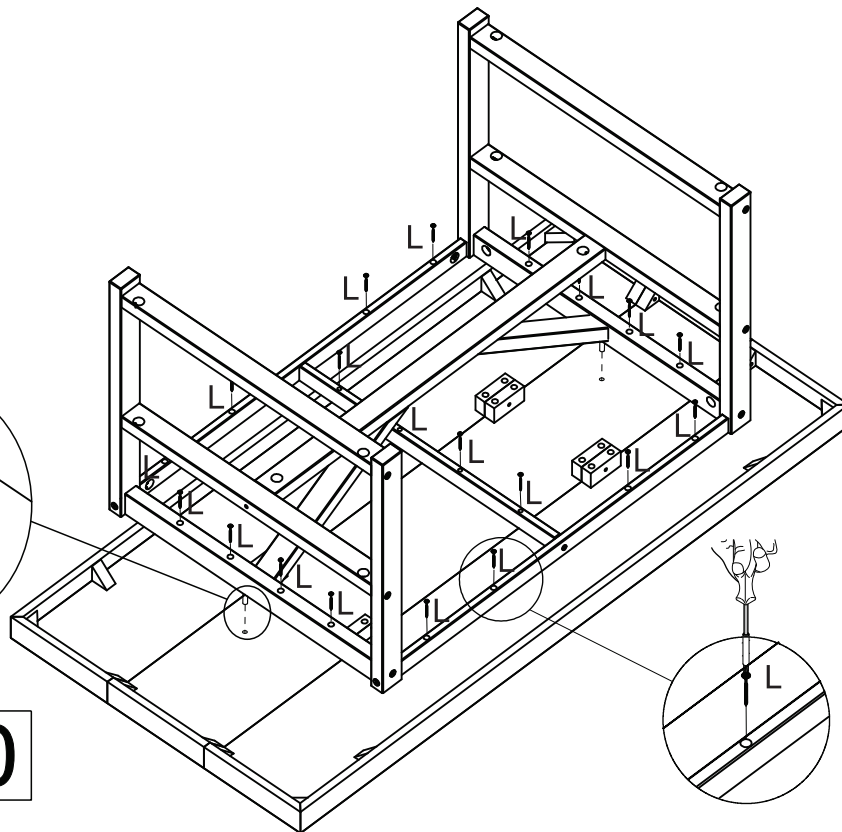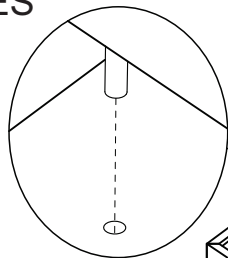


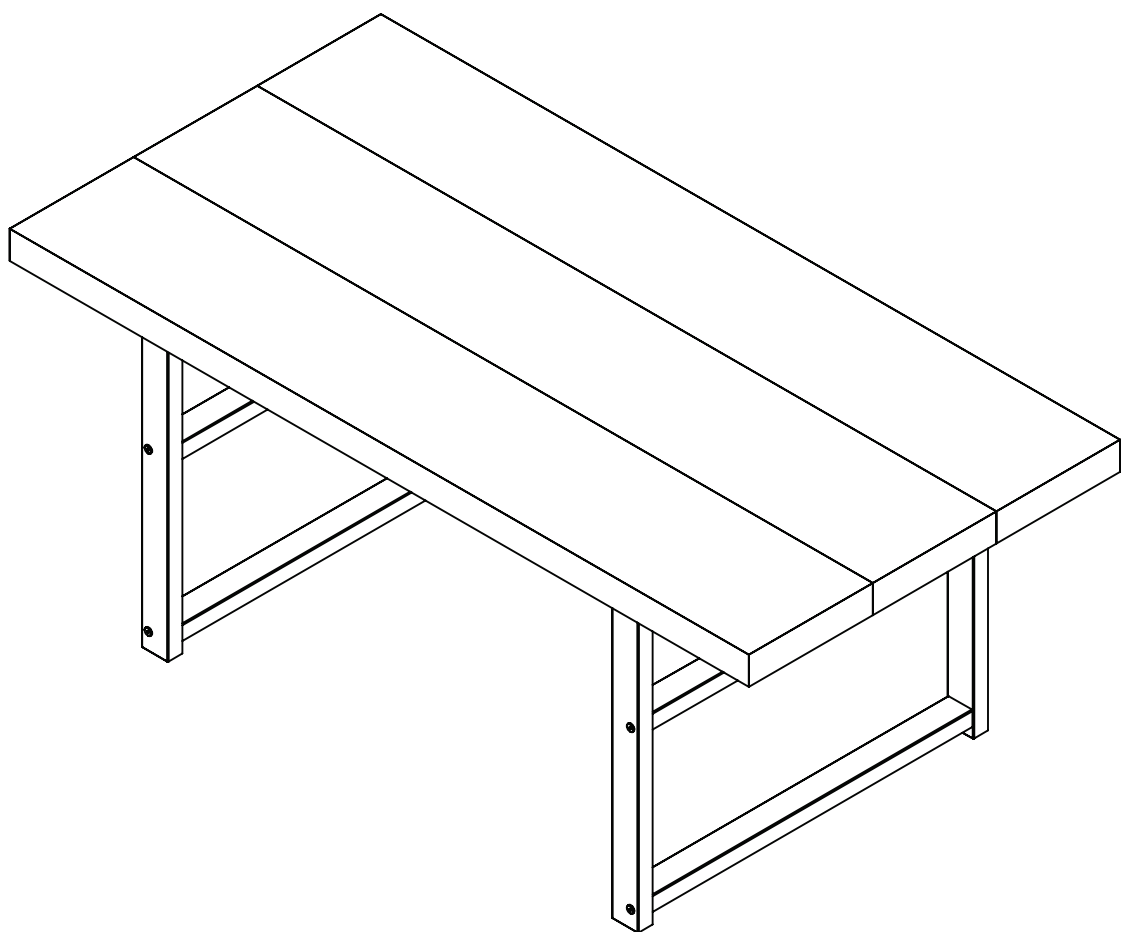




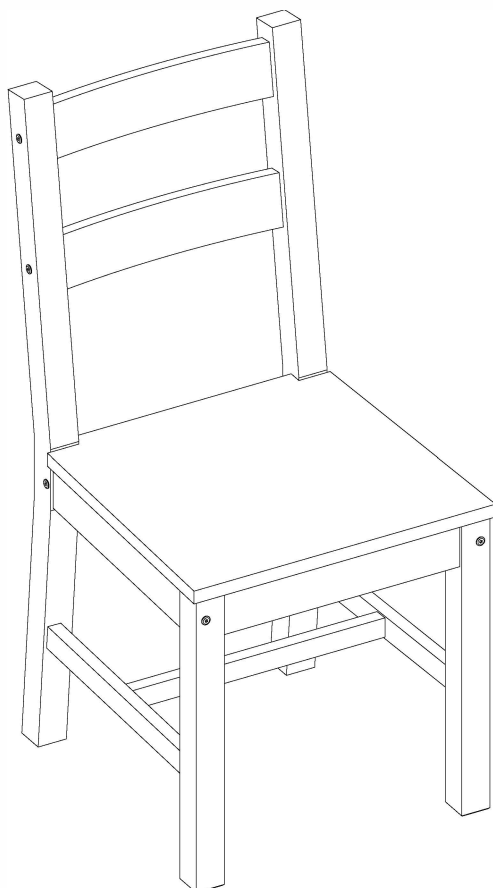


CHAIR

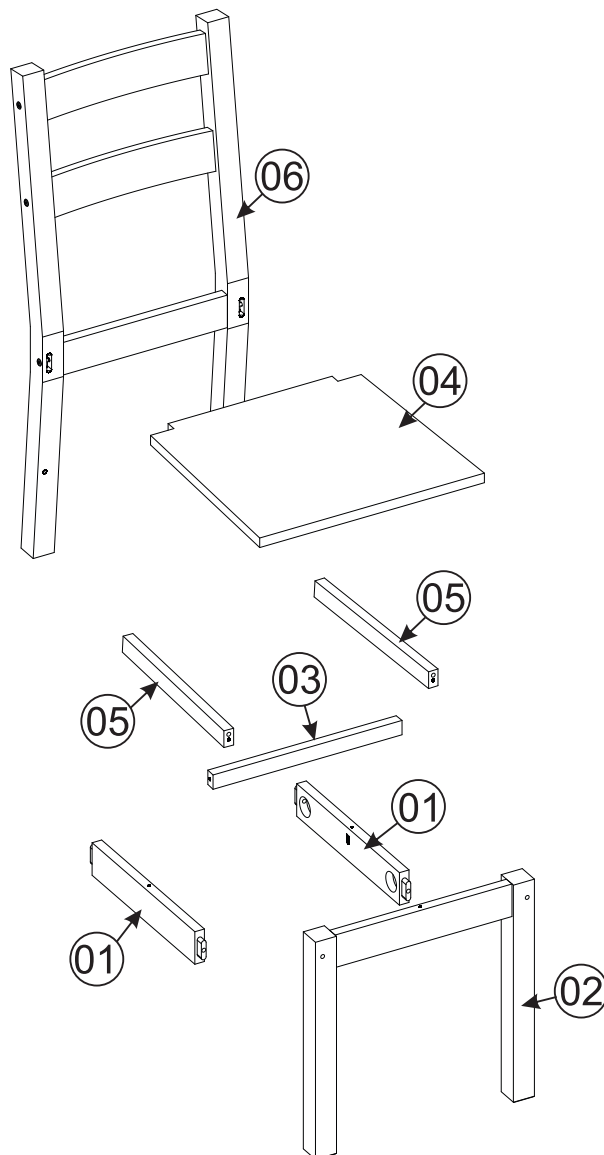

PARTS AND HARDWARE




HARDWARE

| | | |
|----------|---|-----------|
| A |  (17*) 1/4x80 | 04 |
| B |  4X45 | 06 |
| C |  4X30 | 04 |
| D |  Ø8X30 | 06 |
| E |  15X40X4 | 01 |
| F |  | 04 |


STEP 1

INSERT DOWELS (D) INTO COMPONENTS SHOWN
ATTACH CROSS BOARD (03) TO STRETCHER BOARDS (05)
TIGHTEN WITH SCREWS (B)

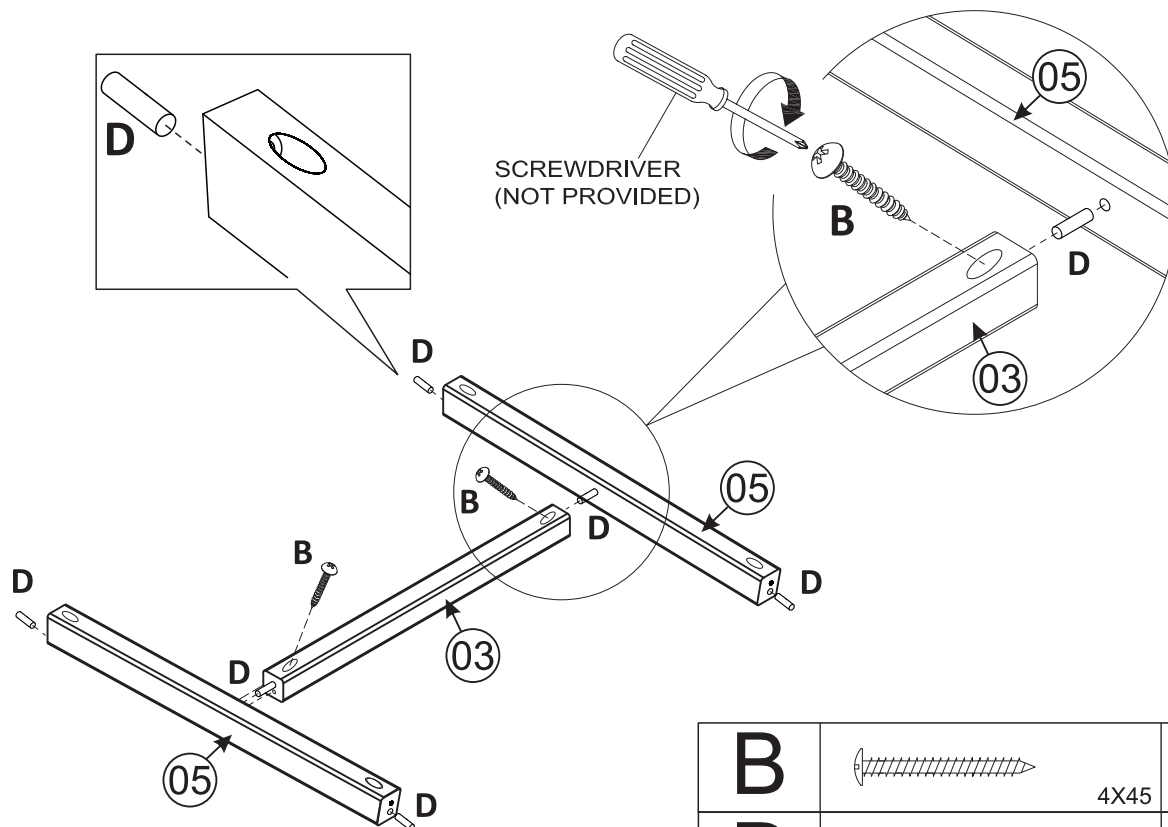






STEP 2

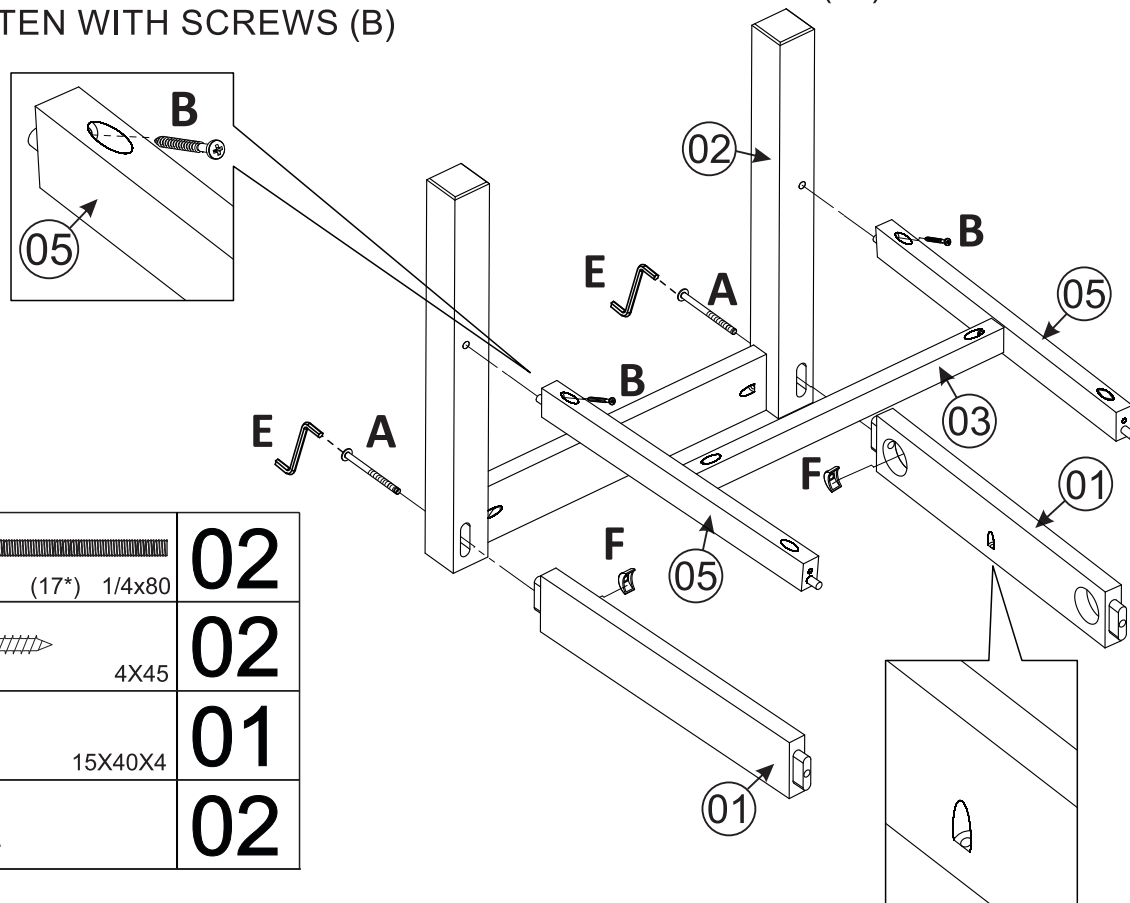ATTACH SEAT SUPPORT BOARDS (01) TO FRONT LEGS (02)
TIGHTEN WITH BOLTS (A) AND NUTS (F)
ATTACH ASSEMBLED STRETCHER TO FRONT LEGS (02)
TIGHTEN WITH SCREWS (B)

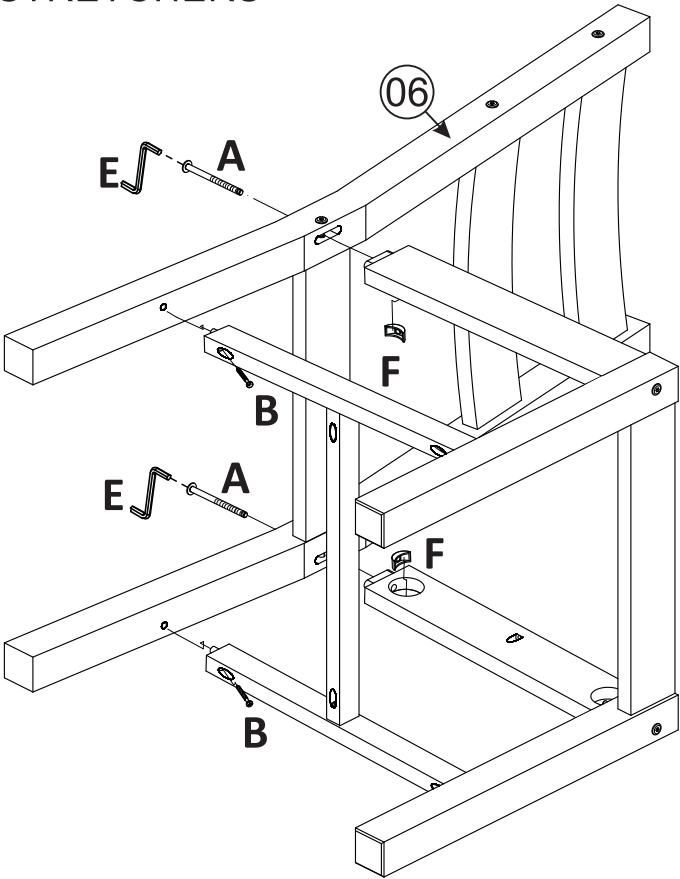


STEP 3 ATTACH THE BACK (06) AND TIGHTEN BOLTS (A) AND NUTS (C) FOR THE SEAT SUPPORT BOARDS SCREWS (B) FOR THE STRETCHERS




| | | |
|---|---|----|
| A |  (17*) 1/4x80 | 02 |
| B |  4X45 | 02 |
| E |  15X40X4 | 01 |
| F |  | 02 |

STEP 4 ATTACH THE SEAT (04) AND TIGHTEN USING SCREWS (C)

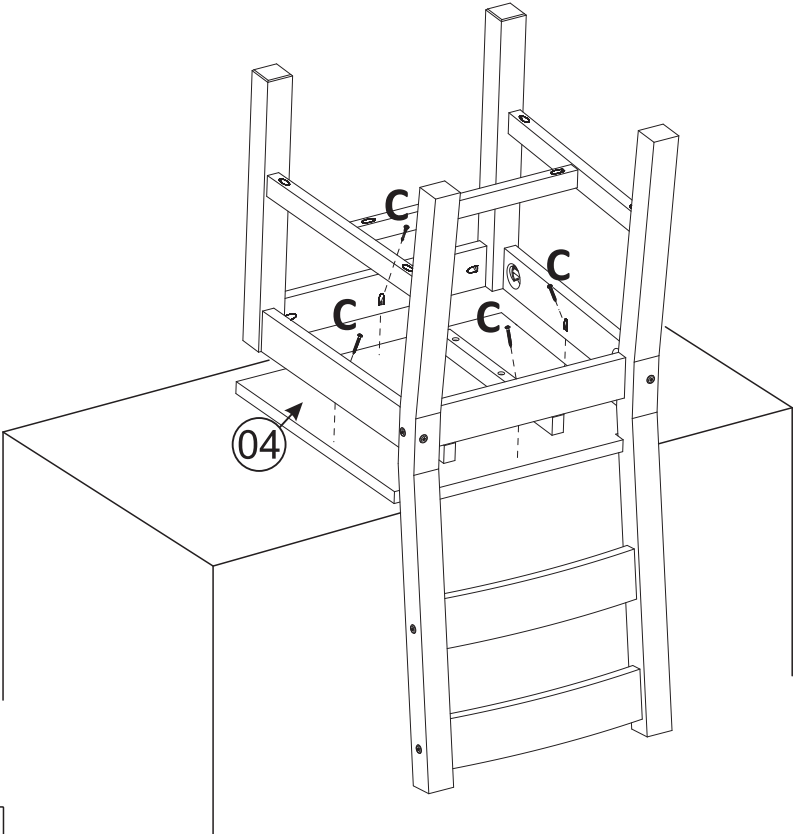


| | | |
|---|---|----|
| C |  4X30 | 04 |
|---|---|----|








60" BENCH

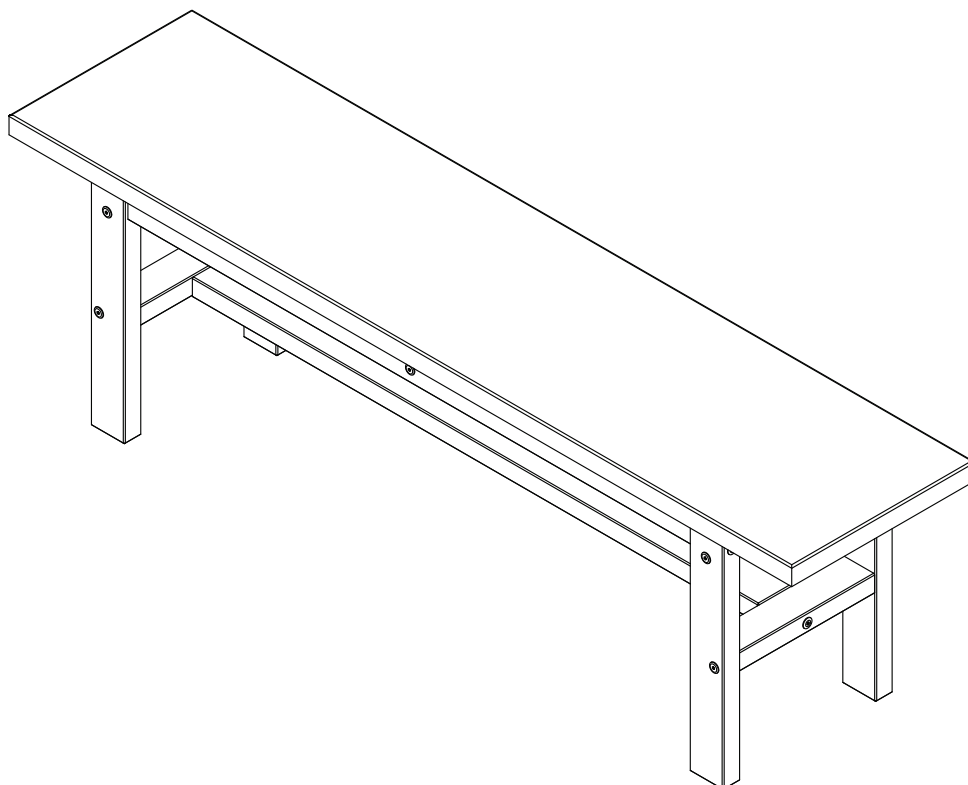

PARTS AND HARDWARE

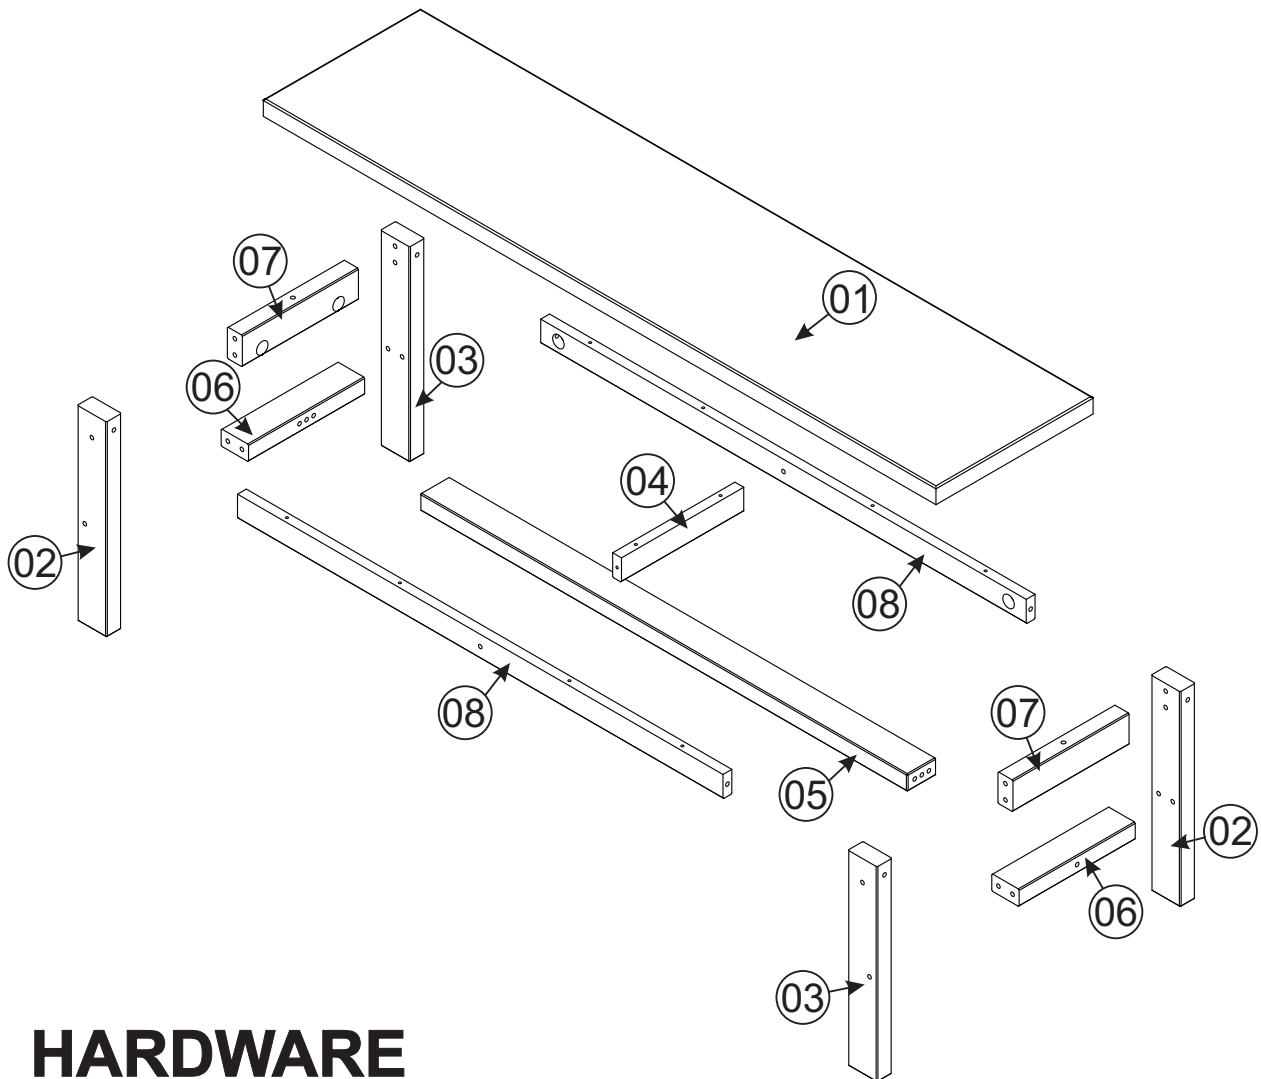


HARDWARE

| | | |
|---|---|----|
| A |  8X30 | 14 |
| B |  (17*) 1/4X110 | 06 |
| C |  1/4X25 | 14 |
| D |  (17*) 1/4X80 | 08 |
| E |  15X40X4 | 01 |
| F |  (17*) 7X50 | 02 |
| G |  CF 4,5X50 | 10 |

STEP 1


INSERT DOWELS (A) TO ALL SHOWN COMPONENTS

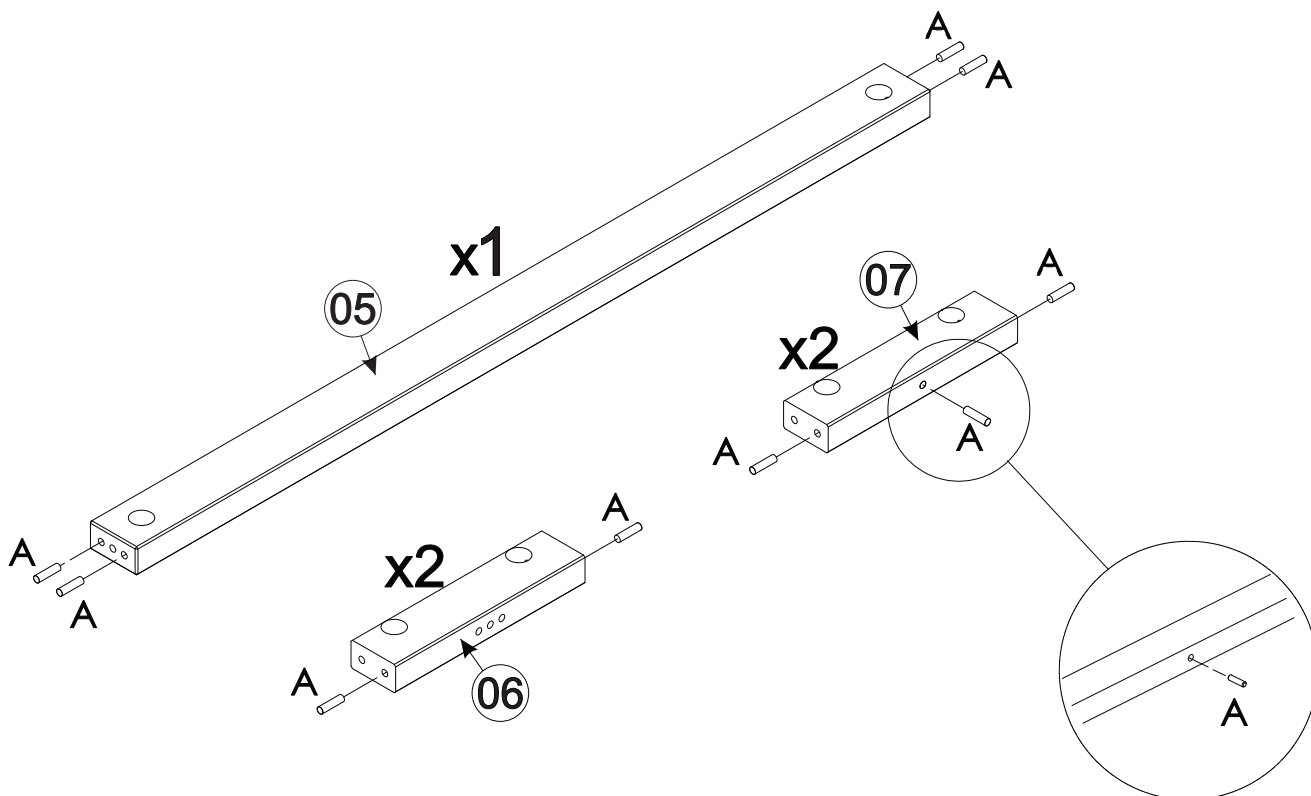

| | | | |
|---|--|------|----|
| A | | 8X30 | 14 |
|---|--|------|----|

STEP 2


ATTACH LEGS (02 & 03) WITH CROSS BOARDS (06 & 07)
TIGHTEN WITH BOLTS (D) AND NUTS (C)

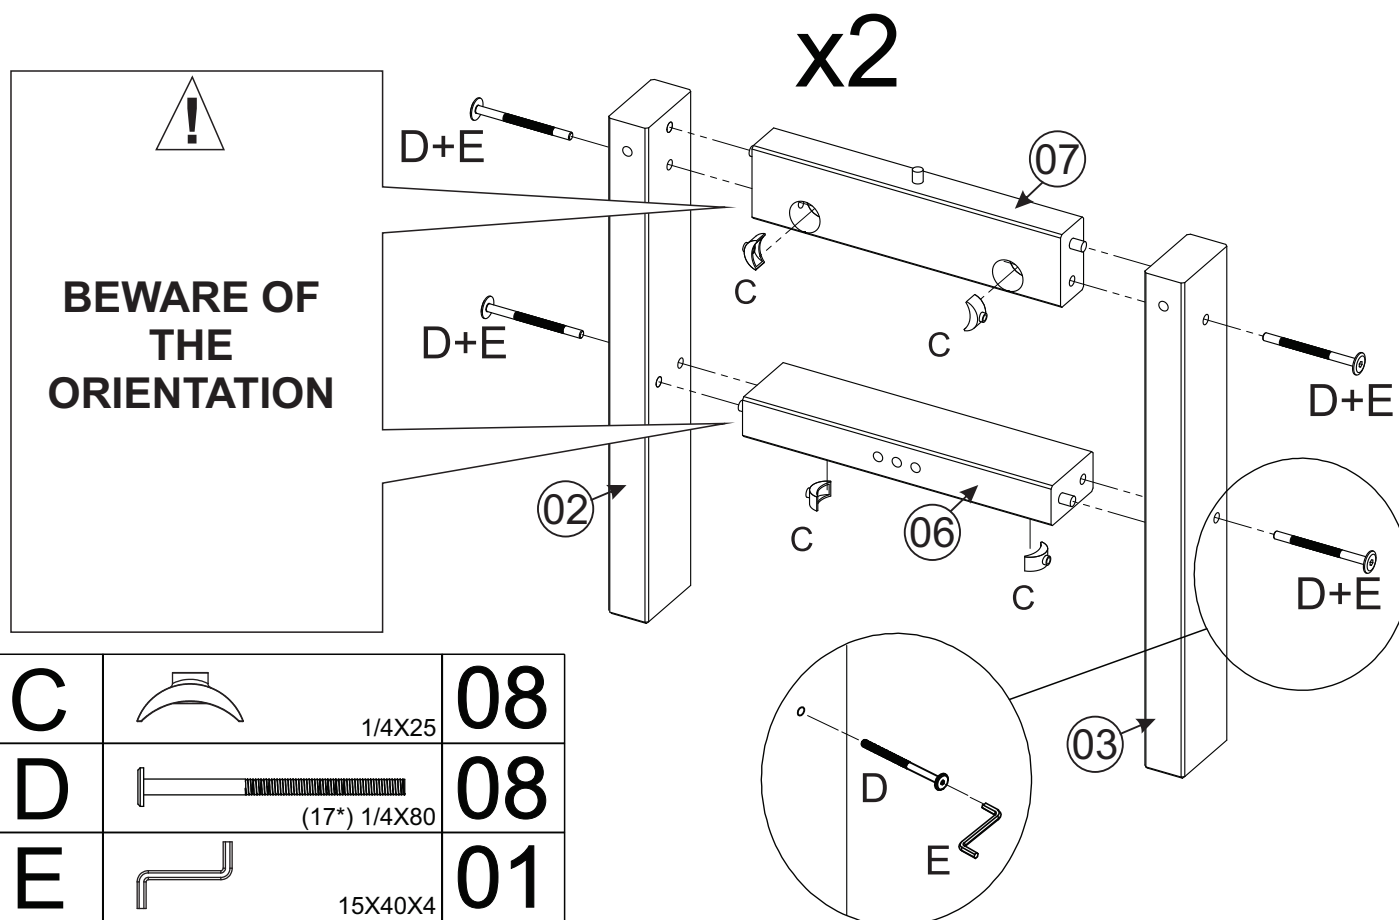

| | | | |
|---|--|--------------|----|
| C | | 1/4X25 | 08 |
| D | | (17*) 1/4X80 | 08 |
| E | | 15X40X4 | 01 |


STEP 3

ATTACH RUNNERS (08x2) TO CROSSBOARD (04)
TIGHTEN WITH BOLTS (F)

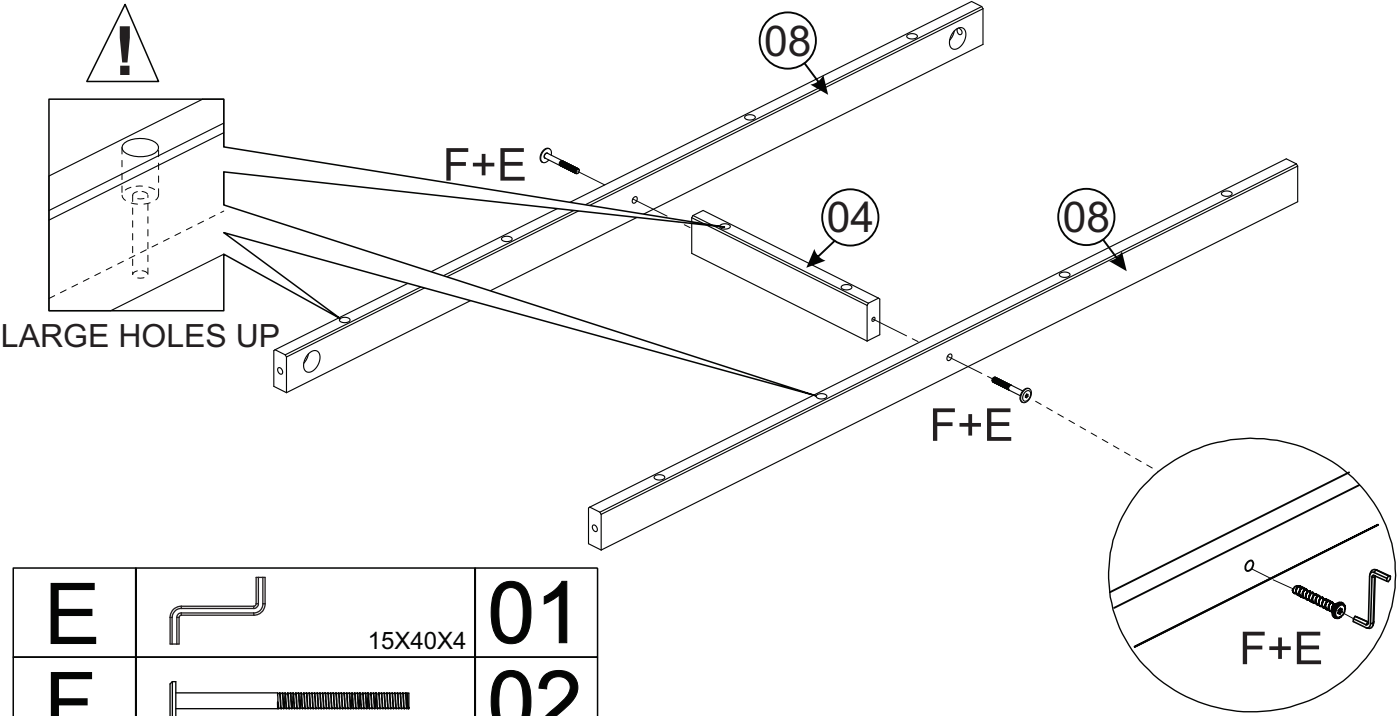



STEP 4

ATTACH RUNNERS & CENTER BRACE (05) TO LEGS
TIGHTEN WITH BOLTS (B) AND NUTS (C)

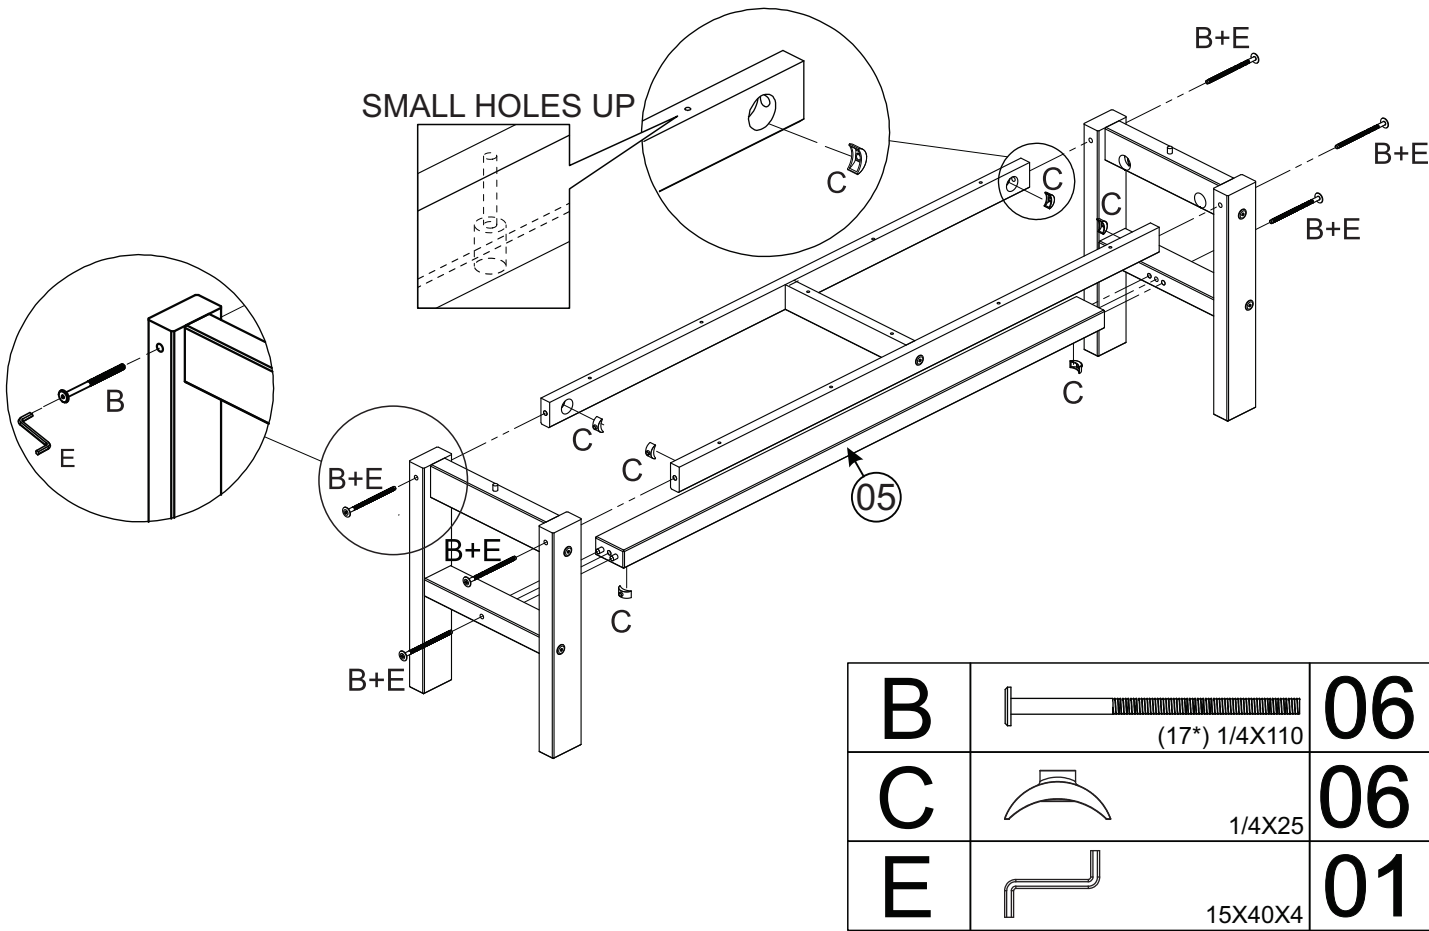

STEP 5

ATTACH BENCH BASE TO THE BENCH TOP (01)
TIGHTEN WITH SCREWS (G)

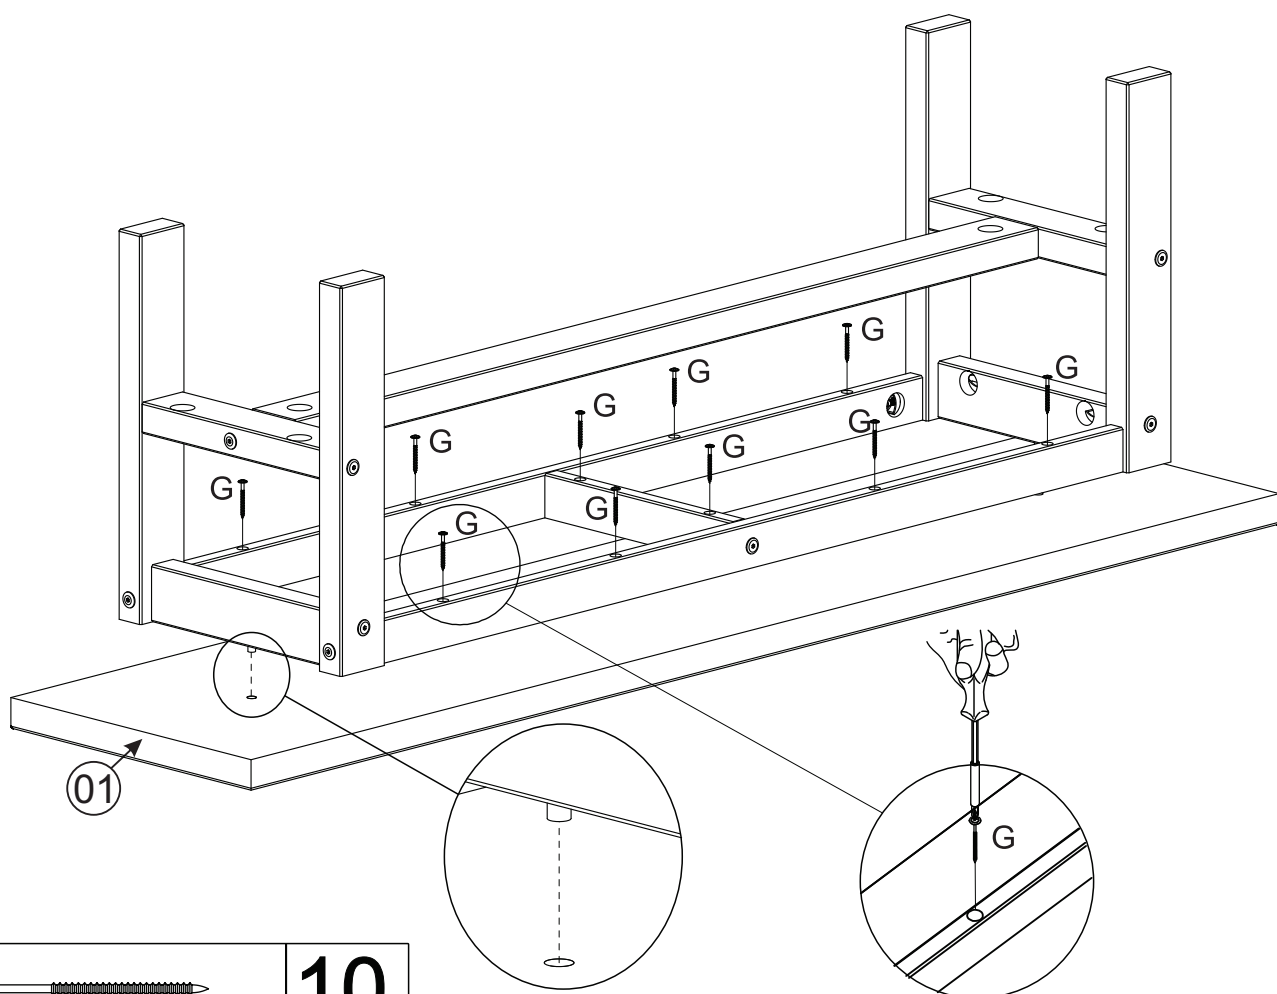

STEP 6

