

ROLLING FILE CABINET WITH GLASS TOP

ASSEMBLY INSTRUCTIONS

REV.7-OL-8832-0425



FRENCH



Scan QR to view the
manual in French

ARABIC















Scan QR to view the
manual in Arabic

Thank you for purchasing our product!










Do a quick inventory of all the parts and hardware listed below.




MAIN PARTS LIST
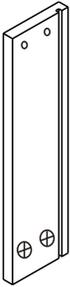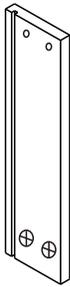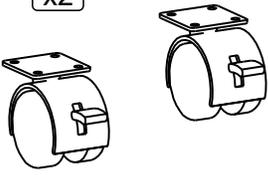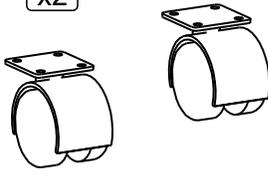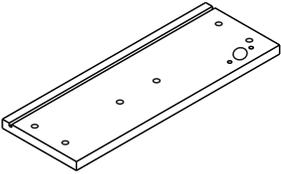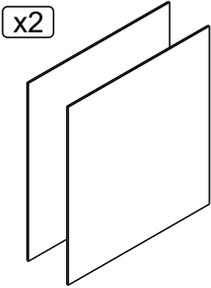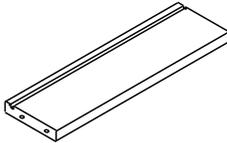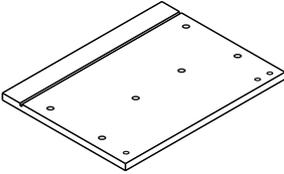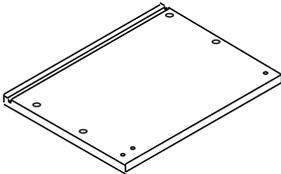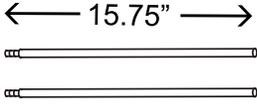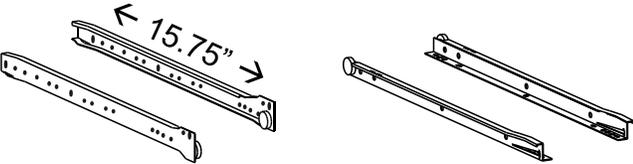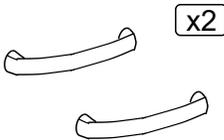
<p>#1 Top drawer left</p> 	<p>#2 Top drawer right</p> 	<p>#3L Locking casters (Front)</p> <p>x2</p> 	<p>#3N Non-Locking casters (Back)</p> <p>x2</p> 
<p>#4 Top drawer front</p> 	<p>#5 Drawer bottom</p> <p>x2</p> 	<p>#6 Top drawer back</p> 	<p>#7 Bottom drawer left</p> 
<p>#8 Bottom drawer right</p> 	<p>#9 Bottom drawer front</p> 	<p>#10 Bottom drawer back</p> 	<p>#11 File tubes</p> <p>← 15.75" →</p>  <p>x2</p>
<p>#12 Sliders</p> <p>x2 Sets of 4 pcs each set</p>  <p>← 15.75" →</p> <p>"Flat": 2 pcs per set, go inside the cabinet.</p> <p>"L shape": 2 pcs per set, go on the drawers.</p>		<p>#13 Handles</p> <p>x2</p> 	


MAIN PARTS LIST
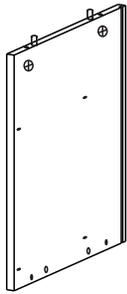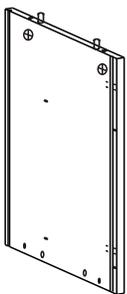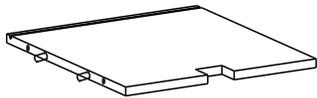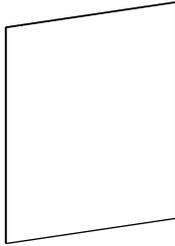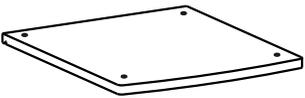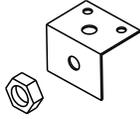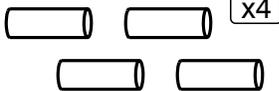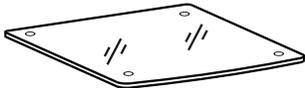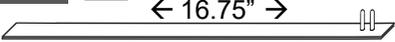
#14 Left side 	#15 Right side 	#16 Bottom base 	#17 Back board 
#18 Top wood 	#19 L bracket and Nut  x1 Set of 2 pcs	#20 Bottom drawer front wheel 	#21 Support tubes ←Ø1x2.75"→  x4
#22 Top Glass 	Locking system metal fittings #23A x2  #23B x2  #23C x2  #23D x1 Lock, x2 Keys  #23E x1 ← 16.75" →  #23F x2  #23G x1 		

MAIN PARTS LAYOUT (For reference)

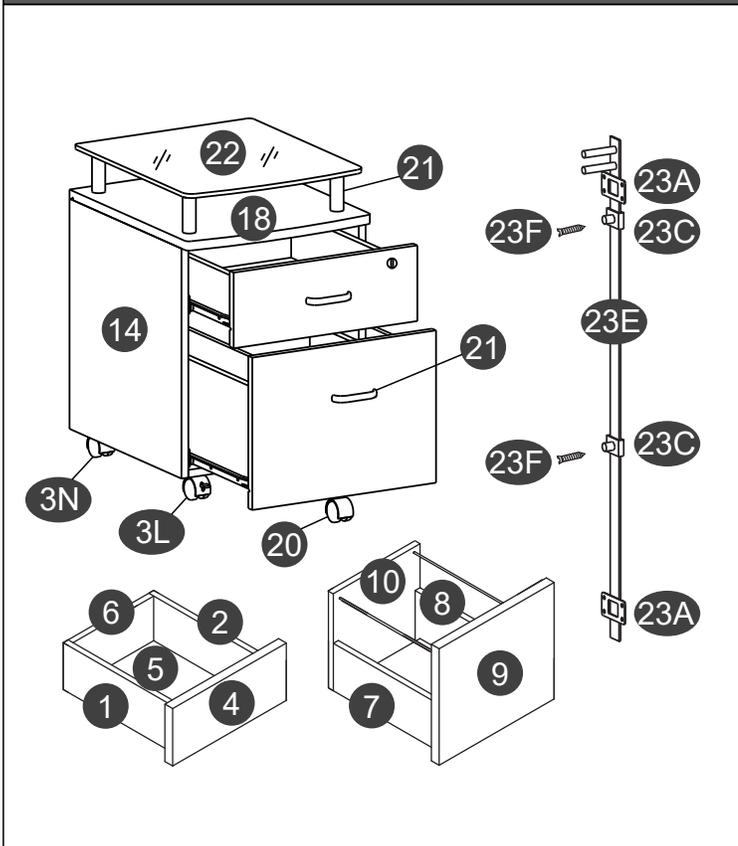


HARDWARE LIST

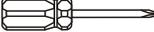Part #	QTY	SIZE/Description	Item
A	16	M6x40	 mm 10 20 30 40 50 60
B	8	M4x35	 mm 10 20 30 40 50 60
C	30	M3x15	 mm 10 20 30 40 50 60
D	4	M4x20	 mm 10 20 30 40 50 60
E	18	M4x14	 mm 10 20 30 40 50 60
F	1	M6x12	 mm 10 20 30 40 50 60
G	4	M6x20 (Headless)	 mm 10 20 30 40 50 60
H	4	M6x35	 mm 10 20 30 40 50 60
	1	Phillips screwdriver	
	1	Hex wrench (Spanner)	


THE ASSEMBLY STEPS START ON NEXT PAGE

CAM BOLT AND CAM LOCK TUTORIAL THE INSTRUCTIONS BELOW ARE NOT ACTUAL ASSEMBLY STEPS

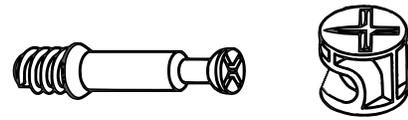


This unit uses cam bolts and locks (also known as mini fixes). If you are not familiar with this kind of hardware, the below is a tutorial that explains how to use them on the steps where they are required.


1. Screw the bolt into the indicated hole on the panel indicated in the assembly step.

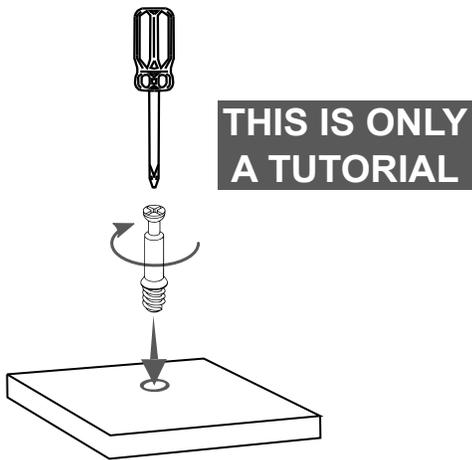


2. Join the other panel (with the big hole) to the panel with the bolt. If it comes with the cam locks already pre-installed, make sure to align them to receive the bolt's head (refer to point 3). There might be a very small gap between the panels which is normal.

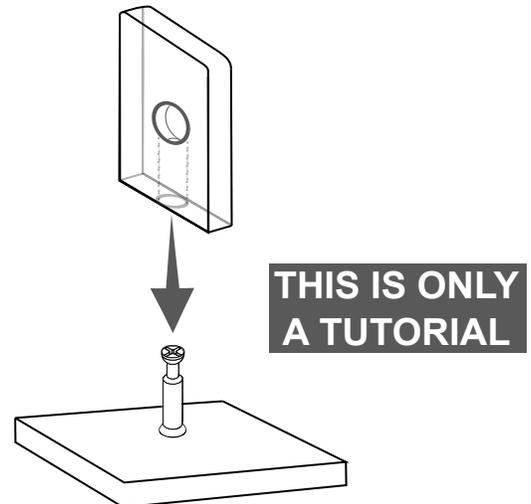

3. Insert the cam lock on the panel with the big hole making sure it goes aligned to receive the bolt's head.

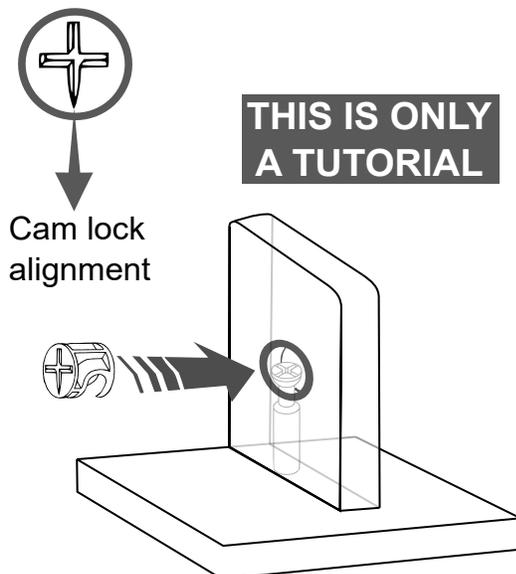

4. Use a Phillips screwdriver to turn the cam lock clockwise. This will lock the panels together and also will close any gaps.

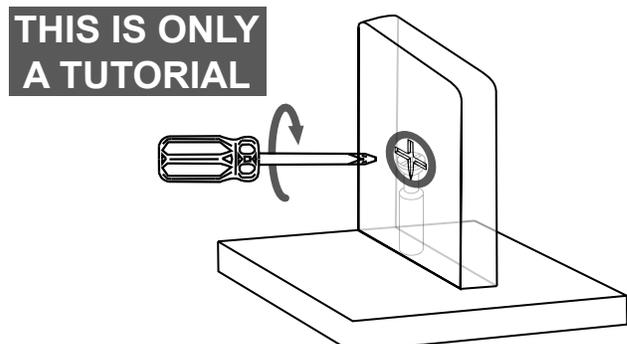

ASSEMBLY STEPS

WE RECOMMEND TO PLACE THE PIECES OVER BLANKETS OR TABLECLOTHS TO PROTECT THEIR FINISH DURING ASSEMBLY.

STEP 1


Hardware

E		16
	M4x14	Pcs



Tools (included)



BOTTOM surface:

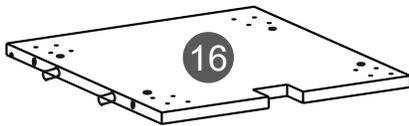

TOP surface:

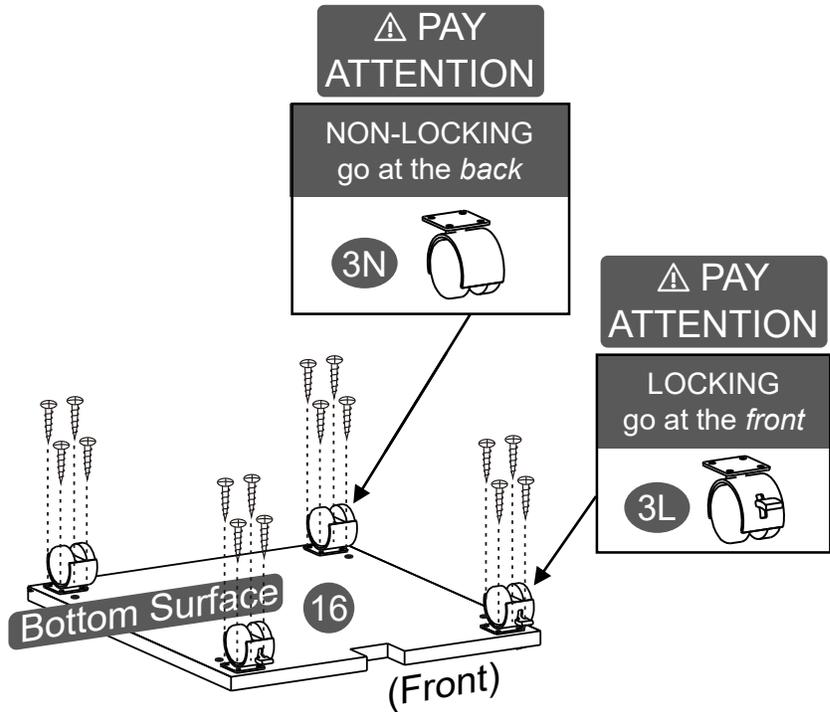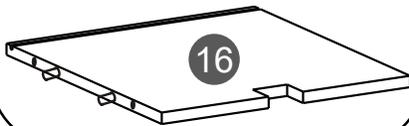


STEP 2

Tools (included)




FIRST: Insert #23A and #23C into #23E.

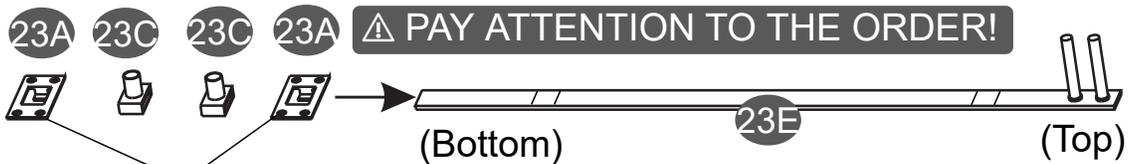

⚠ PAY ATTENTION: #23A flat side go UP!

THEN: Align #23C with the markings and secure them with #23F.

⚠ PAY ATTENTION:
If you don't align #23C within the markings, the locking system will not work!

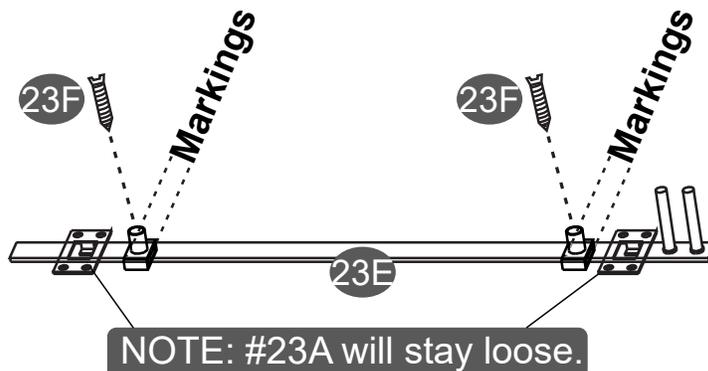


ASSEMBLY STEPS

STEP 3

Hardware


C		8
	M3x15	Pcs

Tools (included)

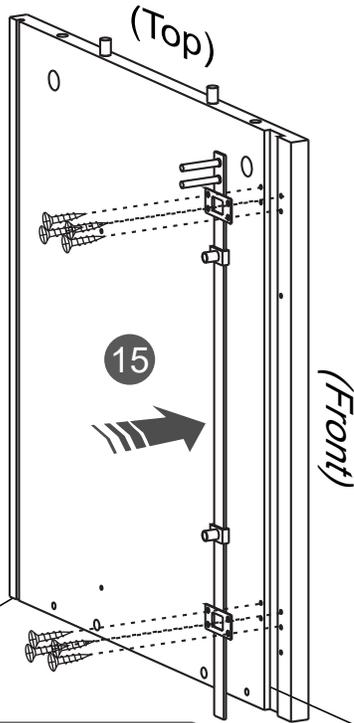

⚠ PAY ATTENTION:

- #23E goes with its rods at the top.
- #23E enters into the channel.

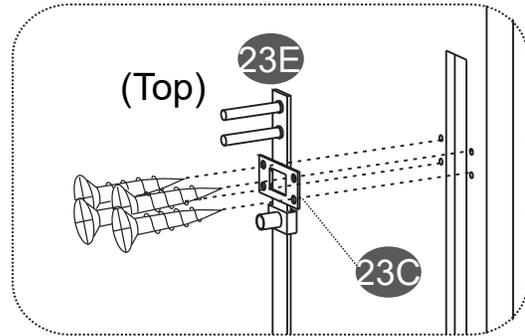


NOTE: Small channel at back.


NOTE: Big channel at front.

STEP 4

Group the sliders #12 into "Flats" and "L shaped"

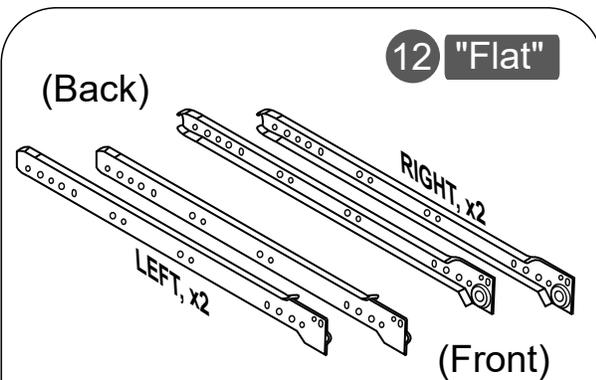

The "Flat" pieces will be used in the next step.

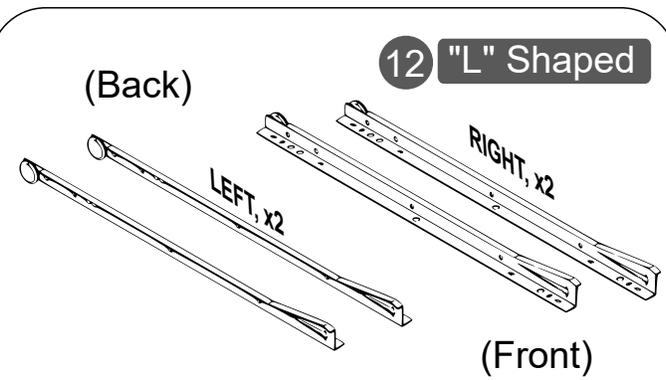

The "L" shaped pieces won't be used until later on, so please set them aside.


ASSEMBLY STEPS

STEP 5

Hardware




C  8
M3x15 Pcs

Tools (included)

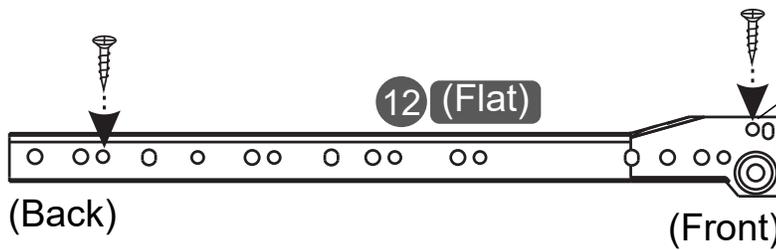

⚠ PAY ATTENTION!
Second hole from the front.

NOTE: #12 will be flushed with the edge of the panels.

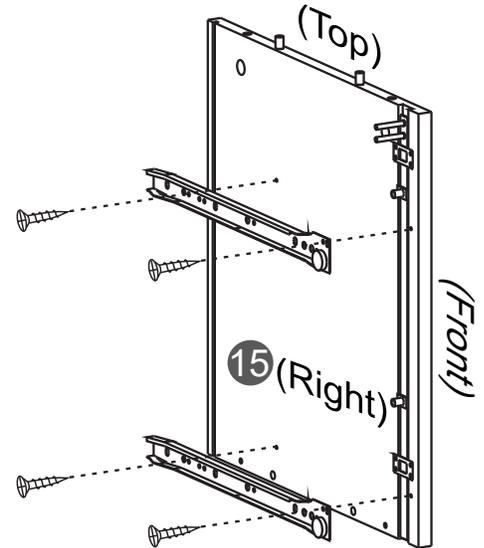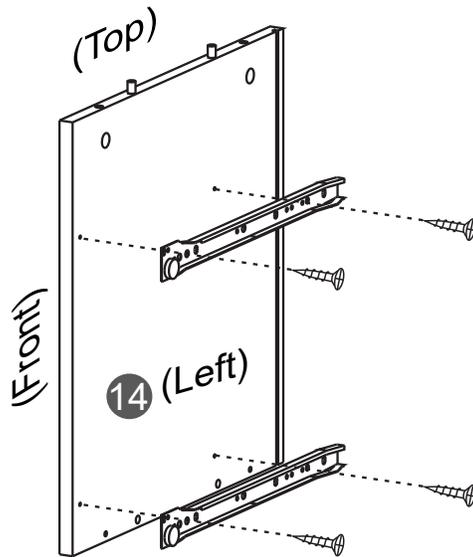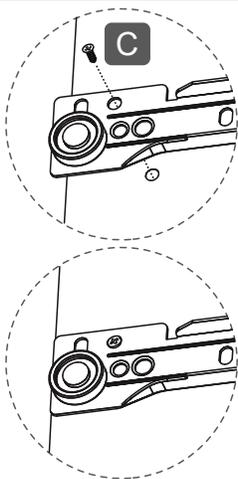


STEP 6


Hardware

A  4
M6x40 Pcs


Tools (included)

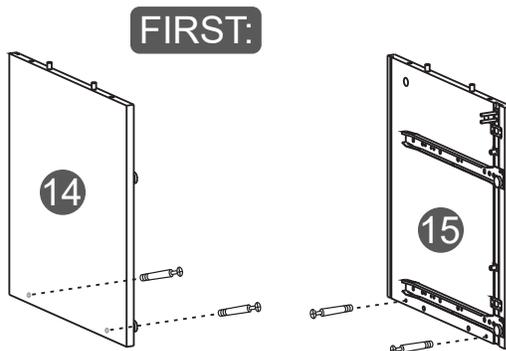

If you're unsure how to complete this step, please refer to the instructions on the Tutorial Page.

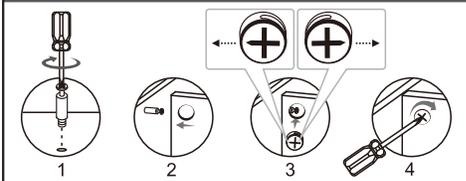


THEN:

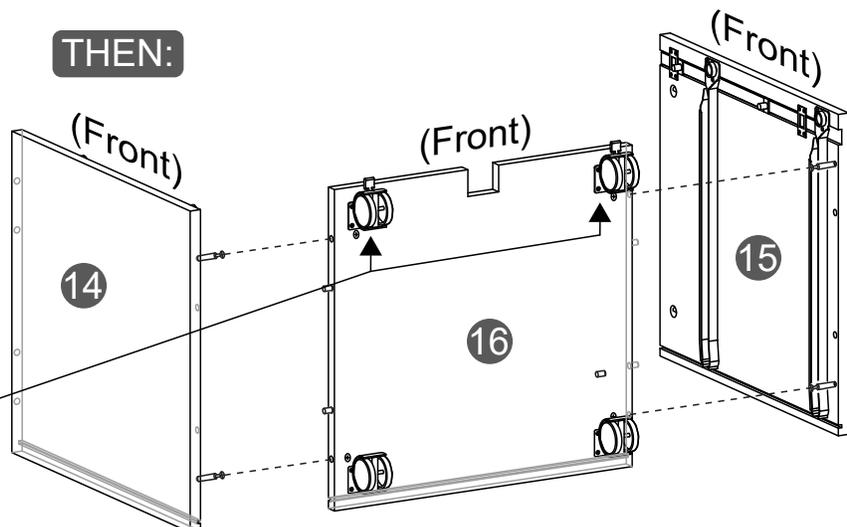

⚠ PAY ATTENTION!
The locking casters go at the FRONT. Review step 1 to make sure of it.

ASSEMBLY STEPS

STEP 7

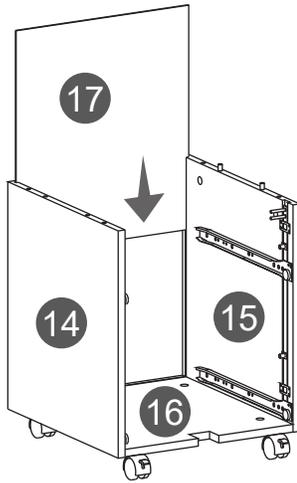





NOTE: #17 slides through #14 and #15 and into #16.

STEP 8

Hardware

A		4
	M6x40	Pcs

Tools (included)

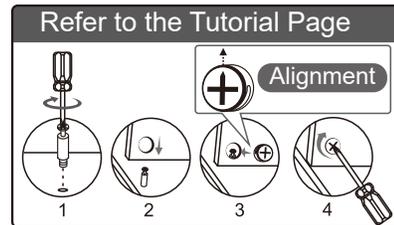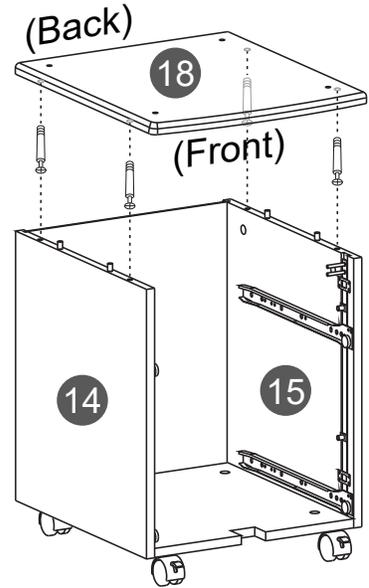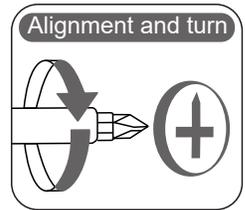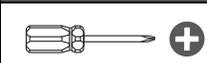


STEP 9

Hardware

G		4
	M6x20	Pcs

TIP: Screw first G into #21, then #21 into the discs of #22.

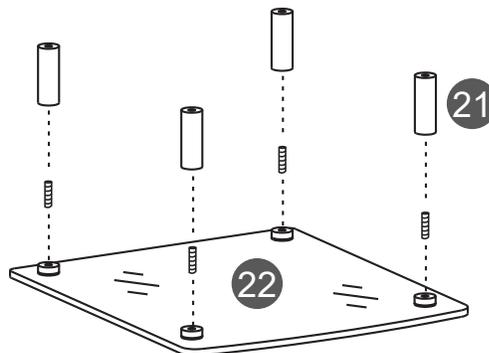

ASSEMBLY STEPS

STEP 10

Hardware


H		4
	M6x35	Pcs

Tools (included)



TIPS:

- Screw loosely to allow flexibility and ensure proper alignment.
- Tighten until after all the screws are in place.

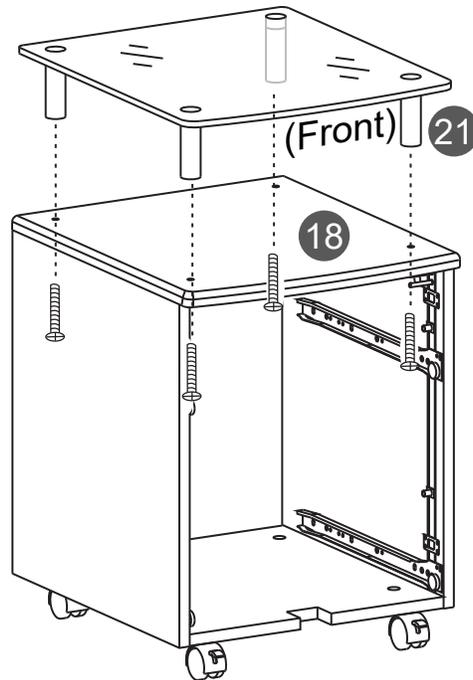

STEP 11



Hardware

C		4
	M3x15	Pcs

Tools (included)



⚠ PAY ATTENTION:
The "U" on #23B MUST face DOWN.

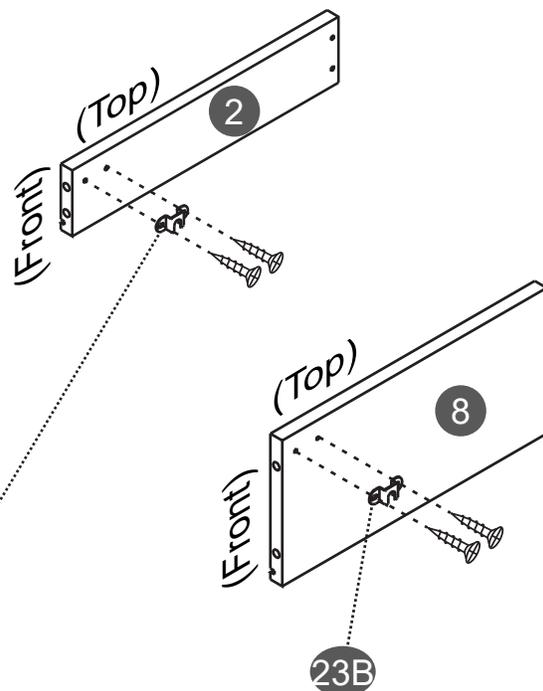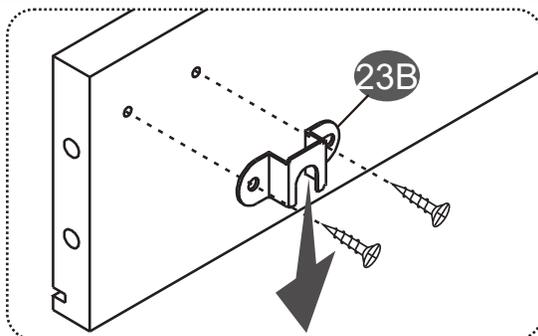


ASSEMBLY STEPS

STEP 12


Hardware

A  **4**
M6x40 Pcs


Tools (included)

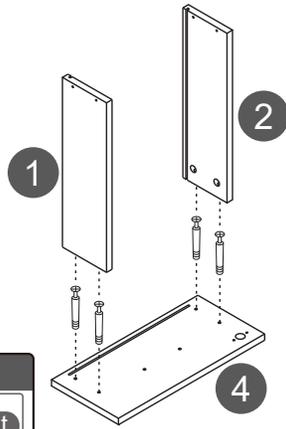

Refer to the Tutorial Page

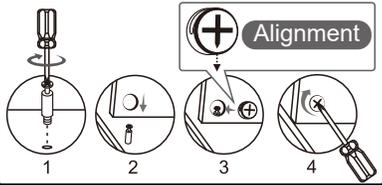

STEP 13

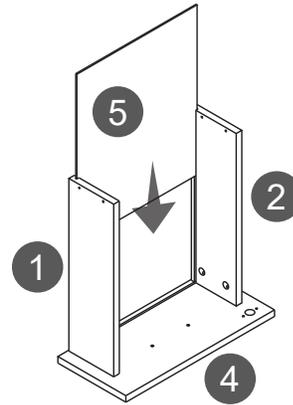


NOTE: #5 slides through #1 and #2 and into #4.

STEP 14

Hardware

B  **4**
M4x35 Pcs

Tools (included)

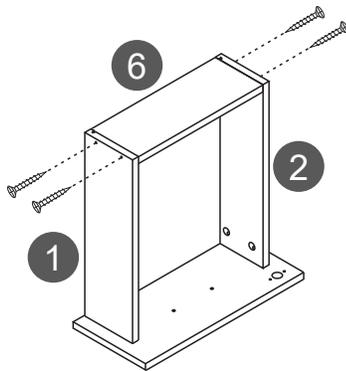


TIP: Screw as level as possible to avoid slanting and wood splitting.

STEP 15

Hardware

D  **2**
M4x20 Pcs

Tools (included)

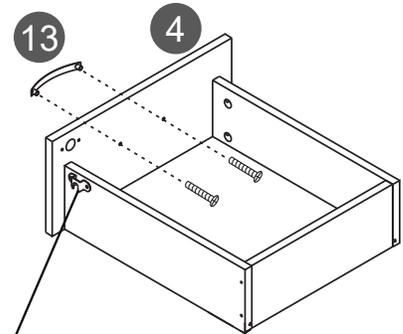

⚠ PAY ATTENTION!
Reminder: "U" must face down on #23B.

STEP 16

Hardware


C  **2**
M3x15 Pcs

Tools (included)






⚠ PAY ATTENTION! Test the lock with the keys and make sure the rod rotates from bottom to top in COUNTER-CLOCK motion.

CORRECT:
Bottom to top in counter-clock motion.

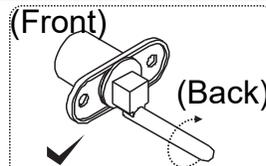

INCORRECT:
The rod might get stuck, the drawer might lock unable to open.

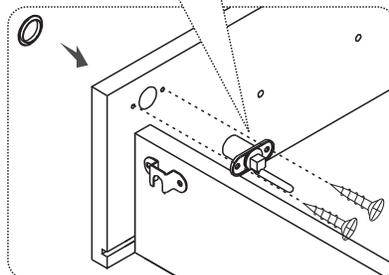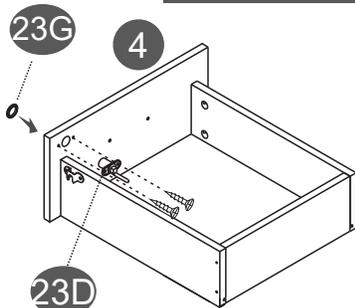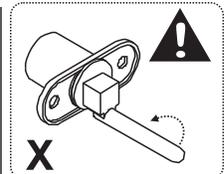


ASSEMBLY STEPS

STEP 17

Hardware


C		4
	M3x15	Pcs

Tools (included)

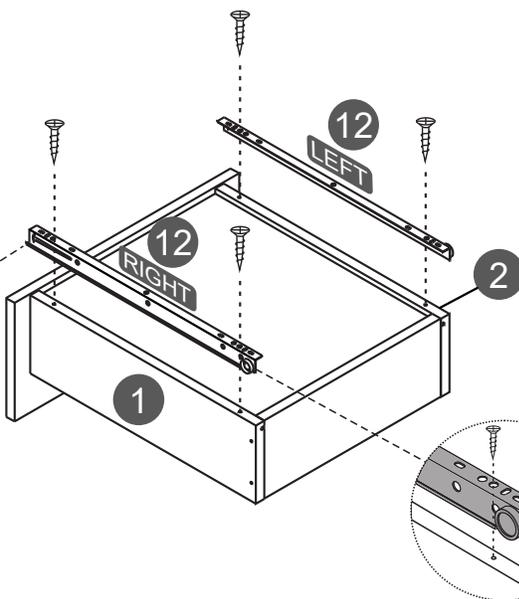


⚠ PAY ATTENTION!

When finished, the sliders look like this:

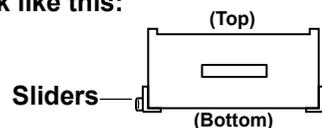

If you install as below, the drawer raises 1" and won't fit in the unit.

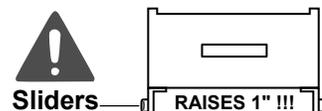

⚠ PAY ATTENTION:
Wheel towards the back.


STEP 18

Hardware

E		2
	M4x14	Pcs



F		1
	M6x12	Pc

Tools (included)

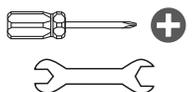

FIRST: Attach #19 to #9 with E and F.

THEN: Attach #20 to #19 with the nut #19.

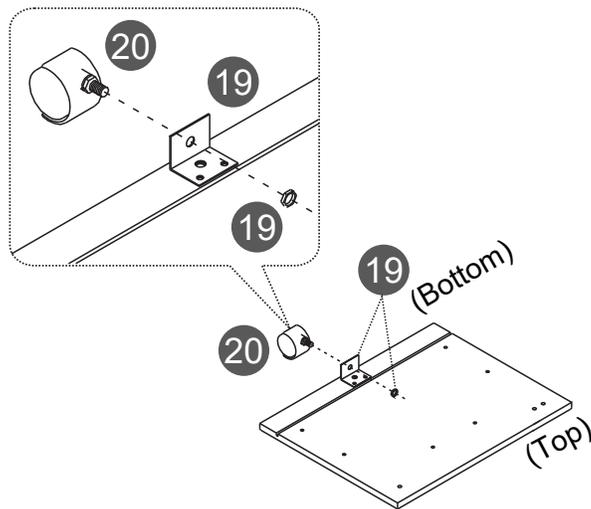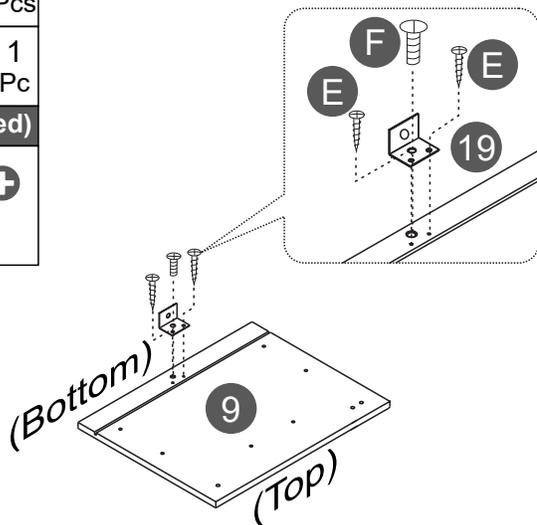


STEP 19


Hardware

A		4
	M6x40	Pcs

Tools (included)

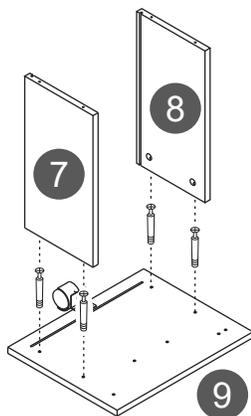


Refer to the Tutorial Page

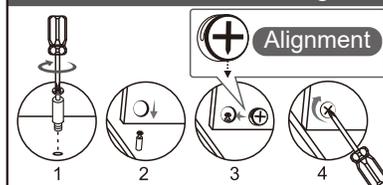

ASSEMBLY STEPS

STEP 20

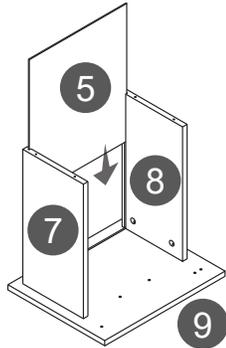


NOTE: #5 slides through #7 and #8 and into #9.

STEP 21

Hardware


B		4
	M4x35	Pcs

Tools (included)

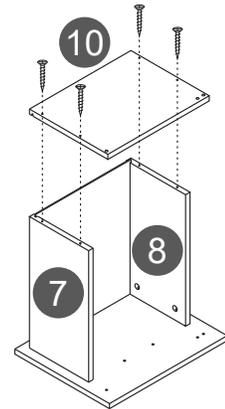

TIP: Screw as straight as possible to avoid slanting and wood splitting.

STEP 22

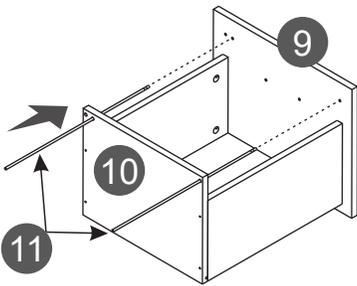

NOTE: #11 go through #10 and into #9.

⚠ PAY ATTENTION!

Holes to use for **LETTER** files (U.S.):


Holes to use for **A4** files (Intl):

STEP 23

Hardware

D		2
	M4x20	Pcs

Tools (included)

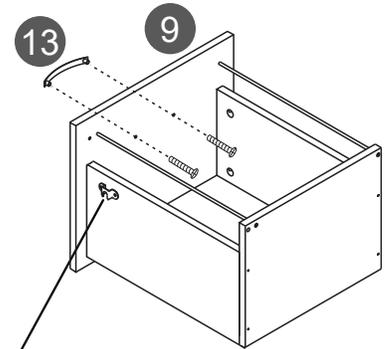


⚠ PAY ATTENTION!
Reminder: "U" must face down on #23B.

STEP 24

Hardware

C		4
	M3x15	Pcs


Tools (included)

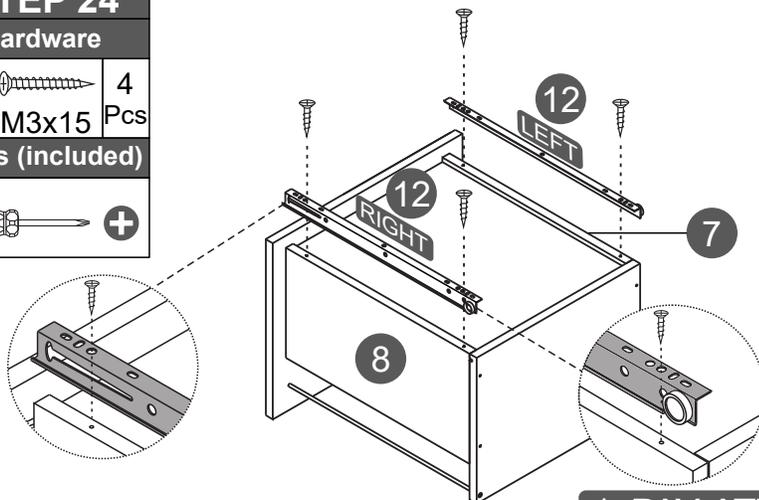


⚠ PAY ATTENTION:
Wheel towards the back.

⚠ PAY ATTENTION!

When finished, the sliders look like this:

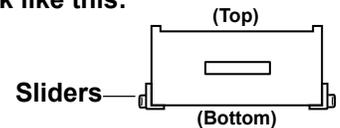



If you install as below, the drawer raises 1" and won't fit in the unit.

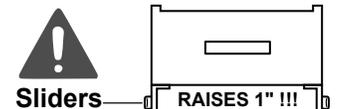

ASSEMBLY STEPS


STEP 25

FINALLY: Insert the drawers into the unit, the bottom drawer **FIRST**.

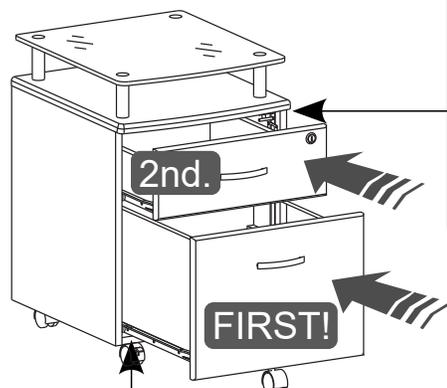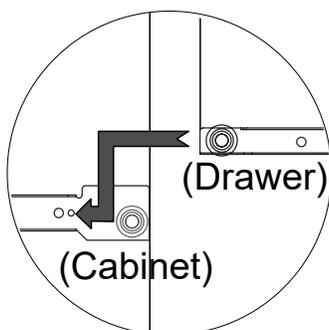

⚠️ PAY ATTENTION:

- Insert the top drawer at an angle facing **DOWN**.
- If the rods from the bar 23E block the drawer, carefully lift the bar a little bit to allow the drawer to pass through.

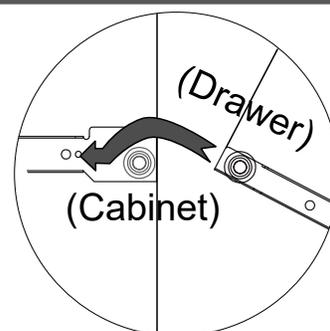


⚠️ PAY ATTENTION:

The wheel from the drawer slides in the middle of the slider inside the cabinet.

⚠️ PAY ATTENTION:

If the drawers don't close completely, remove them and tighten the slider screws inside as flushed as possible.

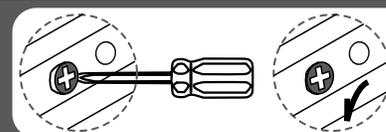

TROUBLESHOOTING THE LOCKING SYSTEM

Please note that the drawers will lock **only** if both are completely closed.


If the drawers don't seem to lock properly, review the assembly of steps **2, 3, 5, 11, 16, 17** and **24**.

If the keys are lost but the drawers are unlocked, replace them with a new set of lock and keys.

If the drawers are locked and the keys no longer work or got lost, please contact the Support Team for further assistance resolving this problem; do not attempt to force or pry open the drawers to avoid accidental damages.

WARNINGS


Not paying attention to the following warnings could result in injuries.

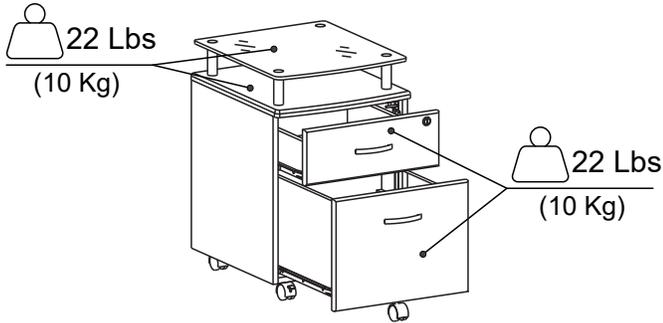


- Do not sit, climb or stand on the Unit.
- Do not allow children to play with the unit.



- Make sure to unlock the front wheels before rolling the unit away, and secure the objects that are on the the top.

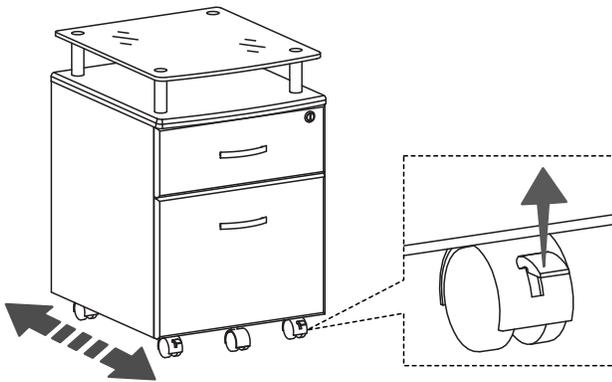

The top is made of safety tempered glass. In the event of accidental breakage, do not touch the broken glass with bare hands, and keep children and pets at a safe distance. Before cleaning up the area, take photos of the damage and contact the Support Team for help or a possible replacement.

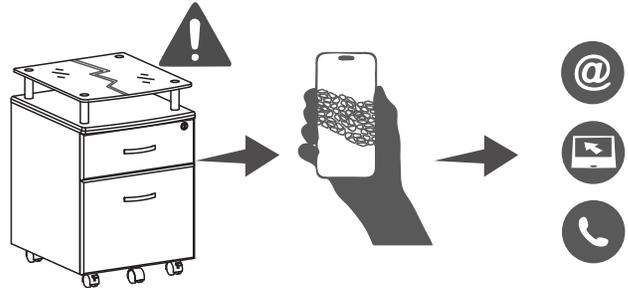


CARE AND MAINTENANCE

- Clean with a cloth lightly damped in a solution of mild soap and water.
- Do not use solvents or abrasive materials.



Do not expose to direct sunlight or extreme enviromental conditions.

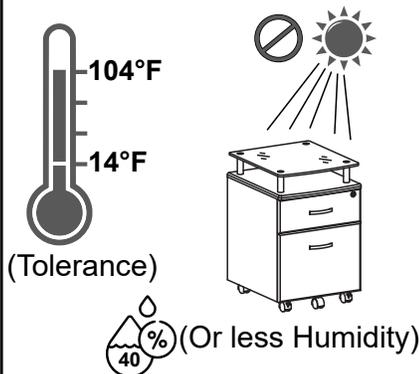

Inspect and re-tighten any loose screws every 4 months.

