

⚠ WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tipover.
- Monitor and carefully control the assembly components. These include small parts and hardware that may present a choking hazard to small children. Bob's furniture should be assembled only by responsible adults and children should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as prescribed in these instructions to anchor furniture to wall. Proper use of the wall mounting hardware can significantly reduce the potential for furniture tip-over and crushing injuries.


ASSEMBLY INSTRUCTION


30" Vanity

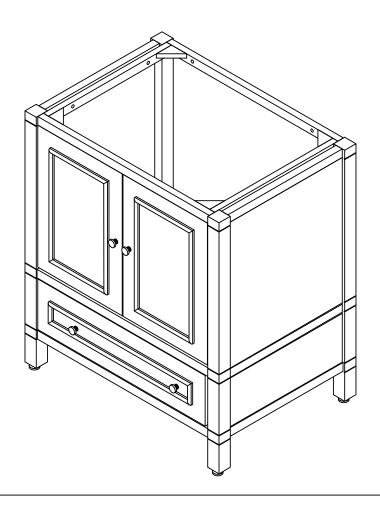


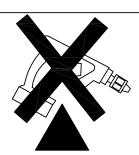


- . Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
- . Please assemble on a clean soft surface to avoid damage.

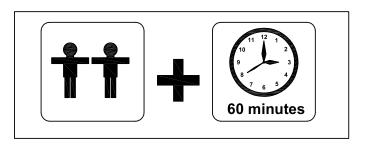

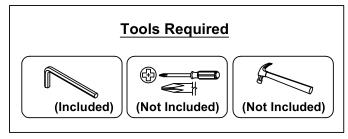

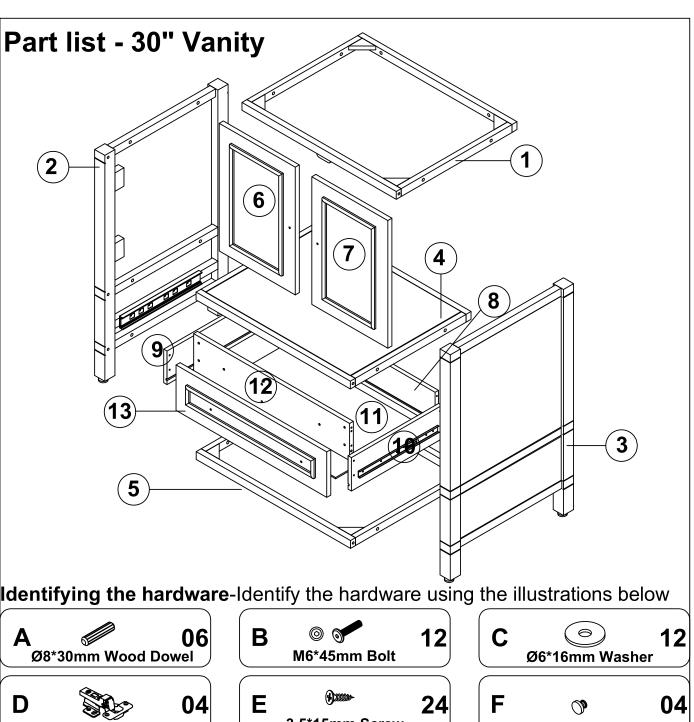


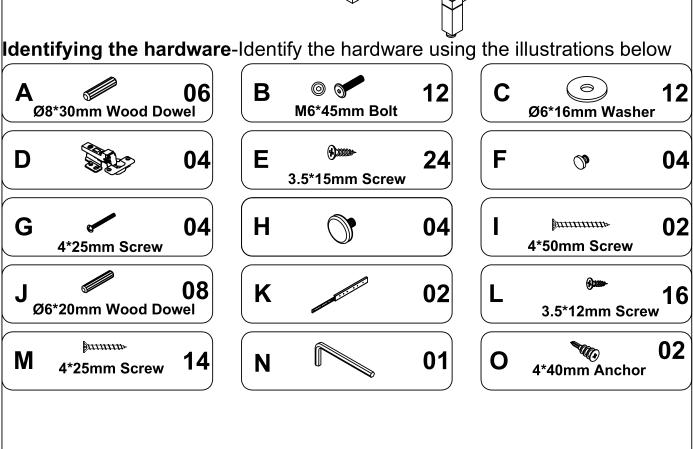



AVAN30WHBB 30"VANITY


2 of 9


5/6/2022

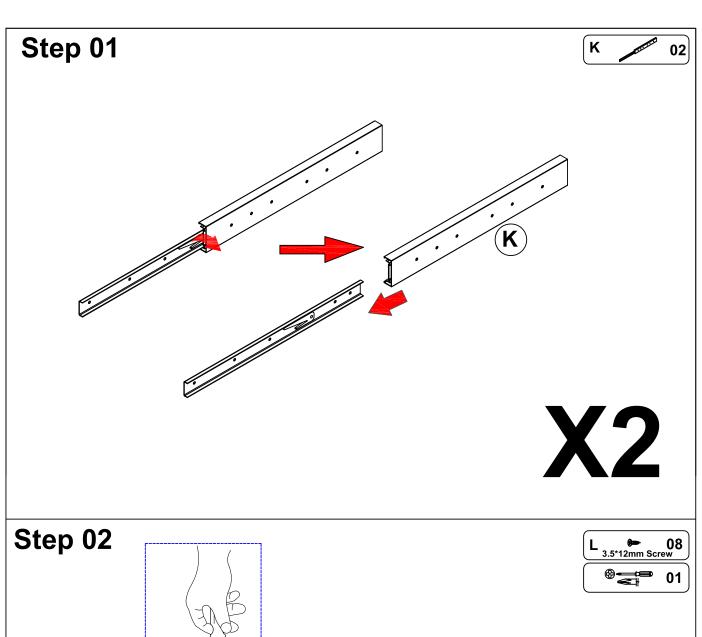


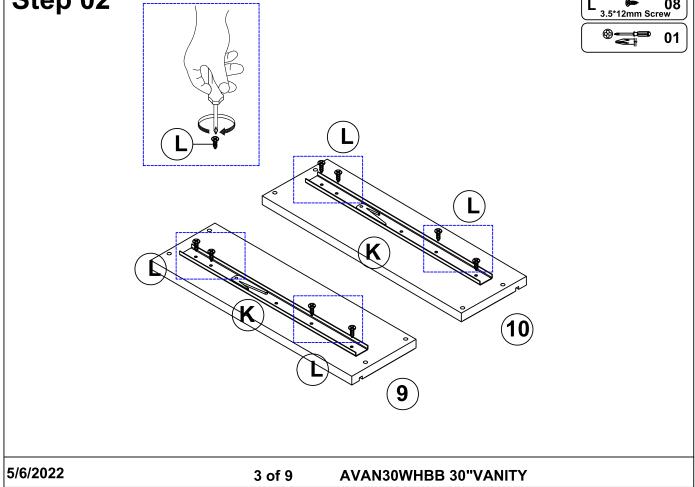


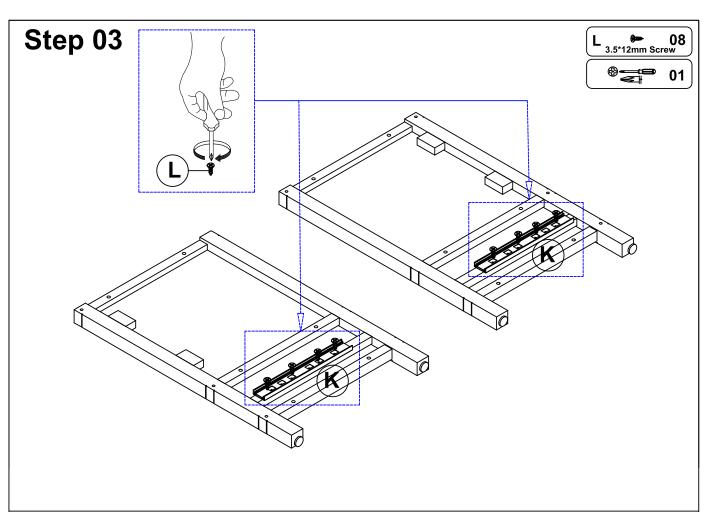


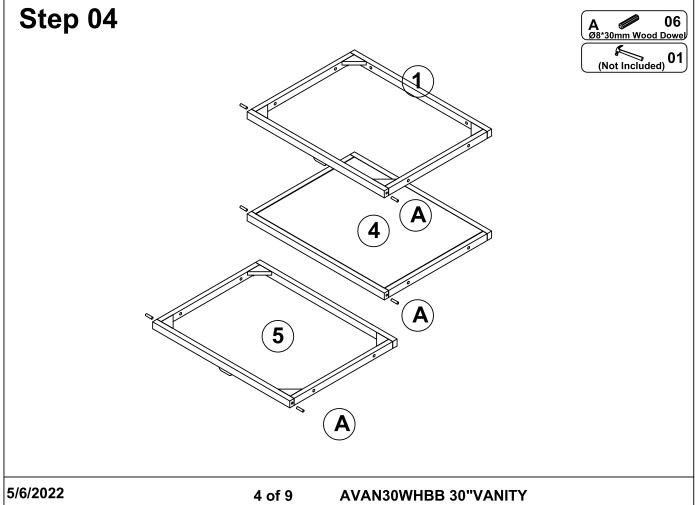


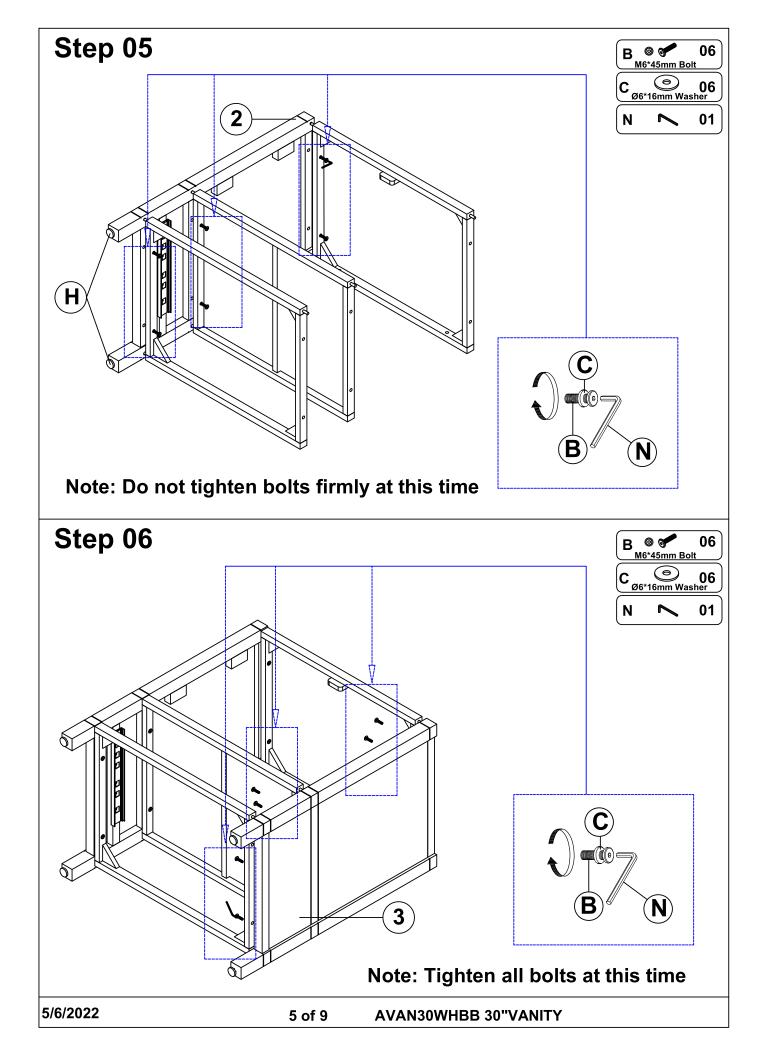

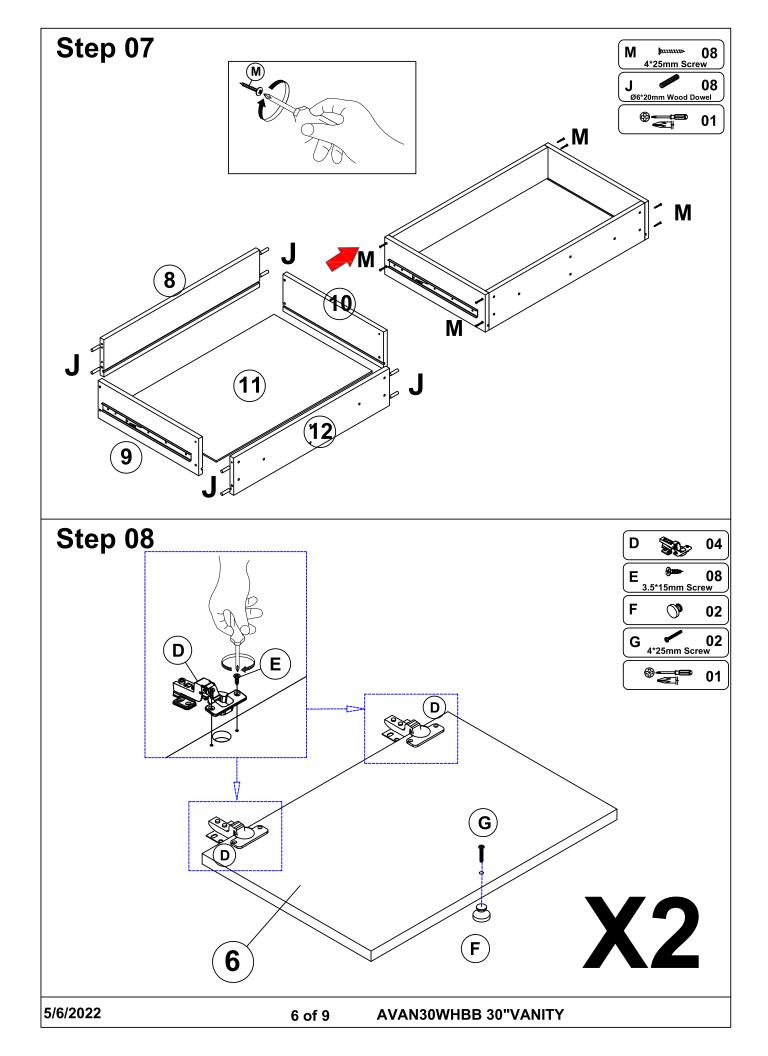

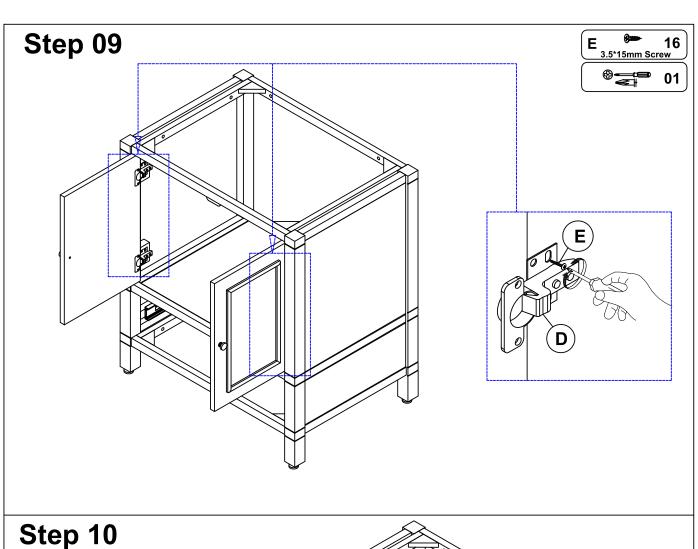

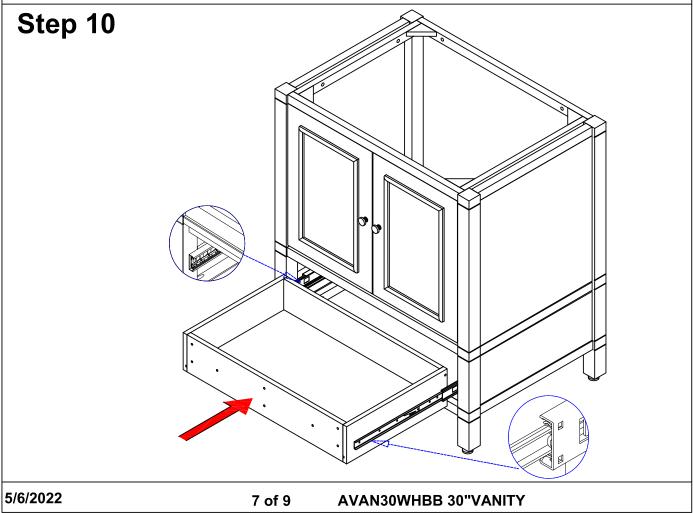

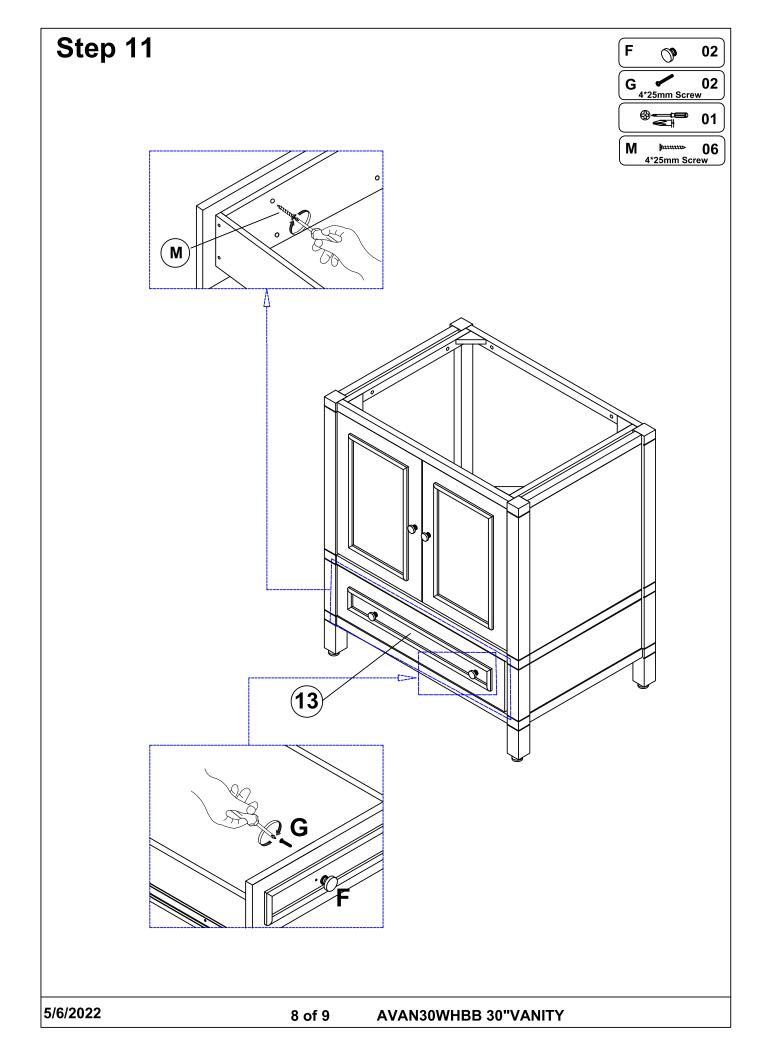

Step 12

. Mark the location of the Studs in the wall on the stretcher rail.



- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (I) Make sure the screws align with the Stud in the wall.
- . If hole locations do not align with stud in wall, install the EZ Anchor(J) in to drywall and then screwing the EZ Anchor in to the drywall.

