
## BOB'S FURNITURE

## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION PRESTIGE CHAIRSIDE TABLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Parts key				Hardware kit #1887-7P01				
No	Code	Qty	Description	No		Description		Qty
1	1887-7P02	4 pcs	Legs		0	Flat washer	M8 x 18	16 pcs
2	1887-7P52	1 pc	Top Frame	] А В	9			
3	1887-7P09	1 pc	Glass Insert			Lock washer	M8	16 pcs
4	1887-7P54	1 pc	Storage Box	С		Bolt	M6 x 60	8 pcs
5	1887-7P05	1 pc	Complete Drawer	D		Bolt	M6 x 15	8 pcs
6	1887P04	2 sets	Knob w/Screws	E		Allen Key	K4	1 pc
7	188705A	1 pc	Drawer Stop		* mmo	Screw	Ø4 x 15	· I
8	1887-7P06	2 pcs	Drawer Glide	F	9		2.7	8 pcs
9	1887P01F	4 pcs	Floor Glide	G		Iron patte		4 pcs
10	1887-7P01E	1 set	Electric outlet					

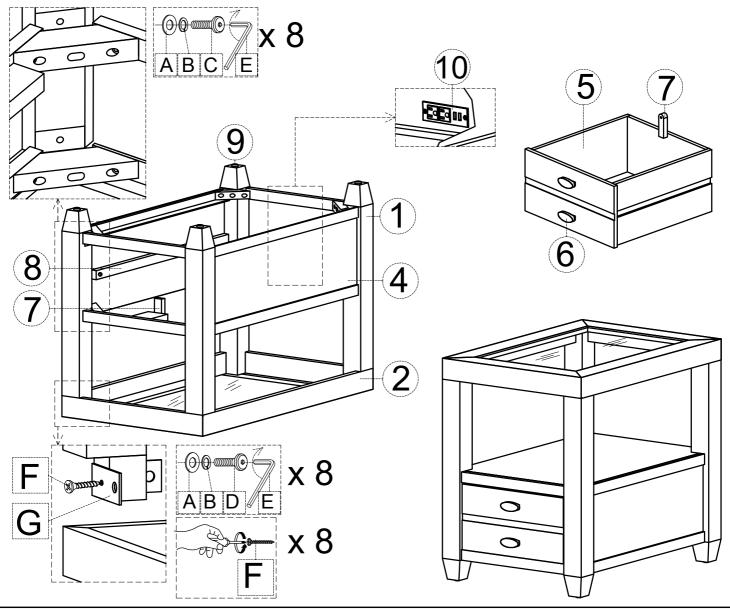

**MADE IN VIET NAM** 

## WARNING: To avoid serious personal injury:

- Carefully and strictly follow assembly instructions. Improper assembly of furniture can result in structural failure, instability of the product, or tip-over.
- Monitor and carefully control the assembly components. These include small
  parts and hardware that may present a choking hazard to small children.
  Bob's furniture should be assembled only by responsible adults and children
  should not be involved in the assembly process.
- Where provided, wall mounting hardware should always be used as
  prescribed in these instructions to anchor furniture to wall. Proper use of the
  wall mounting hardware can significantly reduce the potential for furniture
  tip-over and crushing injuries.